



Manuals.plus /

› **Wellspeed /**

› Wellspeed 72 Inch Ceiling Fan with Lights and Remote (Model DC1154-8B/72) Instruction Manual

Wellspeed DC1154-8B/72

Wellspeed 72 Inch Ceiling Fan with Lights and Remote

MODEL: DC1154-8B/72 - INSTRUCTION MANUAL

Important Safety Information

Read all instructions carefully before beginning installation. Failure to follow these instructions could result in electric shock, fire, or serious personal injury. Ensure all wiring is in accordance with national and local electrical codes.

- Disconnect power at the circuit breaker before installation or servicing.
- All electrical connections must be made by a qualified electrician.
- The mounting structure must be capable of supporting the fan's weight (approximately 27.7 pounds).
- Do not operate the fan with damaged blades.
- Ensure proper clearance between fan blades and any obstacles.

Package Contents

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact Wellspeed customer service.



Image: Overview of all included components, including fan motor, blades, downrods, remote control, and hardware.

- Fan Motor Assembly
- Fan Blades (8x)
- Blade Brackets (8x)
- Downrods (6-inch, 12-inch, 24-inch options)
- Canopy and Mounting Bracket
- LED Light Kit
- Remote Control with Wall Mount
- Hardware Pack (screws, washers, wire nuts)
- Instruction Manual

Setup and Installation

Follow these steps for proper assembly and installation of your Wellsped ceiling fan. A detailed installation video is available for visual guidance.

1. Blade Assembly

1. Attach each fan blade to a blade bracket using the provided screws and washers. Ensure screws are tightened securely.

2 Colors Available

Choose the right color according to the style of your home



Image: Assembly of fan blade to its mounting bracket.

2. Attach the assembled blade and bracket to the fan motor housing. Repeat for all 8 blades.

Max Airflow
8563 CFM
Average Airflow 6484 CFM

6 Speeds
1 2 3 4 5 6



1H/3H/6H
Intelligent Timing

Image: Securing a fan blade assembly to the motor unit.

2. LED Light Kit Installation

1. Connect the LED light panel wires to the corresponding wires from the fan motor.
2. Secure the LED light panel to the bottom of the fan motor housing with screws.
3. Attach the light diffuser cover by twisting it into place.

ADVANTAGES OF OUR **FULL COPPER DC** MOTORS

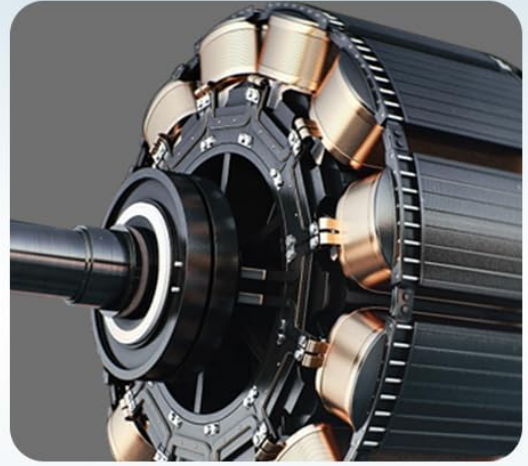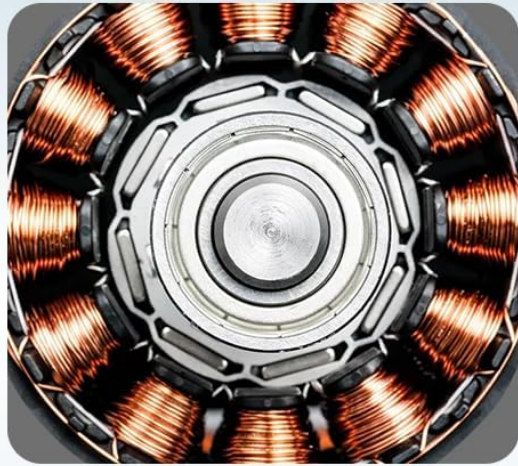

Ours
Pure Copper Motor

Others
Aluminum Motor

Resistivity

Low energy consumption, more power-saving

1.678 $\mu\Omega\cdot m$



2.654 $\mu\Omega\cdot m$



Heat output

Highly safe, suitable for long-term use

1X



2X



Lifespan

Saving you the cost of repurchasing or reinstalling

20000 Hours



1500 Hours



Image: Installation of the LED light panel and diffuser.

3. Downrod and Canopy Assembly

1. Select the appropriate downrod length (6, 12, or 24 inches) for your ceiling height.
2. Thread the fan wires and safety cable through the chosen downrod.
3. Secure the downrod to the fan motor assembly using the provided pin and screws.
4. Slide the canopy over the downrod.

No Flicker



Image: Downrod options and ceiling mounting types.

4. Mounting and Wiring

1. Install the mounting bracket to your ceiling junction box. Ensure it is securely fastened to a structural beam.
2. Hang the fan assembly onto the mounting bracket.
3. Connect the electrical wires (Live, Neutral, Ground) from the fan to your household wiring using wire nuts. Connect the safety cable to the mounting bracket.

4. Tuck all wires neatly into the junction box and slide the canopy up to cover the wiring and mounting bracket. Secure the canopy with screws.

Expand Your Lighting Options

2300 Lumens

Three Color Temperature

6500K 4200K 3000K

Smooth Dimming

20% 100%

Image: Electrical wiring connections for the ceiling fan.

Your browser does not support the video tag.

Video: Detailed installation guide for the Wellsped large ceiling fan. This video demonstrates the unboxing, blade assembly, light kit installation, downrod attachment, and final wiring and mounting steps.

Operating Instructions

Your Wellsped ceiling fan is controlled by the included remote. Ensure the remote has 2 AAA batteries installed (included).

Remote Control Functions:

Recommended for Large Rooms



72 inch

Three Switchable Downrods

6 inch

12 inch

24 inch

Room Size

20 x 20FT - 40 x 40FT

Flat Ceiling



Sloped Ceiling



Image: Remote control layout and function guide.

- **Fan ON/OFF:** Press the power button to turn the fan on or off.
- **Fan Speed (1-6):** Use buttons 1-6 to select desired fan speed. 1 is the lowest, 6 is the highest.
- **Light ON/OFF:** Press the light bulb button to turn the LED light on or off.
- **Color Temperature (WW/NW/DW):** Cycle through Warm White (3000K), Natural White (4000K), and Daylight White

(6500K) settings.

- **Brightness (+/-):** Adjust the light brightness from 20% to 100%.
- **Forward/Reverse:** Change the direction of fan rotation for summer (downward airflow) or winter (upward airflow) modes.
- **Timer (1H/3H/6H):** Set the fan to turn off automatically after 1, 3, or 6 hours.

Airflow Modes:



Image: Summer and Winter airflow modes explained.

- **Summer Mode (Downward Airflow):** Blades rotate counter-clockwise, pushing cool air down. Ideal for cooling.
- **Winter Mode (Upward Airflow):** Blades rotate clockwise, drawing cool air up and circulating warm air down the walls. Ideal for distributing heat.

Maintenance

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Use a soft, damp cloth to clean the fan blades and motor housing. Do not use abrasive cleaners or solvents.
- **Blade Tightness:** Periodically check all blade screws for tightness. Loose screws can cause noise and wobble.
- **Light Source:** The integrated LED light source is designed for long life. If replacement is needed, contact Wellsped customer service for compatible parts.

Troubleshooting

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; loose wiring; remote control issue.	Check circuit breaker. Ensure all wire connections are secure. Replace remote batteries.
Fan wobbles	Loose blade screws; unbalanced blades; loose mounting bracket.	Tighten all blade screws. Ensure blades are installed correctly. Check mounting bracket for secure installation.
Light does not work	Loose wire connection; LED panel failure; remote control issue.	Check light kit wiring connections. Replace remote batteries. Contact customer service if LED panel is faulty.
Noisy operation	Loose screws; motor issue; blades hitting an obstruction.	Check and tighten all screws. Ensure no obstructions are near the blades. If noise persists, contact customer service.

Specifications

- **Model Name:** DC1154-8B/72
- **Size:** 72 inch
- **Motor Type:** Pure Copper DC Motor
- **Air Flow Capacity:** 6900 Cubic Feet Per Minute (CFM)
- **Speeds:** 6 (Remote Controlled)
- **Light Source:** 18W LED, Dimmable (20%-100%)
- **Color Temperatures:** 3000K (Warm White), 4000K (Natural White), 6500K (Daylight White)
- **Control Method:** Remote Control
- **Indoor/Outdoor Usage:** Indoor (Suitable for covered outdoor patios, avoid direct rain exposure)
- **Item Weight:** 27.7 pounds
- **Product Dimensions:** 62"D x 62"W x 18.9"H (Note: 72-inch fan diameter, dimensions might refer to a specific configuration or packaging)
- **Batteries:** 2 AAA batteries required for remote (included)

Warranty and Support

Wellsped offers a comprehensive warranty for its products. If you experience a malfunction of accessories during use, such as lampshades, LED panels, or remote controls, Wellsped will replace your parts in brand new condition without any cost.

For further assistance, troubleshooting, or warranty claims, please contact Wellsped customer service. You can find contact information on the official Wellsped website or through your purchase platform.

Visit the official Wellsped Store for more information: [Wellspeed Store](#)