

[Manuals.plus](#) /

› [Gaiatop](#) /

› Gaiatop AF-02 Desk Fan User Manual

Gaiatop AF-02

Gaiatop AF-02 Desk Fan User Manual

Model: AF-02

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the fan and retain this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not insert fingers or any objects into the fan grille.
- Do not use the fan near water or in high humidity environments.
- Keep the fan away from heat sources, direct sunlight, and flammable materials.
- Ensure the power adapter (not included) meets the fan's voltage requirements (5V).
- Do not attempt to disassemble or repair the fan yourself. Contact customer support for assistance.
- Keep out of reach of children.
- Unplug the fan when not in use or before cleaning.

2. PACKAGE CONTENTS

- 1 x Gaiatop AF-02 Desk Fan
- 1 x USB-A to USB-C Charging Cable (4.9 feet)
- 1 x User Manual

3. PRODUCT OVERVIEW

The Gaiatop AF-02 Desk Fan is a compact, rechargeable fan designed for personal cooling. It features touch controls, an LED display, and adjustable tilt for versatile use.



Image: Gaiatop AF-02 Desk Fan, black color, showing its compact design.

Key Features:

- **Touch Control & LED Display:** Intuitive touch interface for power and speed adjustments, with an LED screen showing battery level and current speed.
- **5 Speed Settings:** Choose from 5 fan speeds for personalized airflow.
- **Ultra-Quiet Operation:** Equipped with a brushless motor, operating as low as 30dB.
- **90° Adjustable Tilt:** Manually adjust the fan head vertically up to 90 degrees.

- **USB-C Rechargeable:** Built-in battery provides portable use, rechargeable via USB-C.
- **Dual-Stage Turbo Cooling:** Features 7 curved blades for efficient air circulation.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the fan. Connect the provided USB-A to USB-C cable to the fan's USB-C port and a compatible USB power adapter (not included) or a computer's USB port. The LED display will show charging status.



Image: Close-up of the fan's USB-C charging port with the cable connected, indicating charging.

4.2 Placement

The fan can be placed on a desktop or mounted on a wall. Ensure it is on a stable, flat surface for desktop use. For wall mounting, use appropriate screws (not included) with the designated mounting holes on the fan's base.

Smart Touch LED Display



Press & Hold 2S
Power On/Off



Press Briefly
Switch Speed



Green Light Flashing
Needs Charging



Image: The fan shown in both desktop and wall-mounted configurations, highlighting its versatility.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

To turn the fan **ON** or **OFF**, press and hold the touch-sensitive power button (located below the LED display) for approximately 2 seconds.

5.2 Adjusting Fan Speed

Once the fan is on, tap the touch-sensitive power button to cycle through the 5 available speed settings. The LED display will show the current speed level (e.g., 01, 25, 50, 75, 100, representing speed levels).

Wall & Desk Rechargeable Fan: Flexible for Every Space



Set it, tilt it, chill it.



Mount it, aim it, feel it.

Image: Detailed view of the fan's touch control panel and LED display, showing power and speed indicators.

5.3 Adjusting Tilt Angle

Manually adjust the fan head to your desired vertical angle. The fan supports up to a 90-degree tilt.

Dual-Stage Acceleration Airflow Boosting Fan

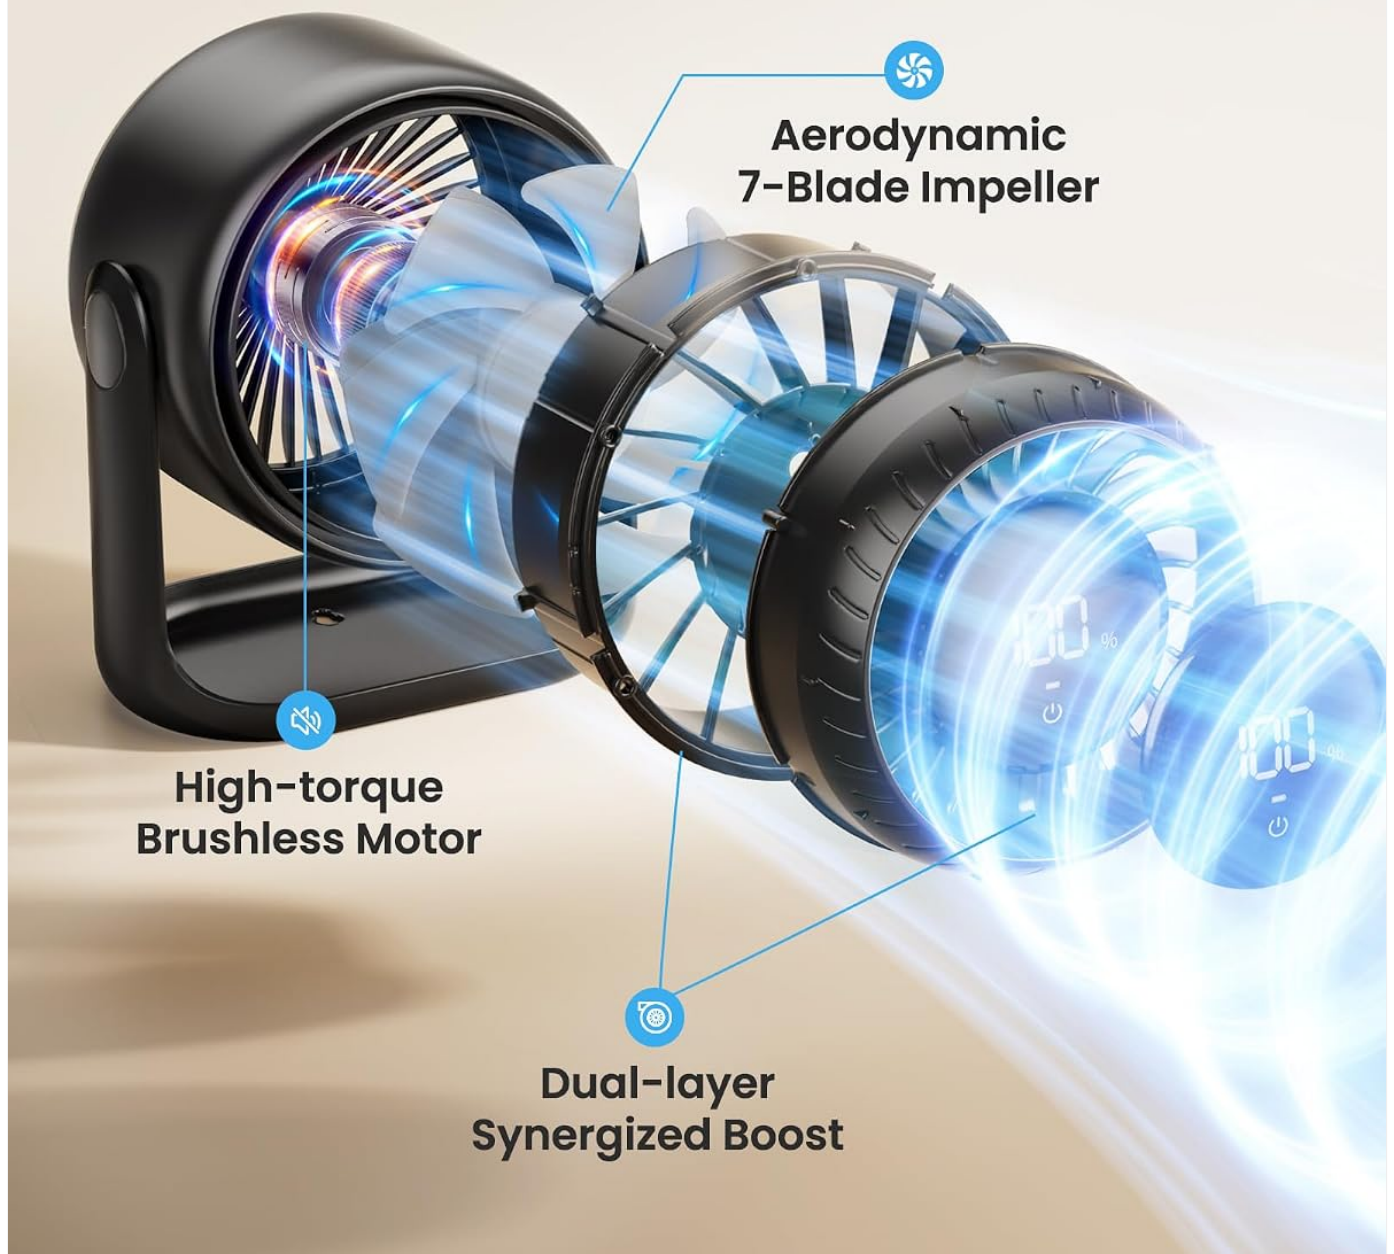


Image: The fan tilted upwards, demonstrating its 90-degree adjustable head.

6. CHARGING

The fan is equipped with a rechargeable battery. When the battery level is low, the LED display will indicate this. Connect the USB-C charging cable to the fan and a power source. A full charge takes approximately 4 hours. The fan can operate for up to 10.4 hours on a single charge, depending on the speed setting. When the battery drops to 30%, the fan may intelligently reduce speed to extend operating time.

7. MAINTENANCE

7.1 Cleaning

- Ensure the fan is turned off and unplugged before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan.
- Do not use abrasive cleaners or solvents.
- For dust accumulation on the fan blades, use a soft brush or compressed air. Do not attempt to open the fan housing.

7.2 Storage

When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to charge the battery every 3 months to maintain its lifespan.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted. Power button not pressed correctly.	Charge the fan using the USB-C cable. Press and hold the power button for 2 seconds.
Weak or no airflow.	Fan speed is too low. Obstruction in front/back grille.	Tap the power button to increase speed. Check for and remove any obstructions.
Fan is noisy.	Fan speed is too high. Fan is not on a stable surface. Internal obstruction.	Reduce fan speed. Place the fan on a flat, stable surface. Contact customer support if noise persists.
Fan not charging.	Cable not connected properly. Faulty cable or power adapter.	Ensure USB-C cable is securely connected. Try a different USB-C cable or power adapter.

9. SPECIFICATIONS

Feature	Detail
Model Number	AF-02
Dimensions (D x W x H)	6.69" x 4.13" x 7.68"
Weight	0.44 Pounds
Power Source	Battery Powered (Rechargeable)
Number of Speeds	5
Noise Level	30 Decibels (minimum)
Wattage	5.5 watts
Voltage	5 Volts
Connector Type	USB Type C

Feature	Detail
Material	Acrylonitrile Butadiene Styrene, Polycarbonate
Certifications	CE, FCC, RoHS

10. WARRANTY AND SUPPORT

Gaiatop products are manufactured to high-quality standards. For warranty information or technical support, please refer to the contact details provided on the product packaging or the official Gaiatop website. Please have your model number (AF-02) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Open the live page

<https://manuals.plus/asin/B0DRYBJYHL>

More documents and user manuals: <https://manuals.plus/>