

ECONTROLLY MKJ39170822

ECONTROLLY MKJ39170822 Replacement Remote Control Instruction Manual

For Insignia Plasma TV Models

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your ECONTROLLY MKJ39170822 replacement remote control. This remote is designed to function as a direct replacement for the original remote controls of compatible Insignia Plasma TV models.

COMPATIBILITY

The ECONTROLLY MKJ39170822 remote control is compatible with the following Insignia Plasma TV models:

- NS-PDP50
- NS-PDP42
- NS-PDP42-09
- NS-PDP50-09
- NS-PDP42/50-09

SETUP

1. Installing Batteries

The remote control requires two (2) 1.5V AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





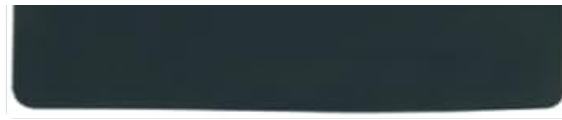


Figure 1: Back of the remote control with the battery compartment open, illustrating correct battery insertion.

2. Initial Use

No programming or pairing is required for this replacement remote control. Once the batteries are correctly installed, the remote is ready for immediate use with your compatible Insignia Plasma TV.

OPERATING YOUR REMOTE CONTROL

The ECONTROLLY MKJ39170822 remote control features standard buttons for navigating your Insignia Plasma TV. Refer to the image below for a visual guide to the button layout.





Figure 2: Front view of the remote control with button layout.

Key Functions:

- **POWER:** Turns the TV on or off.
- **INPUT:** Cycles through available input sources (e.g., HDMI, AV, Component).
- **TV/DVD/VCR:** Selects the device mode for control.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the television channel.
- **MUTE:** Silences or restores the audio.
- **NUMBER PAD (0-9):** Directly enters channel numbers.
- **MENU:** Accesses the TV's main menu.
- **ENTER:** Confirms selections within menus.
- **DIRECTIONAL ARROWS:** Navigates through menu options.
- **EXIT:** Exits the current menu or function.
- **PLAY/PAUSE/STOP/REW/FF:** Controls playback functions for connected devices (e.g., DVD, VCR).
- **COLOR BUTTONS (Red, Green, Yellow, Blue):** Used for specific functions within certain TV menus or applications.



Figure 3: Remote control in a typical usage scenario.

MAINTENANCE

Battery Replacement:

Replace the batteries when the remote control's response becomes inconsistent or stops working. Always replace both batteries at the same time with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning:

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- Remote is not responding:

- Ensure the batteries are inserted correctly with the proper polarity (+/-).
 - Replace the batteries with new ones.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Verify that the remote is pointed directly at the TV's sensor.
- **Some buttons are not working:**
- This may indicate low battery power. Replace the batteries.
 - Ensure the remote is in the correct mode (e.g., TV mode for TV functions).

SPECIFICATIONS

Model Number	MKJ39170822
Product Dimensions	5.91 x 1.57 x 0.59 inches (15.0 x 4.0 x 1.5 cm)
Item Weight	3.2 ounces (90.7 grams)
Power Source	2 x AAA 1.5V Alkaline Batteries (not included)
Compatible Devices	Insignia Plasma Televisions
Special Feature	Ergonomic design





Figure 4: Remote control dimensions.

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For warranty details or technical support, please contact the manufacturer, ECONTROLLY, directly through their official channels or the retailer from whom the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question