

[Manuals.plus](#) /

› [Lefant](#) /

› Lefant M210 Robot Vacuum Cleaner User Manual

Lefant M210

Lefant M210 Robot Vacuum Cleaner User Manual

Model: M210

1. INTRODUCTION

Thank you for choosing the Lefant M210 Robot Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your device. Please read it thoroughly before use and retain it for future reference.

1.1 Package Contents

Verify that all items are present in the package:

- Lefant M210 Robot Vacuum Cleaner x 1
- Remote Control x 1
- Charging Base x 1
- Power Adapter x 1
- Side Brushes x 2 pairs
- High-Efficiency Filter x 2
- Cleaning Tool x 1
- User Manual x 1



Image: The Lefant M210 Robot Vacuum Cleaner and its accompanying remote control. The robot is round and white, and the remote is black with various control buttons.

2. IMPORTANT SAFETY INSTRUCTIONS

Before operating this appliance, read all instructions and cautionary markings in this manual and on the product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Only use the power adapter supplied by the manufacturer.
- Do not use the appliance in environments with flammable or explosive materials.
- Do not use the appliance to pick up large or sharp objects.
- Ensure the charging base is placed against a wall on a level surface.
- Remove power cords, small objects, and fragile items from the floor before cleaning.

3. PRODUCT OVERVIEW

3.1 Robot Vacuum Components


The Lefant M210 features a compact design for efficient cleaning under furniture.



Image: The Lefant M210 Robot Vacuum Cleaner shown alongside a smartphone displaying the Lefant app interface. The robot is white and round, designed to clean various floor types.

3.2 Remote Control Layout

The remote control allows for convenient operation of the robot vacuum.

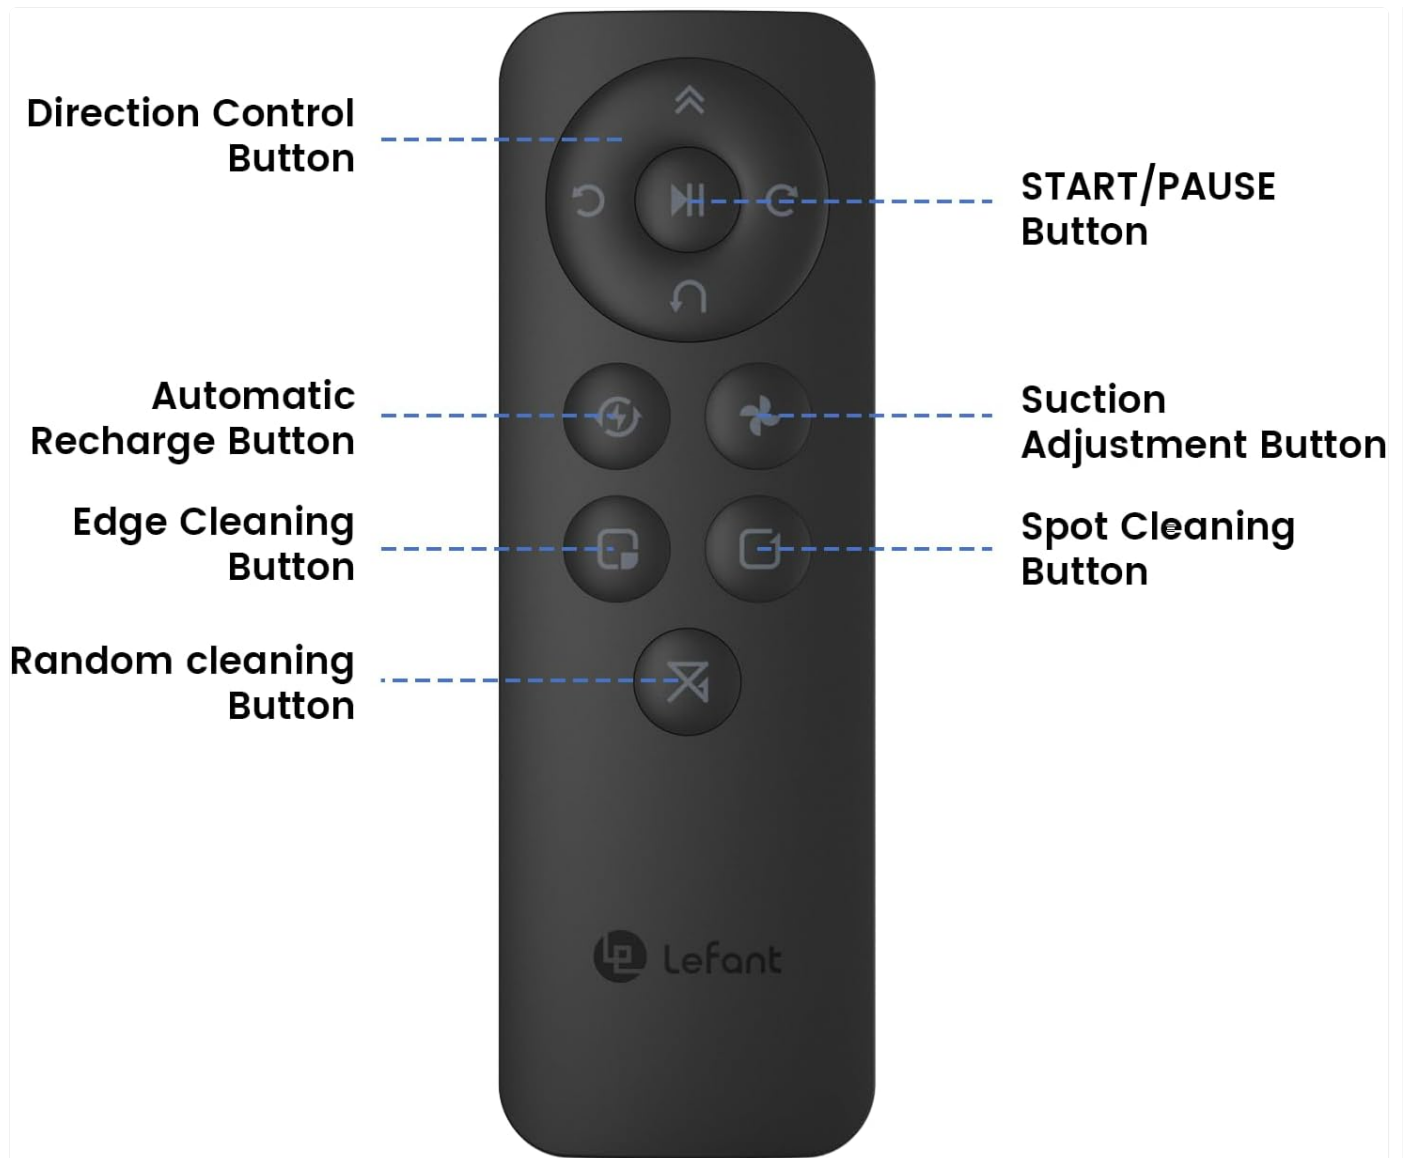

*** No Connection Needed
Control by Aiming at the Device**

Image: Detailed diagram of the Lefant M210 remote control, highlighting the functions of each button, including Direction Control, START/PAUSE, Automatic Recharge, Suction Adjustment, Edge Cleaning, Spot Cleaning, and Random Cleaning.

- **Direction Control Buttons:** Navigate the robot manually.
- **START/PAUSE Button:** Start or pause the cleaning cycle.
- **Automatic Recharge Button:** Send the robot back to its charging base.
- **Suction Adjustment Button:** Adjust the vacuum's suction power.
- **Edge Cleaning Button:** Initiate cleaning along walls and edges.
- **Spot Cleaning Button:** Focus cleaning on a specific area.
- **Random Cleaning Button:** Start a random cleaning pattern.

4. SETUP

4.1 Preparing the Robot

1. Remove all protective films and stickers from the robot and charging base.
2. Install the side brushes by pressing them onto the posts until they click.

3. Ensure the dustbin and filter are correctly installed.

4.2 Placing the Charging Base

- Place the charging base against a wall in an open, uncluttered area.
- Ensure there is at least 0.5 meters (1.6 feet) of clear space on either side of the charging base and 1.5 meters (4.9 feet) in front.
- Plug the power adapter into the charging base and then into a wall outlet.

4.3 Initial Charging

Before first use, fully charge the robot vacuum. Place the robot onto the charging base, ensuring the charging contacts align. The indicator light on the robot will show charging status. A full charge typically takes 4-5 hours.

4.4 App and Voice Control Setup

For advanced features like scheduling and remote control, download the Lefant App.

1. Download the "Lefant" App from the App Store (iOS) or Google Play Store (Android).
2. Register an account and follow the in-app instructions to add your M210 robot vacuum.
3. For voice control, link your Lefant account with Amazon Alexa or Google Assistant through their respective apps.

Clean from Your Smartphone



Schedule



Suction



Manual Control



Recharge



Lefant App

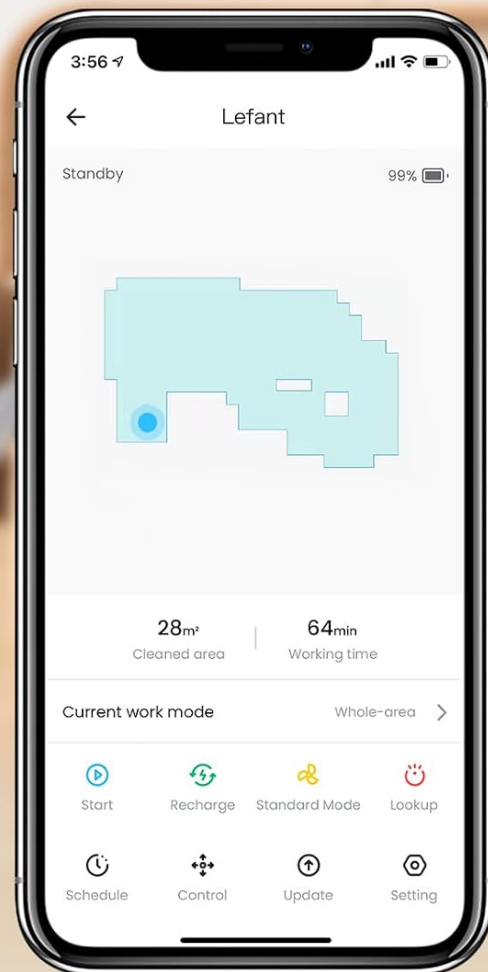


Image: A smartphone screen displaying the Lefant App, illustrating options for scheduling cleaning, adjusting suction power, manual control, and initiating recharge. This app allows for comprehensive control of the robot vacuum.

5. OPERATING THE ROBOT VACUUM

5.1 Cleaning Modes

The Lefant M210 offers six cleaning modes to suit various needs:

- **Zigzag Mode:** Cleans in a systematic back-and-forth pattern. *Note: Do not use Zigzag mode on carpet.*
- **Random Mode:** Cleans randomly until the battery is low or the area is covered.
- **Spot Mode:** Concentrates cleaning on a specific dirty area.
- **Edge Mode:** Cleans along the perimeter of rooms.
- **Schedule Timed Mode:** Allows you to set specific cleaning times via the Lefant App.
- **Manual Control:** Direct the robot's movement using the remote control or app.

5.2 Starting a Cleaning Cycle

- **Using the Robot Button:** Press the power button on the robot once to start automatic cleaning. Press again to pause.
- **Using the Remote Control:** Press the START/PAUSE button on the remote. Select desired cleaning mode.
- **Using the Lefant App:** Open the app, select your device, and choose a cleaning mode or schedule.
- **Using Voice Commands:** (e.g., "Alexa, tell Lefant to start cleaning.")

5.3 Returning to Charging Base

When the battery is low, the robot will automatically return to the charging base. You can also manually send it back using the remote control's "Automatic Recharge" button or the corresponding option in the Lefant App.



Image: An illustration demonstrating the Lefant M210 Robot Vacuum's long running time, capable of up to 120 minutes of operation and covering approximately 1300 square feet on a single charge.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your robot vacuum.

6.1 Emptying the Dustbin

- Press the dustbin release button and pull out the dustbin.
- Open the dustbin cover and empty its contents into a trash can.
- Rinse the dustbin with water if necessary (ensure it is completely dry before reinstallation).

6.2 Cleaning the Filter

- Remove the filter from the dustbin.
- Tap the filter against a trash can to remove dust and debris.
- Do not wash the high-efficiency filter with water. Replace it every 2-3 months, or as needed.

6.3 Cleaning Side Brushes

- Remove the side brushes by gently pulling them off.
- Remove any hair or debris wrapped around the brushes.
- Reinstall the brushes, ensuring they click into place. Replace if worn or damaged.

6.4 Cleaning Sensors and Charging Contacts

- Wipe the anti-drop sensors, bumper sensors, and charging contacts on both the robot and the charging base with a clean, dry cloth.

No Entanglement Any More



Image: A comparison illustrating the Lefant M210's anti-entanglement design (left) versus a conventional robot vacuum (right) that often gets tangled with hair. The M210 is also shown demonstrating its 2200Pa suction power on various debris.

7. TROUBLESHOOTING

Refer to this section for solutions to common issues you may encounter.

Problem	Possible Cause	Solution
Robot does not turn on.	Low battery; Power switch off.	Charge the robot; Ensure the main power switch is on.
Robot cannot charge.	Charging contacts are dirty; Charging base not powered.	Clean charging contacts on robot and base; Ensure charging base is plugged in.
Robot gets stuck frequently.	Obstacles on the floor; Sensors are dirty.	Clear cables and small objects; Clean all sensors.

Problem	Possible Cause	Solution
Poor cleaning performance.	Dustbin full; Filter clogged; Side brushes worn.	Empty dustbin; Clean/replace filter; Clean/replace side brushes.
Remote control not working.	Batteries low/dead; Obstruction between remote and robot.	Replace remote control batteries; Ensure direct line of sight.

8. SPECIFICATIONS

Feature	Detail
Brand	Lefant
Model	M210
Included Components	Robot Vacuum Cleaner, Remote Control
Filter Type	Cloth
Battery Life	Up to 120 minutes (in low suction mode)
Power Source	Battery Powered (Lithium Iron Phosphate)
Form Factor	Round
Dimensions (Diameter x Height)	11 inches x 2.99 inches (approx.)

9. WARRANTY AND SUPPORT

Lefant products come with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your package or visit the official Lefant website. For technical support, troubleshooting assistance, or to purchase replacement parts, please contact Lefant customer service through the contact information provided on the official website or within the Lefant App.

Website: www.lefant.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details.](#)

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question