

[Manuals.plus](#) /

› [VTHW](#) /

› VTHW Camping Fan with LED Lantern, 20000mAh Rechargeable, Model TT-15 User Manual

VTHW TT-15

VTHW Camping Fan with LED Lantern, 20000mAh Rechargeable

Model: TT-15


User Manual

INTRODUCTION

Thank you for choosing the VTHW Camping Fan with LED Lantern. This versatile device is designed to provide cooling and illumination for various indoor and outdoor activities, including camping, fishing, RV trips, and home use. It features a powerful dual-motor, dual-blade design, a high-capacity 20000mAh rechargeable battery, an integrated LED lantern, and convenient remote control operation. Its compact and lightweight design makes it an ideal companion for any adventure.



Camping

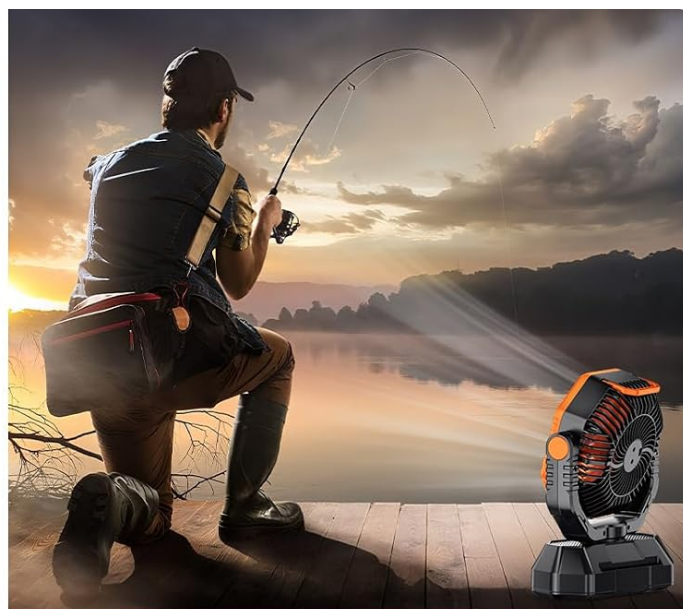

Fishing



RV Camping



BBQ

Image: The VTHW Camping Fan demonstrating its versatility across multiple scenarios, including camping, fishing, RV camping, and outdoor barbecues.

Please read this manual thoroughly before use to ensure proper operation and maintenance.

PRODUCT OVERVIEW

The VTHW Camping Fan is engineered for portability and performance. Key features include:

- **Dual-Motor & Dual-Blade Design:** Provides enhanced airflow for effective cooling.
- **20000mAh Rechargeable Battery:** Offers extended operation and functions as a power bank for other devices.
- **Integrated LED Lantern:** Features 3 brightness levels for emergency lighting or ambient illumination.
- **Stepless Wind Speed Adjustment:** Allows precise control over airflow intensity.
- **Timer Mode:** Set the fan to automatically turn off after 1, 2, or 3 hours.
- **270° Manual Vertical Pivoting:** Adjust the fan head to direct airflow.
- **90° Automatic Horizontal Oscillation:** Distributes air across a wider area.

- **Remote Control:** Convenient operation from a distance.
- **Integrated Hook:** For easy hanging in tents, RVs, or other structures.
- **Compact and Lightweight:** Designed for easy transport, weighing only 880g.



Image: The VTHW Camping Fan showcasing its dual-motor and dual-blade design for powerful airflow, capable of reaching up to 14 ft/s.

Portable & Lightweight



Image: The VTHW Camping Fan being held by a person, illustrating its portable and lightweight nature, with dimensions of 20cm x 13cm x 27cm and a weight of 880g.


Packing List

Please check the package contents upon unboxing:

- VTHW Camping Fan (Model TT-15) x 1
- 4ft USB-C Charging Cable x 1
- Remote Control x 1
- User Manual x 1

Packing List

20,000mAh
Camping Fan *1

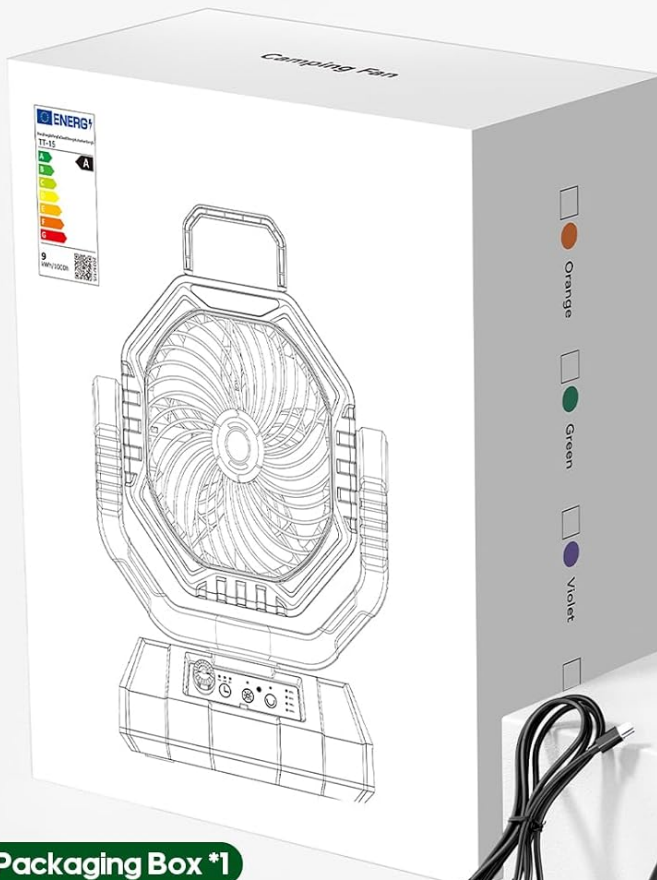

Packaging Box *1

4ft USB-C Charging Cable *1



Remote Controller*1



User Manual *1



Image: A visual representation of the VTHW Camping Fan's packaging and included accessories: the fan unit, a USB-C charging cable, a remote controller, and the user manual.

SETUP

1. **Initial Charge:** Before first use, fully charge the fan using the provided USB-C cable. Connect the cable to the fan's USB-C port and a compatible 5V/2A power adapter (not included). The charging indicator will show progress and turn solid when fully charged.
2. **Remote Control Battery:** Insert the required batteries into the remote control (battery type usually CR2025, check remote for specifics if not provided).
3. **Placement:** Place the fan on a stable, flat surface or hang it using the integrated hook at the bottom. Ensure there are no obstructions to airflow.

OPERATING INSTRUCTIONS

Fan Operation

1. **Power On/Off:** Press the power button on the fan or remote control to turn the fan on or off.
2. **Adjusting Wind Speed:**
 - **Manual Control:** Rotate the knob on the fan clockwise to increase wind speed continuously from minimum to maximum. Rotate counter-clockwise to decrease speed and turn off.
 - **Remote Control:** Use the '+' and '-' buttons on the remote to adjust the wind speed.
3. **Oscillation:** Press the oscillation button on the fan or remote control to activate 90° automatic horizontal oscillation. Press again to stop.
4. **Vertical Adjustment:** Manually pivot the fan head up or down by 270° to direct airflow as desired.
5. **Timer Mode:** Press the timer button on the fan or remote control to set the fan to automatically turn off after 1, 2, or 3 hours. Each press cycles through the options.

Stepless Wind Speed

Just one spin to choose your perfect breeze from Wind Speed 1 to 13



Timer Mode
1H/2H/3H



Sleep Mode
Automatically turn off all lights

Image: The VTHW Camping Fan highlighting its stepless wind speed adjustment knob and timer mode options (1H/2H/3H), with a user sleeping comfortably under its breeze.

360° Wide-Area Airflow

The wind that follows your moves



Image: The VTHW Camping Fan illustrating its 90-degree automatic horizontal oscillation and 270-degree manual vertical pivoting capabilities, providing wide-area airflow.

LED Lantern Operation

1. **Turn On/Off:** Press the light button on the fan or remote control to turn the LED lantern on or off.
2. **Adjust Brightness:** With the light on, press the light button repeatedly to cycle through 3 brightness levels (Low, Medium, High).

Emergency Essentials for Power Outages

20000mah battery power & 3 levels brightness



Image: The VTHW Camping Fan functioning as an emergency essential, demonstrating its 20000mAh battery power and 3 levels of LED brightness illuminating a tent at night.

Power Bank Function

The integrated 20000mAh battery can be used to charge other USB-powered devices. Connect your device's charging cable to the fan's USB-A output port. The fan will automatically begin charging your device.

MAINTENANCE

1. Cleaning:

- Ensure the fan is turned off and unplugged before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces.

- For dust accumulation on the fan blades or grille, use a soft brush or compressed air. Do not use harsh chemicals or abrasive cleaners.

2. **Storage:**

- Store the fan in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50-70% every 3 months to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted. Power button not pressed correctly.	Charge the fan fully. Ensure the power button is pressed firmly.
LED lantern does not turn on.	Battery is depleted. Light button not pressed correctly.	Charge the fan fully. Ensure the light button is pressed firmly.
Remote control is not working.	Remote battery is depleted or incorrectly inserted. Obstruction between remote and fan.	Replace remote battery or ensure correct polarity. Ensure clear line of sight to the fan's receiver.
Fan is not charging.	Charging cable or adapter is faulty. USB-C port is damaged.	Try a different USB-C cable and power adapter. Contact customer support if port is damaged.
Weak airflow.	Fan speed set too low. Obstruction in front or back of fan.	Increase wind speed using the knob or remote. Clear any obstructions.

SPECIFICATIONS

Brand	VTHW
Model Number	TT-15
Color	Orange
Dimensions (L x W x H)	20 x 13 x 27 cm
Weight	880 grams
Power	12 Watts
Voltage	5 Volts
Material	Plastic
Battery Capacity	20000mAh
Power Source	Battery Powered
Fan Design	Table Fan
Controller Type	Button Control

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official VTHW website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you encounter any issues not covered in the troubleshooting section, please do not attempt to repair the device yourself. Contact customer support for assistance.

© 2025 VTHW. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question