

Gabba Goods CC-JBS-LRG

Gabba Goods Coca-Cola Jukebox Bluetooth Speaker

Model: CC-JBS-LRG

INTRODUCTION

Thank you for purchasing the Gabba Goods Coca-Cola Jukebox Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

This speaker combines a classic jukebox design with modern audio technology, featuring Bluetooth connectivity, FM radio, and LED lights for an enhanced listening experience.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the device yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from water or other liquids to prevent electric shock or damage.
- Use only the provided USB-C charging cable.
- Do not operate the speaker near flammable materials.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners.

PACKAGE CONTENTS

Ensure all items are present in the package:

- Coca-Cola Jukebox Bluetooth Speaker
- USB-C Charging Cable
- Instruction Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.

Coca-Cola

Juke Box Speaker

With Built-in Bluetooth

- **Power: 60Hz**
- **Speaker Output: 6W**
- **Range: 30ft**
- **Battery: 3.7V/300mAh**
- **Bluetooth: V5.3**




**Compatible With Most Smartphones
Or Devices With Bluetooth.**

Figure 1: Front View of the Speaker. This image displays the overall retro design of the Coca-Cola Jukebox Bluetooth Speaker, highlighting its iconic red and white color scheme and the Coca-Cola branding.

Coca-Cola

Amazing Stereo Experience

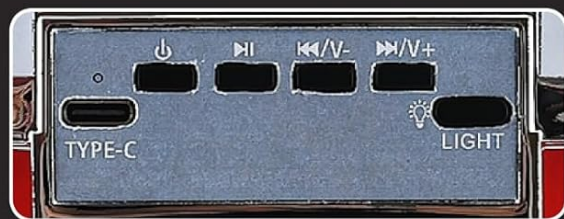

- Type C Port
- Power On/Off Button
- Pause & Play Button
- Volume Up/Down
- LED Light



Bluetooth



Playtime



300mAh

Figure 2: Control Panel. This image provides a detailed view of the speaker's control panel, indicating the location of the Type-C charging port, power on/off button, play/pause button, volume up/down controls, and the dedicated LED light button.

Controls and Ports:

- **Power Button:** Press and hold to turn the speaker on or off. Short press to switch between Bluetooth and FM radio modes.
- **Play/Pause Button:** Controls playback in Bluetooth mode.
- **Previous/Volume Down Button:** Short press for previous track (Bluetooth) or previous radio station (FM). Long press to decrease volume.
- **Next/Volume Up Button:** Short press for next track (Bluetooth) or next radio station (FM). Long press to increase volume.
- **Light Button:** Toggles the LED lights on or off.
- **USB-C Port:** For charging the speaker.

SETUP

1. Charging the Speaker

Before initial use, fully charge the speaker. A full charge takes approximately 2-3 hours.

1. Connect the provided USB-C charging cable to the speaker's USB-C port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator (if present, usually an LED) will show charging status. It typically turns off or changes color when fully charged.

The speaker provides a low battery voice prompt and will automatically shut down to conserve power when the battery is low.

2. Powering On/Off

- **To Power On:** Press and hold the Power button until the speaker turns on.
- **To Power Off:** Press and hold the Power button again until the speaker turns off.

OPERATING INSTRUCTIONS

1. Bluetooth Mode

The speaker will automatically enter Bluetooth pairing mode when powered on for the first time or if no device is connected.

1. Ensure the speaker is powered on. If it's in FM mode, short press the Power button to switch to Bluetooth mode.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Coca-Cola Jukebox Speaker" from the list of devices.
4. Once paired, the speaker will indicate a successful connection (e.g., a sound prompt).
5. You can now play audio from your device through the speaker.

The Bluetooth range is up to 10 meters (33 feet).

2. FM Radio Mode

To switch to FM radio mode:

1. Short press the Power button to cycle through modes until you hear the FM radio.
2. **Automatic Station Scan:** In FM mode, long press the Play/Pause button to initiate an automatic scan for available radio stations. The speaker will save detected stations.
3. **Manual Station Selection:** Short press the Previous/Next buttons to navigate through saved radio stations.

The FM frequency range is 87.5 to 108 MHz.

3. Adjusting Volume

- **Increase Volume:** Long press the Next/Volume Up button.
- **Decrease Volume:** Long press the Previous/Volume Down button.

4. LED Lights

The speaker features customizable LED lights.

Turn up the volume and the vibes with
***Color-Changing
LED Lighting***



Create a lively atmosphere in any room with the built-in LED lighting feature. The lights can sync with your music for a dynamic experience or be enjoyed on their own to set the perfect mood.

Figure 3: LED Lights in Operation. This image demonstrates the speaker with its built-in LED lights active, showcasing the color-changing effect that enhances the visual appeal and atmosphere.

- Press the dedicated **Light button** to turn the LED lights on or off.
- The LED lighting cycle changes with the battery status.
- Turning off the LED lights can help conserve battery power.

MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the speaker's exterior. Do not use liquid cleaners, aerosols, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker using the provided USB-C cable.
No sound from the speaker.	Volume is too low or muted. Device not connected.	Increase the volume on both the speaker and your connected device. Ensure Bluetooth is connected or FM radio is tuned.
Bluetooth device cannot pair.	Speaker is not in pairing mode. Device is out of range. Interference.	Ensure the speaker is in Bluetooth mode. Move the device closer to the speaker (within 10m). Turn off other Bluetooth devices.
Poor FM radio reception.	Weak signal. Interference.	Relocate the speaker to an area with better reception. Perform an automatic station scan again.

SPECIFICATIONS

Model Number	CC-JBS-LRG
Bluetooth Version	5.0
Bluetooth Range	Up to 10 meters (33 feet)
Speaker Output	16W (2 x 8W)
Speaker Impedance	3Ω
FM Frequency Range	87.5 - 108 MHz
Battery Capacity	1800mAh
Charging Time	2-3 hours
Playback Time	2-4 hours (varies with volume and LED usage)
Charging Port	USB-C
Dimensions	270mm x 380mm x 165mm (approx. 10.6 x 15 x 6.5 inches)
Weight	2.74 kg (approx. 6.04 lbs)

Compact Size



Enjoy the classic charm of a Bluetooth Juke Box in a stylish, compact design that seamlessly fits into any space.

Figure 4: Speaker Dimensions. This image illustrates the compact size of the speaker, providing visual context for its height, depth, and width measurements.

WARRANTY AND SUPPORT

This product comes with a **1 Year Manufacturer Warranty** from M&S Accessory Network.

For warranty claims or technical support, please contact the manufacturer or your retailer with your proof of purchase.

Please visit the Gabba Goods store for more information: [Gabba Goods Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question