



Manuals.plus /

› FVBADE /

› FVBADE Pandora Ultra Arcade Game Console User Manual

FVBADE Pandora Ultra

FVBADE Pandora Ultra Arcade Game Console User Manual

Model: Pandora Ultra

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your FVBADE Pandora Ultra Arcade Game Console. Please read this manual thoroughly before using the product to ensure proper functionality and to maximize your gaming experience.

PRODUCT OVERVIEW

The FVBADE Pandora Ultra is an advanced arcade game console designed for a comprehensive gaming experience. It features an 8-core operating system for enhanced performance and supports a wide array of classic and 3D arcade games.

Key Features:

- **Extensive Game Library:** Includes 50,000 pre-installed games, covering a broad range of arcade titles.
- **Advanced System:** Equipped with the Pandora Ultra 8-core operating system for faster and smoother performance.
- **High Definition Output:** Supports enhanced resolution up to 1280x720 HD for improved visual clarity.
- **Versatile Connectivity:** Compatible with various display devices including TVs, PCs, Xbox 360, monitors, and projectors via VGA, HDMI, and USB outputs.
- **Game Management Functions:** Allows users to save, search, hide, pause, and delete games, as well as create a favorite list and categorize games.
- **Multi-Player Support:** Designed for 1-4 players with double joysticks.

More Function

- ✓ Enhanced picture quality
- ✓ 3D Games
- ✓ Save/Load Games
- ✓ 1280x720 Full HD
- ✓ Favorite List
- ✓ Hide / Pause Games
- ✓ Support 1 - 4 Players
- ✓ Recently List
- ✓ Search Games



1280*720 Output



One Key
Switch Language



Customize Buttons

Image: Overview of the FVBADE Pandora Ultra's key functions and features, including enhanced picture quality, 3D game support, save/load options, and multi-player capabilities.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- FVBADE Pandora Ultra Arcade Game Console
- User Manual
- 2M USB-C Power Cable
- HDMI Cable
- VGA Cable
- HDMI to VGA Adapter
- Spare Buttons (x2)



Image: All components included in the FVBADE Pandora Ultra Arcade Game Console package.

SETUP INSTRUCTIONS

Follow these steps to connect your FVBADE Pandora Ultra Arcade Game Console to a display device:

1. **Power Connection:** Connect the 2M USB-C Power Cable to the console's power input and then to a suitable power source. Ensure the ON/OFF switch on the console is in the OFF position before connecting power.
2. **Display Connection:**
 - **HDMI:** For high-definition output, connect one end of the HDMI cable to the console's HDMI port and the other end to an HDMI input on your TV, monitor, or projector.
 - **VGA:** For VGA output, connect one end of the VGA cable to the console's VGA port and the other end to a VGA input on your monitor or projector. If your display only has HDMI, use the provided HDMI to VGA adapter.
3. **Audio Output:** Audio is typically transmitted via HDMI. If using VGA, connect external speakers or headphones to the console's headphone jack.
4. **External Controllers (Optional):** For 4-player games or alternative control, connect wired or wireless USB controllers to the USB ports on the console.

5. **Power On:** Once all connections are secure, switch the ON/OFF button on the console to the ON position. The console should power on and display the main menu on your connected screen.



Image: Connection ports on the FVBADE Pandora Ultra console and examples of connecting to various display devices.

OPERATING INSTRUCTIONS

Navigating the Menu:

Use the joystick to navigate through menu options and the primary action buttons to select or confirm. The console's interface allows for easy browsing of the extensive game library.

Game Categories:

Games are organized into various categories such as Fighting, Action, Shooting, Sports, and Puzzle to help you find specific types of games quickly.

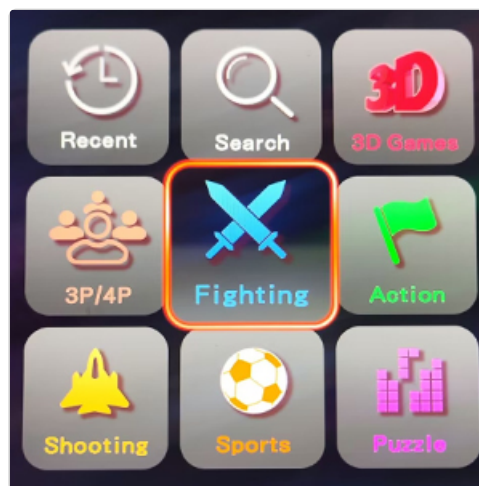 


Image: Game category selection screen on the FVBADE Pandora Ultra console.

Game Management Features:

- **Save/Load Games:** During gameplay, access the in-game menu to save your progress or load a previously saved state.
- **Search Games:** Use the search function to quickly locate specific titles within the large game library.
- **Hide/Pause Games:** Games can be hidden from the main list or paused during gameplay.
- **Favorite List:** Add frequently played games to a 'Favorite List' for quick access.
- **Recently Played List:** Access a list of games you have played recently.
- **Delete Games:** Manage your game library by deleting unwanted titles.

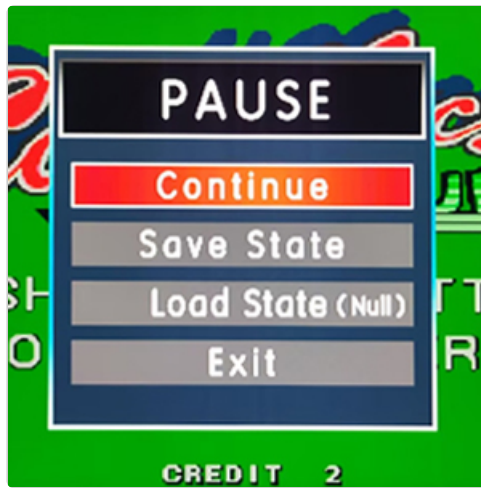 


Image: In-game pause menu with options for saving and loading game states.

CUSTOMIZATION AND SETTINGS

The FVBADE Pandora Ultra offers several customization options to enhance your gaming experience:

- **Button Customization:** Adjust button mappings to your preference. Refer to the on-screen settings for detailed configuration.
- **Language Switch:** The system supports multiple languages. Access the settings menu to change the display language.
- **Resolution Enhancement:** The console can enhance the display resolution from its native 1280x720 HD. Check the display settings for available options.



Image: Button layout customization options for the console.

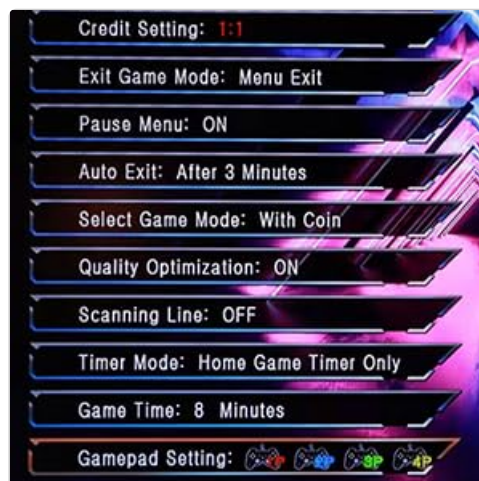 


Image: System settings menu, showing various configurable options.

MAINTENANCE

To ensure the longevity and optimal performance of your arcade game console, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the console's surface. Avoid abrasive cleaners or solvents that could damage the finish.
- **Storage:** Store the console in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the console with care to prevent physical damage to the joysticks, buttons, and internal components.
- **Power Off:** Always power off the console using the ON/OFF switch before disconnecting power cables or moving the unit.

TROUBLESHOOTING

If you encounter issues with your FVBADE Pandora Ultra, refer to the following common troubleshooting steps:

- **No Display/Blue Screen:**
 - Ensure all video cables (HDMI/VGA) are securely connected to both the console and the display device.
 - Verify that the display device is set to the correct input source (e.g., HDMI 1, VGA).
 - Try connecting the console to a different display device or using a different cable to rule out faulty components.
- **No Sound:**
 - Check the volume control on the console and your display device.
 - If using HDMI, ensure your display device's audio is not muted.
 - If using VGA, ensure external speakers or headphones are properly connected to the console's headphone jack and are powered on.
- **Console Not Powering On:**
 - Confirm the power cable is firmly connected to the console and the power outlet.
 - Ensure the ON/OFF switch on the console is in the ON position.
 - Test the power outlet with another device to ensure it is functional.
- **Joystick/Buttons Unresponsive:**
 - Restart the console.
 - If using external controllers, ensure they are properly connected and powered.
 - Some games may only utilize a subset of buttons; this is normal and does not indicate a fault with the console.
- **System Freezes/Crashes:**
 - If the system freezes, power cycle the console by turning it off and then on again.
 - Ensure the console is placed in a well-ventilated area to prevent overheating.

SPECIFICATIONS

Model	Pandora Ultra
Processor	8-core CPU
Output Resolution	1280x720 HD (Enhanced)
Connectivity	HDMI, VGA, USB
Controller Type	Button Control, Joystick
Power Source	Corded Electric
Material	PVC
Product Dimensions	15 x 7 x 24 inches
Item Weight	7.73 pounds
UPC	753873417498

WARRANTY AND SUPPORT

The FVBADE Pandora Ultra Arcade Game Console comes with a one-year warranty from the date of purchase. This warranty covers manufacturing defects and ensures that the product functions as intended under normal use. For technical support, warranty claims, or any inquiries regarding your product, please contact FVBADE customer service through the retailer where the product was purchased. Please have your purchase receipt and product model information ready when contacting support.

