

Manuals.plus /

- › Hoover /
- › Hoover PowerDash Pet Advanced Compact Carpet Cleaner User Manual

## Hoover CRT2HVFH55000RB

# Hoover PowerDash Pet Advanced Compact Carpet Cleaner User Manual

Model: CRT2HVFH55000RB

## INTRODUCTION

---

This manual provides essential instructions for the safe and effective operation, maintenance, and troubleshooting of your Hoover PowerDash Pet Advanced Compact Carpet Cleaner. Please read this manual thoroughly before initial use and retain it for future reference.





**Image:** This image displays the complete Hoover PowerDash Pet Advanced Compact Carpet Cleaner from the front, highlighting its compact design and main components including the clean and dirty water tanks, handle, and brush head.

## IMPORTANT SAFETY INFORMATION

---

Always follow basic safety precautions when using an electrical appliance to reduce the risk of fire, electric shock, or injury. Read all instructions before using this appliance.

- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only Hoover recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped,

damaged, left outdoors, or dropped into water, return it to a service center.

- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Connect to a properly grounded outlet only. See grounding instructions.

## SETUP AND ASSEMBLY

---

Your carpet cleaner requires minimal assembly. Follow these steps to prepare your unit for first use.

1. **Attach Handle:** Insert the handle assembly into the main body of the cleaner until it clicks securely into place.
2. **Fill Clean Water Tank:** Remove the clean water tank from the unit. Unscrew the cap and fill the tank with warm tap water (max 140°F/60°C) and the recommended Hoover cleaning solution according to the fill lines. Replace the cap and reinsert the tank into the unit.

# LARGER TANK, FEWER FILL-UPS

STOP LESS TO FILL UP WITH A NEW, LARGER CLEAN WATER TANK



**Image:** A woman is shown holding the transparent clean water tank, demonstrating its removal and larger capacity for fewer refills during operation.

3. **Prepare Area:** Vacuum the carpet thoroughly to remove loose dirt and debris before using the carpet cleaner.

## OPERATING INSTRUCTIONS

---

Follow these steps for effective carpet cleaning.

1. **Plug In:** Plug the power cord into a grounded electrical outlet.
2. **Turn On:** Step on the power pedal to turn on the cleaner.
3. **Cleaning Strokes:** Press the trigger on the handle to dispense cleaning solution while pushing the cleaner forward slowly. Release the trigger and pull the cleaner backward over the same area to extract the dirty water. Overlap strokes slightly.

# POWER THROUGH TOUGH PET MESSSES

WITH POWERSPIN BRUSH ROLL



**Image:** A detailed view of the PowerSpin brush roll actively scrubbing a carpet, designed to tackle embedded dirt.

- 4. Empty Dirty Water Tank:** When the dirty water tank is full (indicated by a decrease in suction or visible dirty water), turn off and unplug the unit. Remove the dirty water tank, empty it, rinse, and replace it.
- 5. Spot Cleaning with Hose Attachment (if applicable):** For upholstery or small areas, attach the hose and tool. Press the trigger to spray solution and scrub the area. Release the trigger and use suction to remove dirty water.

# POWERFUL SCRUBBING & SUCTION



**Image:** A man is kneeling, using the included hose and upholstery tool to spot clean a rug, demonstrating the machine's versatility for above-floor cleaning.

6. **Drying:** After cleaning, make several dry passes over the cleaned area to remove as much moisture as possible. Allow the carpet to dry completely before walking on it.

## MAINTENANCE AND CARE

---

Regular maintenance ensures optimal performance and extends the life of your carpet cleaner.

- **Empty and Rinse Tanks:** After each use, empty and thoroughly rinse both the clean and dirty water tanks. Allow them to air dry before reassembling.
- **Clean Nozzle and Brush Roll:** Remove the nozzle cover and brush roll for cleaning. Remove any hair or debris wrapped around the brush roll. Rinse the nozzle cover under running water.

# HASSLE-FREE CLEANING & MAINTENANCE

IMPROVED FEATURES FOR EASY CLEAN UP AND MAINTENANCE



**Image:** This image illustrates the ease of maintenance, showing a hand detaching the clear cover over the brush roll, indicating simple access for cleaning and upkeep.

- **Check Filter:** Inspect the filter (if applicable) for debris and clean as needed.
- **Store Properly:** Store the cleaner in a dry, indoor area. Do not store with water in the tanks.

## TROUBLESHOOTING

---

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Cleaner does not turn on	Not plugged in; circuit breaker tripped; power switch off	Ensure plug is fully inserted; check circuit breaker; press power switch.
No spray	Clean water tank empty; tank not seated correctly; spray nozzle clogged	Refill clean water tank; reseal tank firmly; clean spray nozzle.
Low suction	Dirty water tank full; dirty water tank not seated correctly; nozzle clogged; hose attachment not sealed	Empty dirty water tank; reseal tank firmly; clean nozzle; ensure hose attachment is securely connected.
Brush roll not spinning	Debris wrapped around brush; brush belt broken	Remove debris from brush roll; contact customer support for belt replacement.

## SPECIFICATIONS

Feature	Detail
Brand	Hoover
Model Name	PowerDash Advanced
Model Number	CRT2HVFH55000RB
Capacity	0.6 Gallons
Item Weight	18.4 Pounds
Product Dimensions	17"D x 16"W x 45.5"H
Power Source	Electric
Color	Grey

## WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please contact Hoover Customer Service. Refer to the product packaging or the official Hoover website for the most current contact details.

**Website:** [www.hoover.com](http://www.hoover.com)