

[manuals.plus](#) /

› [Genérico](#) /

› [Genérico Solid Pine Wood TV Cabinet 156x37x45 cm - Model TV-814394 User Manual](#)

Genérico TV-814394

Genérico Solid Pine Wood TV Cabinet 156x37x45 cm - Model TV-814394 User Manual

Your guide to assembly, use, and maintenance.

1. INTRODUCTION

Thank you for choosing the Genérico Solid Pine Wood TV Cabinet. This manual provides essential information for the safe assembly, proper use, and effective maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image 1.1: The Genérico Solid Pine Wood TV Cabinet integrated into a modern living room, showcasing its functional design beneath a wall-mounted television.

2. SAFETY INFORMATION

To prevent injury or damage to the product, please observe the following safety guidelines:

- Always assemble the product on a soft, clean surface to avoid scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not overload the cabinet. Distribute weight evenly across shelves and compartments.
- Keep small parts away from children during assembly to prevent choking hazards.
- If wall mounting is required (not applicable for this model, but general safety), use appropriate hardware for your wall type and seek professional assistance if unsure.
- Avoid placing hot items directly on the wood surface without protection.

3. SETUP AND ASSEMBLY

This TV cabinet requires assembly. Please follow these steps carefully. It is recommended to have two

people for assembly.

3.1. Unpacking and Inventory

1. Carefully unpack all components from the packaging.
2. Verify that all parts and hardware listed in the included parts list are present. Contact your retailer immediately if any parts are missing or damaged.

3.2. Assembly Steps

1. **Prepare the Base:** Identify the base panels and connect them using the provided fasteners. Ensure they are stable and level.
2. **Attach Side Panels:** Secure the side panels to the base.
3. **Install Dividers and Shelves:** Insert any internal dividers and shelves into their designated slots or attach them with fasteners.
4. **Attach Top Panel:** Place and secure the top panel to the assembled frame.
5. **Install Back Panel:** Attach the back panel (typically MDF) to the rear of the cabinet using small nails or screws. This adds stability.
6. **Mount Doors:** Attach the hinges to the cabinet frame and then to the doors. Carefully align and secure each door. Adjust hinges as needed for proper door alignment.
7. **Attach Handles (if applicable):** Secure any handles or knobs to the doors.
8. **Final Check:** Ensure all connections are tight and the cabinet is stable.



Image 3.1: The TV cabinet with its four doors open, illustrating the internal storage capacity and construction.



Image 3.2: The rear view of the TV cabinet, showing the MDF back panel which provides structural integrity.



Image 3.3: A detailed view of the door hinge mechanism, crucial for proper door function and alignment.

4. OPERATING INSTRUCTIONS

The Genérico Solid Pine Wood TV Cabinet is designed for organizing your entertainment area.

- **Placement:** Position the cabinet on a flat, stable surface. Ensure there is adequate ventilation around electronic devices placed within or on the cabinet.
- **Storage:** Utilize the four compartments for storing media devices, DVDs, remote controls, and other accessories. The doors help keep items dust-free and out of sight.
- **Weight Distribution:** When placing a television on top, ensure its weight is evenly distributed and does not exceed the cabinet's weight capacity (consult seller for specific capacity if needed).



Image 4.1: The top surface of the TV cabinet, demonstrating its capacity to hold decorative items and small electronic devices.

5. MAINTENANCE AND CARE

To maintain the beauty and longevity of your solid pine wood TV cabinet, follow these care instructions:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that can damage the wood finish.
- **Spills:** Immediately wipe up any spills to prevent water stains or damage to the wood.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the wood.
- **Humidity:** Maintain a stable humidity level in the room to prevent the wood from cracking or warping.
- **Protection:** Use coasters or protective pads under hot items or items that might scratch the surface.



Image 5.1: A detailed view of the pine wood grain, showing the natural characteristics of the material.

6. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Wobbly Cabinet:**

Ensure all fasteners are securely tightened. Check if the cabinet is on an even surface. Use furniture levelers if necessary.

- **Doors Not Closing Properly:**

Adjust the hinges. Most furniture hinges allow for minor adjustments to align doors horizontally, vertically, and in depth.

- **Scratches or Dents:**

Minor scratches can sometimes be buffed out with wood polish or a wood repair kit. For deeper damage, consult a furniture repair specialist.

7. SPECIFICATIONS

Feature	Detail
---------	--------

Brand	Genérico
Model	TV-814394
Material	Solid Pine Wood (main structure), MDF (back panel)
Dimensions (L x W x H)	156 cm x 37 cm x 45 cm
Number of Doors	4
Color	Natural Pine Wood



Image 7.1: Front view of the TV cabinet, highlighting its dimensions and design.

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the documentation provided at the time of purchase or contact your retailer directly. The manufacturer's warranty terms and conditions apply.