

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY AK59-00084A Replacement Remote Control Instruction Manual

## ALLIMITY AK59-00084A

# ALLIMITY AK59-00084A Replacement Remote Control Instruction Manual

For Samsung DVD VCR Combo Players

## 1. INTRODUCTION

This manual provides instructions for the ALLIMITY AK59-00084A replacement remote control. This remote is designed to function as a direct replacement for original Samsung DVD VCR Combo Player remote controls, specifically models such as AK59-00084A, DVD-VR375, DVDVR375A, and DVD-VR375/XAA. No programming or setup is required; simply insert batteries to begin operation.

## 2. SETUP: BATTERY INSTALLATION

The remote control requires two (2) 1.5V AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





*Image 2.1: Rear view of the remote control with the battery cover removed, showing the two AAA battery slots.*

### **3. OPERATING INSTRUCTIONS**

This remote control is designed for intuitive use with compatible Samsung DVD VCR Combo Players. Point the remote directly at the device's infrared receiver for optimal performance.



Image 3.1: Front view of the remote control, illustrating the layout of all buttons.

## Key Functions:

- **POWER:** Turns the DVD VCR Combo Player on or off.
- **TV/DVD/VCR SELECT:** Switches between TV, DVD, and VCR modes.
- **Number Buttons (0-9, TV 100+):** Used for direct channel selection or inputting numerical values.
- **PLAY (▶), PAUSE (⏏), STOP (■), SKIP (⏮ / ⏭):** Standard playback controls for DVD and VCR functions.
- **MENU:** Accesses the main menu of the DVD or VCR.
- **Directional Arrows (▲ ◀ ▼ ▶) & ENTER:** Navigates through menus and confirms selections.
- **TV VOL (+/-), TV MUTE:** Controls the television volume and mutes sound.
- **TRK/CBC CH/TV CH:** Adjusts tracking/channel for VCR or changes TV channels.
- **RETURN:** Returns to the previous screen or menu.
- **REC (●):** Initiates recording on the VCR.

- **DUBBING:** Used for dubbing content between DVD and VCR.
- **TITLE LIST / DISC MENU:** Accesses DVD title list or disc menu.
- **PLAY LIST / TITLE MENU:** Accesses DVD playlist or title menu.
- **EXIT:** Exits current menu or function.

4. COMPATIBLE MODELS

This ALLIMITY AK59-00084A replacement remote control is compatible with the following Samsung DVD VCR Combo Player models:

- AK59-00084A
- DVD-VR375
- DVDVR375
- DVDVR375A
- DVD-VR375A
- DVD-VR375/XAA

5. SPECIFICATIONS

| Feature               | Detail                                                                                                      |
|-----------------------|-------------------------------------------------------------------------------------------------------------|
| Model Number          | CV-00084A-SH (Replacement for AK59-00084A)                                                                  |
| Product Dimensions    | 5 x 1.38 x 0.72 inches (approximately 12.7 x 3.5 x 1.8 cm)                                                  |
| Item Weight           | 1.59 ounces (approximately 45 grams)                                                                        |
| Power Supply          | 2 x 1.5V AAA Batteries (not included)                                                                       |
| Special Feature       | Wireless Infrared (IR)                                                                                      |
| Color                 | Black                                                                                                       |
| Max Supported Devices | 1                                                                                                           |
| Compatible Devices    | Samsung DVD VCR Combo Players (also listed as Television in some specifications, but primarily for DVD/VCR) |



24 cm / 9.45 in



Image 5.1: Remote control dimensions, showing its length and width.

## 6. TROUBLESHOOTING

If the remote control is not functioning as expected, please refer to the following common issues and solutions:

- **Remote not responding:**

- Ensure the remote is pointed directly at the infrared sensor on your DVD VCR Combo Player.
- Check if the batteries are inserted correctly, observing the positive (+) and negative (-) polarity.
- Replace the batteries with new 1.5V AAA alkaline batteries.
- Ensure there are no obstructions between the remote control and the device.

- **Specific buttons not working:**

- Verify that the remote is in the correct mode (e.g., DVD, VCR, TV) using the SELECT buttons at the top.
- Clean the remote control's surface and buttons with a soft, dry cloth to remove any dust or debris that might be interfering with button presses.

## 7. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the remote control or exposing it to excessive force or moisture.

## 8. WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the retailer or manufacturer's policy at the time of purchase. For further assistance or inquiries, please contact the ALLIMITY customer support channel provided with your purchase.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

#### Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0DS1RBC2Q>

More documents and user manuals: <https://manuals.plus/>