



Manuals.plus /

› SUPNOVA /

› SUPNOVA Dynamic Jellyfish Air Humidifier & Essential Oil Diffuser User Manual (Model XXJ-01)

SUPNOVA XXJ-01

SUPNOVA Dynamic Jellyfish Air Humidifier & Essential Oil Diffuser User Manual

Model: XXJ-01

1. INTRODUCTION

Thank you for choosing the SUPNOVA Dynamic Jellyfish Air Humidifier & Essential Oil Diffuser. This device combines the benefits of a humidifier and an aromatherapy diffuser, featuring unique jellyfish mist effects and customizable lighting. Designed for use in homes, offices, and yoga spaces, it enhances your environment with fragrance and visual appeal. Please read this manual thoroughly before operation to ensure proper use and maintenance.



Image 1.1: The SUPNOVA Dynamic Jellyfish Air Humidifier and Essential Oil Diffuser in operation, showcasing its distinctive jellyfish-shaped mist and ambient lighting.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety guidelines:

- Avoid direct skin contact with undiluted essential oils.
- Keep the device out of reach of children and pets.
- Ensure proper ventilation in the area where the device is used.
- Do not ingest essential oils.
- Always unplug the device from the power outlet when not in use, during cleaning, or when refilling.
- Clean the water tank regularly to prevent mineral buildup and ensure optimal performance and hygiene.
- Do not place the diffuser on surfaces that are sensitive to water or moisture, as condensation may occur.
- Use only the provided power adapter.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- SUPNOVA Dynamic Jellyfish Air Humidifier & Essential Oil Diffuser (Model XXJ-01)
- Remote Control (includes 1 CR2032 battery)
- Power Adapter
- User Manual



Image 3.1: The complete package contents, showing the diffuser unit, remote control, power adapter, and instruction manual.

4. PRODUCT DIAGRAM

Familiarize yourself with the components of your diffuser:



Image 4.1: Front view of the diffuser, showing the power button, timer settings, and light control buttons.

- **Mist Outlets:** Where mist is released.
- **Water Tank:** Reservoir for water and essential oils (250ml capacity).
- **Control Panel:** Buttons for power, mist mode, light, and timer.
- **Power Port:** For connecting the DC power adapter.
- **Remote Control:** For wireless operation of all functions.

5. SETUP

Follow these steps to set up your diffuser for first use:

1. **Place the Diffuser:** Position the diffuser on a flat, stable surface away from direct sunlight or heat sources.
2. **Remove the Lid:** Gently lift the top cover of the diffuser.
3. **Fill Water Tank:** Pour clean tap water into the 250ml water tank. Do not exceed the maximum fill line.



Image 5.1: Illustration of filling the water tank with clean water.

4. **Add Essential Oil (Optional):** Add 2-3 drops of your preferred essential oil directly into the water tank. Adjust the quantity based on personal preference and room size.



Image 5.2: Illustration of adding essential oil to the water tank.

5. **Replace the Lid:** Carefully place the top cover back onto the diffuser, ensuring it is properly seated.
6. **Connect Power:** Plug the DC power adapter into the power port on the back of the diffuser, then

plug the adapter into a standard electrical outlet.

6. OPERATING INSTRUCTIONS

The diffuser can be operated using the control buttons on the unit or the included remote control.

6.1 Power On/Off

- **To Power On:** Press the power button (**ON**) on the unit or the remote control.
- **To Power Off:** Press the power button (**ON**) again.

6.2 Mist Modes

The diffuser offers two distinct mist modes:

- **Jellyfish Spray Mist Mode (Default):** Produces intermittent, ring-shaped mist that resembles jellyfish. Ideal for subtle ambiance.
- **Continuous Spray Mist Mode:** Emits a steady, dense fog for rapid fragrance diffusion.

Press the mist mode button (wavy symbol) on the unit or remote to switch between modes.

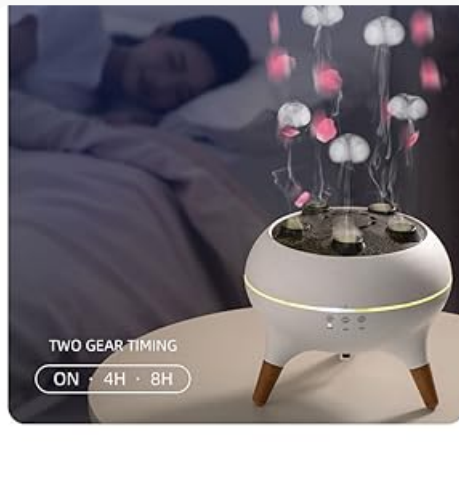


Image 6.1: Visual representation of the Jellyfish mist mode and the Continuous mist mode.

6.3 Light Settings

The diffuser features 7 color-changing LED lights. Press the light button (light bulb symbol) on the unit or remote to cycle through the options:

- **Dynamic Color Cycling:** Colors transition automatically.
- **Single Color Focus:** Select a specific color.
- **Gentle Nightlight Mode:** A softer, constant light.
- **Lights Off:** For undisturbed rest.



Image 6.2: The diffuser displaying various gradient light colors.

6.4 Timer Settings

Set the diffuser to operate for a specific duration:

- **4H Timer:** The diffuser will operate for 4 hours and then automatically shut off.
- **8H Timer:** The diffuser will operate for 8 hours and then automatically shut off.
- The device also features an automatic shut-off when the water level is low, ensuring safety.

Press the timer button (**4H/8H**) on the unit or remote to select the desired timer setting.

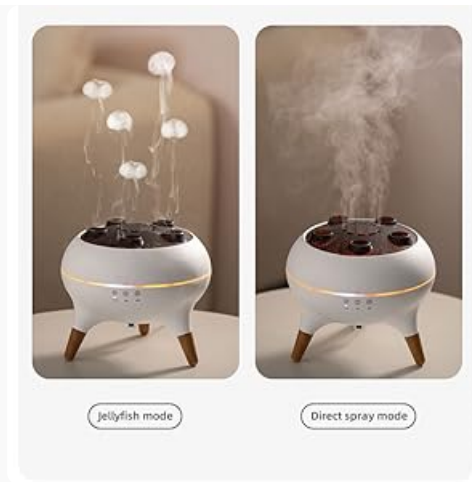


Image 6.3: The timer settings available on the diffuser.

6.5 Remote Control Operation

The included remote control allows convenient adjustment of settings from a distance (up to 10m/33ft).



Image 6.4: The remote control for the diffuser, showing its various buttons for function control.

- **Power Button:** Turns the unit on or off.
- **Mist Mode Button:** Cycles between Jellyfish and Continuous mist modes.
- **Light Button:** Cycles through light colors and turns lights off.
- **Timer Button:** Selects 4H or 8H timer.

7. MAINTENANCE

Regular cleaning is essential for optimal performance and longevity of your diffuser.

1. **Unplug the Device:** Always unplug the diffuser from the power outlet before cleaning.
2. **Empty Water Tank:** Remove the lid and carefully empty any remaining water from the tank.
3. **Clean the Tank:** Wipe the inside of the water tank with a soft cloth. For mineral buildup, use a cotton swab dipped in white vinegar to gently clean the ultrasonic plate. Rinse thoroughly with clean water, avoiding contact with the air outlet.
4. **Clean Exterior:** Wipe the exterior of the diffuser with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
5. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing the diffuser.

Note: Clean the diffuser after every 5-6 uses or every 3-5 days to prevent essential oil residue and mineral

buildup, which can affect mist output and device lifespan.

8. TROUBLESHOOTING

If you encounter issues with your diffuser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No mist or weak mist output.	<ul style="list-style-type: none">◦ Insufficient water in the tank.◦ Water level too high.◦ Ultrasonic plate dirty or blocked.◦ Lid not properly seated.	<ul style="list-style-type: none">◦ Add water to the appropriate level.◦ Ensure water is below the max fill line.◦ Clean the ultrasonic plate as per maintenance instructions.◦ Ensure the lid is securely placed.
Device does not power on.	<ul style="list-style-type: none">◦ Power adapter not connected.◦ No power from outlet.◦ Remote control battery depleted.	<ul style="list-style-type: none">◦ Check power connection.◦ Test outlet with another device.◦ Replace CR2032 battery in remote.
Lights not changing or not working.	<ul style="list-style-type: none">◦ Light function turned off.◦ Malfunction.	<ul style="list-style-type: none">◦ Press the light button to cycle through modes.◦ Contact customer support if issue persists.
Water leakage.	<ul style="list-style-type: none">◦ Overfilled water tank.◦ Lid not properly sealed.◦ Device tilted or unstable.	<ul style="list-style-type: none">◦ Ensure water is below max fill line.◦ Re-seat the lid firmly.◦ Place on a flat, stable surface.

9. SPECIFICATIONS

Brand	SUPNOVA
Model Name	XXJ-01
Capacity	250 Milliliters
Product Dimensions	6.3"L x 6.3"W x 5.5"H
Item Weight	1.52 pounds
Material	Acrylonitrile Butadiene Styrene (ABS), Polypropylene (PP)
Material Type Free	BPA Free, Lead Free
Power Source	DC
Special Features	Automatic Shut-Off, Multiple Light Setting, Multiple Mist Setting, Remote control, Timer Setting
Light Source Type	LED
Coverage	Medium to Large Room
Batteries	1 CR2032 battery required (included for remote)
UPC	784300724551

10. WARRANTY AND SUPPORT

For warranty information or technical support, please contact SUPNOVA customer service. Refer to the contact information provided on the product packaging or the official SUPNOVA website.

Please retain your proof of purchase for any warranty claims.