

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Chef Preserve](#) /
- › [Chef Preserve Glass Vacuum Seal Containers User Manual \(CP.GC123\)](#)

Chef Preserve CP.GC123

Chef Preserve Glass Vacuum Seal Containers User Manual

Model: CP.GC123

INTRODUCTION

Thank you for choosing Chef Preserve Glass Vacuum Seal Containers. This 3-piece set is designed to enhance your food storage by creating an airtight vacuum seal, significantly extending the freshness of your food. Crafted from durable borosilicate glass, these containers are versatile for various food types and storage needs. This manual provides essential information on the proper use and care of your new containers.



Image: A complete set of Chef Preserve Glass Vacuum Seal Containers, showcasing the three different sizes and the compatible handheld vacuum sealer.

KEY FEATURES

- **Airtight Vacuum Seal:** Designed to reduce air exposure, keeping food fresh longer.
- **Durable Borosilicate Glass:** Heat-resistant, BPA-free, and built for daily use.
- **Versatile Use:** Suitable for liquids and solids, ideal for meal prepping, marinating, and storing leftovers.
- **Stackable Design:** Optimizes space in refrigerators, freezers, and pantries.
- **Easy to Clean:** Dishwasher safe for convenient maintenance.

WHAT'S INCLUDED

Your Chef Preserve Glass Vacuum Seal Container set includes:

- 1 x Small Glass Vacuum Seal Container (16 fl oz / 0.5 L)
- 1 x Medium Glass Vacuum Seal Container (27 fl oz / 0.8 L)
- 1 x Large Glass Vacuum Seal Container (47 fl oz / 1.4 L)

- 3 x Vacuum Seal Lids (one for each container)

Note: The handheld vacuum sealer device is sold separately and is required to create the vacuum seal.



Image: The three containers included in the set, clearly showing their relative sizes and capacities.

OPERATING INSTRUCTIONS

How to Vacuum Seal

1. **Prepare Food:** Place your desired food item into the glass container. Ensure the container is not overfilled and the rim is clean and dry.
2. **Close the Lid:** Place the lid firmly onto the container. Press down around the edges to ensure a snug fit.
3. **Engage the Valve:** On the center of the lid, locate the grey valve. Push this valve all the way down to prepare for sealing.
4. **Start Sealing:** Position the handheld Chef Preserve vacuum sealer directly over the grey valve on the lid. Press down gently and activate the sealer. The device will begin to extract air from the container.
5. **Complete Seal:** The vacuum sealer will automatically stop once a sufficient vacuum has been achieved. Remove the sealer from the lid. The container is now airtight.

How to Open a Sealed Container

To release the vacuum and open the container:

- Locate the grey valve on the center of the lid.
- Gently pull the valve upwards until you hear a 'hissing' sound, indicating air re-entering the container.
- Once the air is released, the lid can be easily removed.

Date Tracking Feature

Each lid features a manual date dial. You can rotate the outer ring to select the month (1-12) and the inner ring to select the day (1-31). This allows you to track when the food was sealed or when it should be consumed by, helping to manage food freshness effectively.



Image: A visual guide demonstrating the simple steps to vacuum seal and unseal the containers.

MAINTENANCE AND CARE

Proper care ensures the longevity and performance of your Chef Preserve containers:

- **Cleaning:** Both the glass containers and the lids are dishwasher safe. For best results, hand wash the lids to preserve the silicone seal and valve mechanism.

- **Microwave Use:** The glass containers are microwave safe. **Always remove the lid before microwaving.**
- **Temperature Use:** Containers are safe for use in the refrigerator and freezer with the lids on.
- **Storage:** Store containers with lids loosely placed or removed to prevent odors and allow for air circulation.

SPECIFICATIONS

Feature	Detail
Brand	Chef Preserve
Model Number	CP.GC123
Material	Borosilicate Glass, Silicone (Lid Seal)
Container Shape	Rectangular
Number of Items	3 (1 Small, 1 Medium, 1 Large)
Small Container Size	16 fl oz (0.5 L)
Medium Container Size	27 fl oz (0.8 L)
Large Container Size	47 fl oz (1.4 L)
Dishwasher Safe	Yes
Microwave Safe	Yes (without lid)
Freezer Safe	Yes
Refrigerator Safe	Yes

SUPPORT

For any questions, concerns, or support regarding your Chef Preserve Glass Vacuum Seal Containers, please contact the manufacturer directly. Refer to the product packaging or the official Chef Preserve website for contact information.