

[Manuals.plus](#) /

› [Oilsky](#) /

› Oilsky M1 MP3 Player with Bluetooth 5.4 and 128GB Storage User Manual

Oilsky M1

Oilsky M1 MP3 Player User Manual

Model: M1 | Brand: Oilsky

[Introduction](#)

[What's in the
Box](#)

[Setup](#)

[Operating
Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &
Support](#)

1. INTRODUCTION

The Oilsky M1 MP3 Player is a portable digital music player designed for high-quality audio playback. It features Bluetooth 5.4 for stable wireless connections, a 2.4-inch touchscreen for easy navigation, and a built-in speaker. With 128GB of internal storage and support for an additional 128GB Micro SD card, it can store a vast library of music, audiobooks, and other media. This manual provides detailed instructions on how to set up, operate, and maintain your device.



Image 1.1: Front view of the Oilsky M1 MP3 Player, showcasing its compact design and touchscreen interface.

2. WHAT'S IN THE BOX

Please check the package contents upon unboxing to ensure all items are present:

- 1x Oilsky M1 MP3 Player
- 1x USB Charging Cable
- 1x Wired Headphones
- 1x User Manual (this document)
- 1x Protective Case
- 1x Lanyard

What's in the box

1x Music Player
1x User Manual

1x USB cable
1x Protective case

1x Earphones
1x Lanyard



Image 2.1: All included accessories and the MP3 player laid out, including the USB cable, headphones, protective case, and lanyard.

3. SETUP

3.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The device takes approximately 2 hours to fully charge, providing up to 50 hours of music playback.

3.2 Powering On/Off

- **To Power On:** Press and hold the power button until the screen lights up.
- **To Power Off:** Press and hold the power button until a power-off option appears on the screen, then confirm.

3.3 Inserting a Micro SD Card

The Oilsky M1 has 128GB of built-in memory and supports Micro SD cards up to an additional 128GB (not included). To expand storage:

1. Locate the Micro SD card slot on the side of the player.
2. Gently insert the Micro SD card into the slot with the gold contacts facing down until it clicks into place.
3. To remove, push the card inward until it springs out.

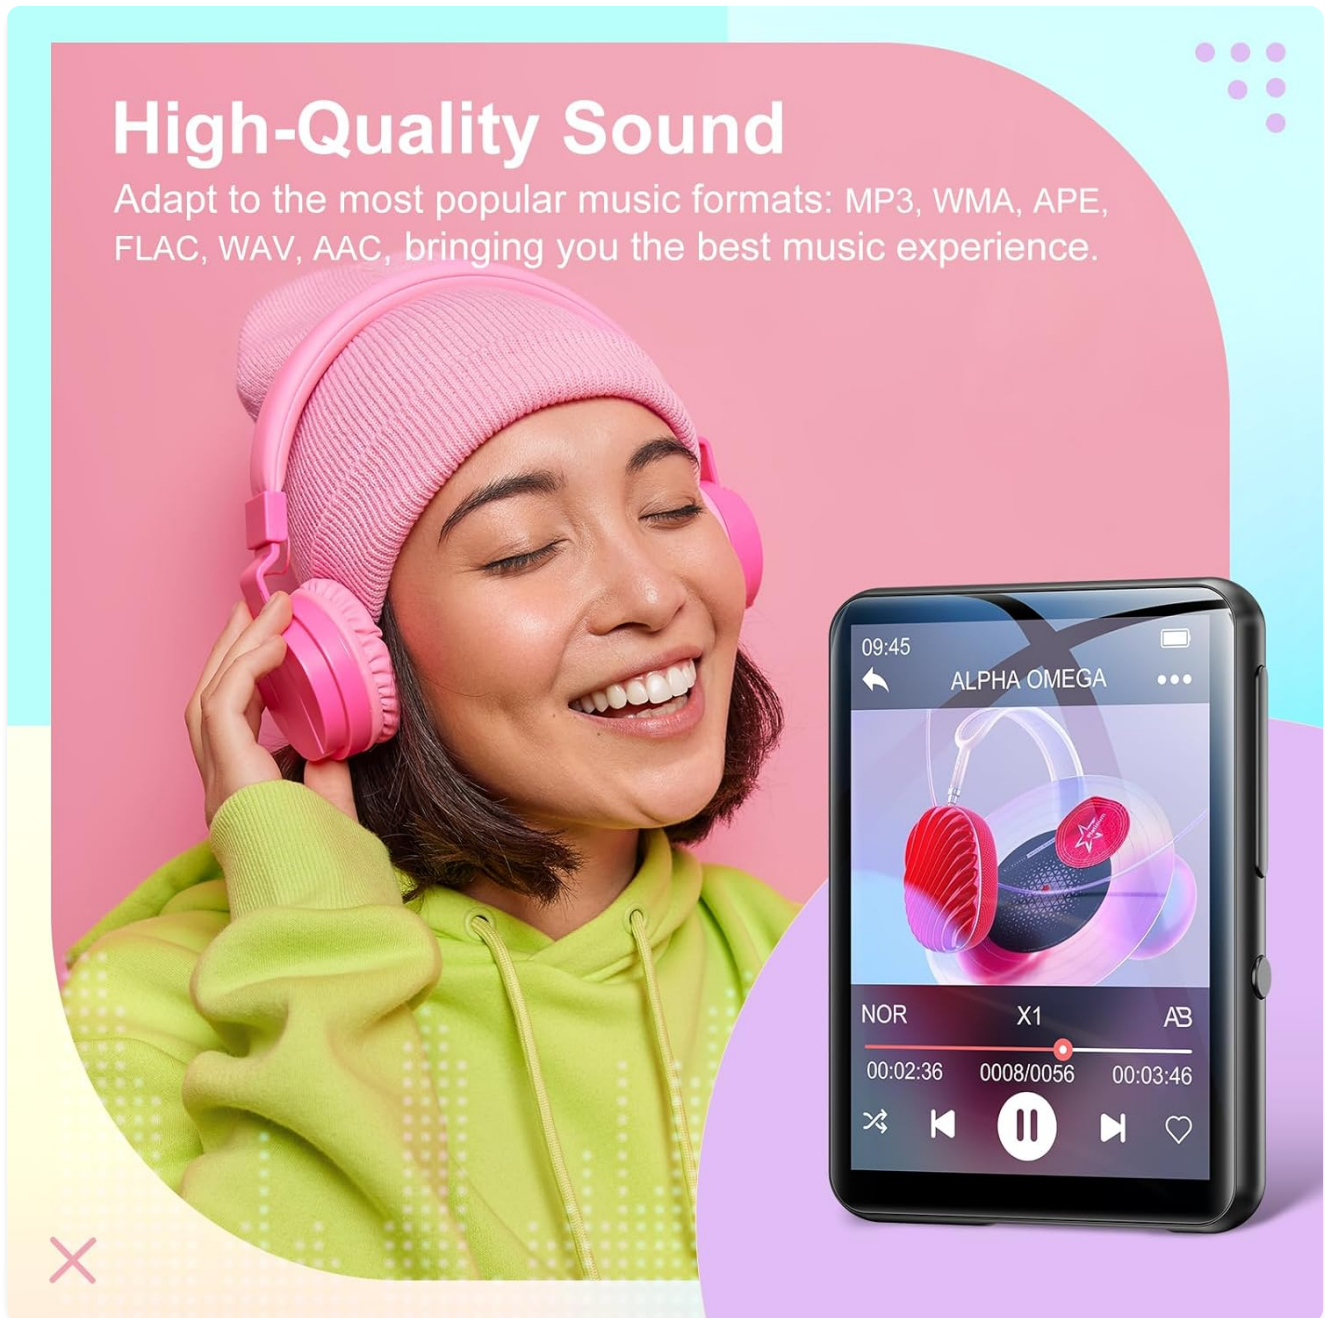 


Image 3.1: Visual representation of the 128GB internal memory and the option to expand storage with a Micro SD card.

3.4 Language Settings

The device supports English, German, French, Italian, Spanish, and 29 other languages. To change the language:

1. Go to the 'Settings' menu.
2. Select 'Language'.
3. Choose your preferred language from the list.

4. OPERATING INSTRUCTIONS

The Oilsky M1 features a 2.4-inch full touchscreen for intuitive control. Navigate through menus by swiping and tapping.



Image 4.1: A hand interacting with the full touchscreen interface of the MP3 player, demonstrating ease of use.

4.1 Music Playback

The player supports various audio formats including MP3, WMA, APE, FLAC, WAV, and AAC, providing high-fidelity sound with digital noise reduction. You can organize music by title, folder, artist, or album.

1. **Transferring Music:** Connect the player to your computer using the USB cable. The player will appear as a removable disk. Drag and drop your music files into the 'Music' folder on the device or Micro SD card.
2. **Playing Music:** From the main menu, tap 'Music'. You can browse by 'All Songs', 'Artists', 'Albums', 'Folders', etc. Tap a song to begin playback.
3. **Controls:** Use the on-screen controls for play/pause, next/previous track, and volume adjustment.

Full touch screen Easy to use

Full touch screen control and simple interface make this mp3 player very easy to use, Great for sports and kids!

 
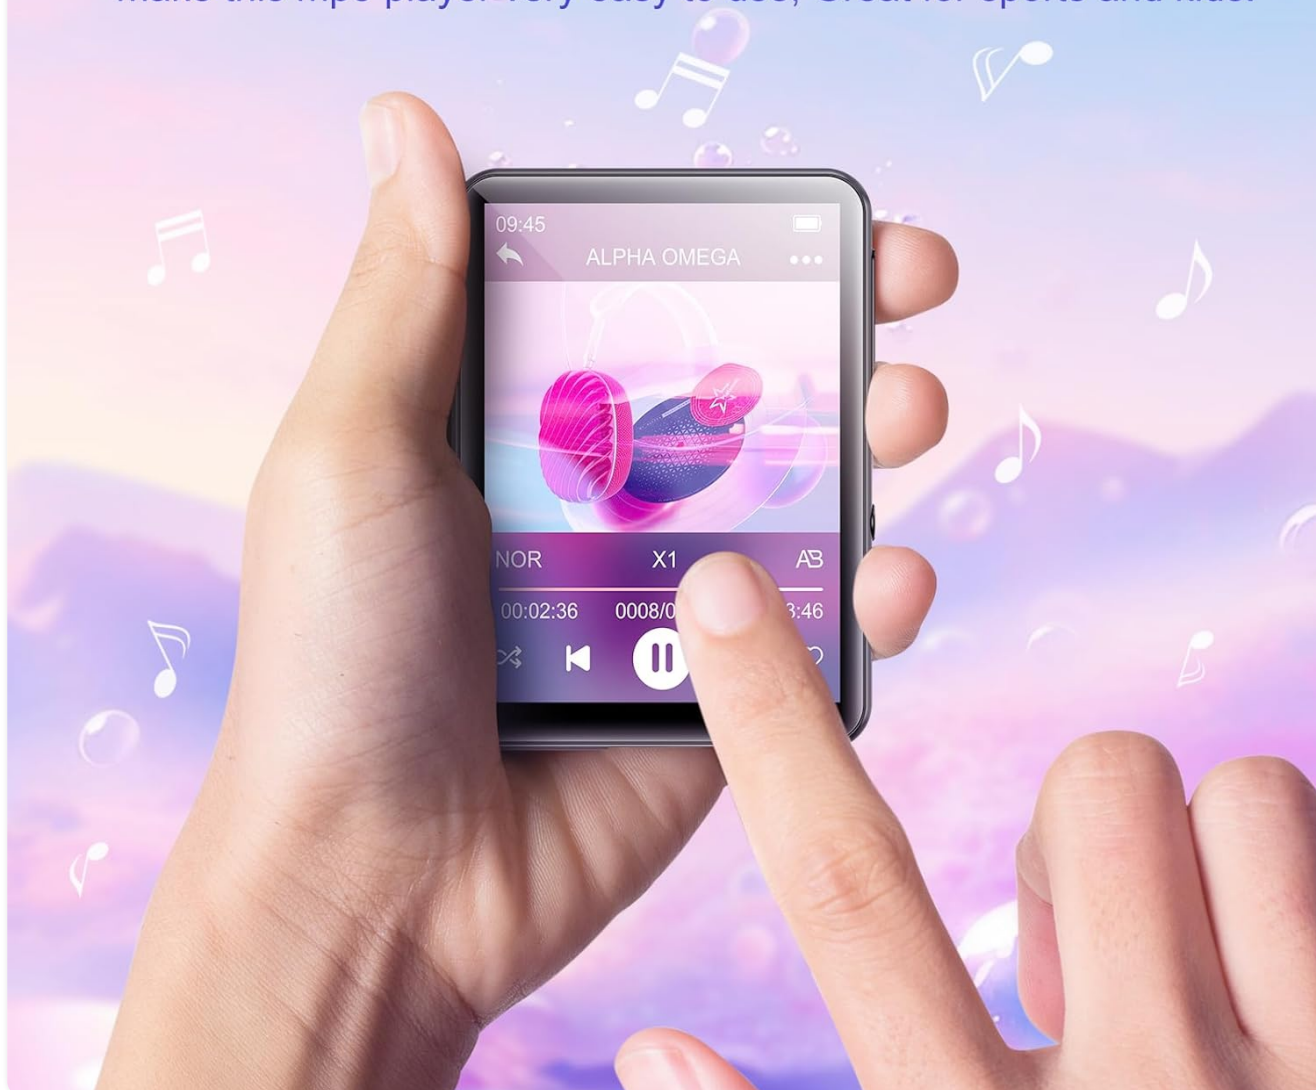 


Image 4.2: A user enjoying music with headphones connected to the Oilsky M1 MP3 Player, highlighting the high-quality sound experience.

Support Multiple Formats

Music formats

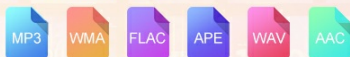

E-book formats



Image formats



Image 4.3: Display illustrating the multiple audio formats supported by the MP3 player, including MP3, WMA, APE, FLAC, WAV, and AAC.

4.2 Bluetooth Connection

The player features Bluetooth 5.4 for connecting to Bluetooth headphones and speakers. It includes a memory function that automatically reconnects to previously paired devices. **Note: The player cannot connect to mobile phones or car Bluetooth systems.**

1. From the main menu, tap 'Bluetooth'.
2. Turn on Bluetooth. The player will scan for nearby devices.
3. Select your desired Bluetooth headphones or speaker from the list to pair.



Image 4.4: The MP3 player screen showing the Bluetooth connection icon, indicating stable and fast Bluetooth 5.4 connectivity to external audio devices.

4.3 FM Radio

To use the FM radio function:

1. Connect the wired headphones (they act as an antenna).
2. From the main menu, tap 'FM Radio'.
3. Use the on-screen controls to scan for stations or manually tune.

4.4 Voice Recorder

The player includes a built-in microphone for digital voice recording.

1. From the main menu, tap 'Recordings'.
2. Tap the record icon to start and stop recording.
3. Recordings are saved and can be played back from this menu.

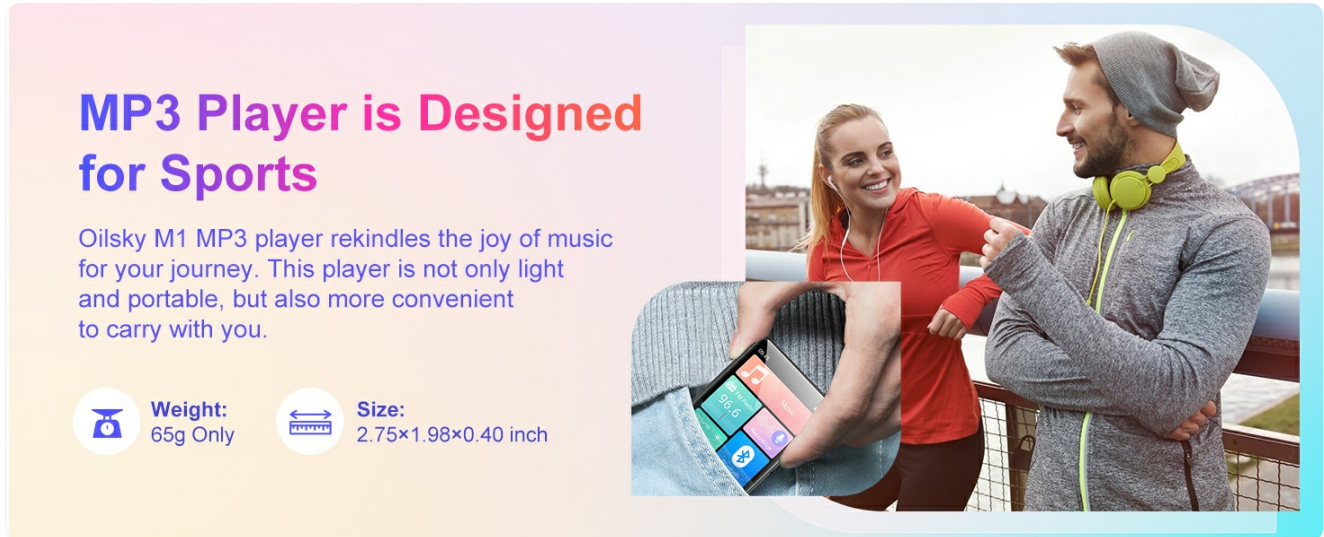 
A promotional graphic for the Oilsky M1 MP3 player. On the left, there is a text box with a purple-to-pink gradient background. The text reads: "MP3 Player is Designed for Sports" in large, bold letters. Below this, it says: "Oilsky M1 MP3 player rekindles the joy of music for your journey. This player is not only light and portable, but also more convenient to carry with you." At the bottom left of the text box, there are two icons: a scale icon with the text "Weight: 65g Only" and a ruler icon with the text "Size: 2.75x1.98x0.40 inch". On the right side of the graphic, there is a photograph of a man and a woman in athletic wear. The man is wearing a grey hoodie and a grey beanie, and the woman is wearing a red hoodie. They are both smiling and looking at each other. In the foreground, a hand is holding the MP3 player, which is displaying a colorful interface with various icons. The background of the photo shows a cityscape with buildings and a bridge.

Image 4.5: The MP3 player displaying its voice recording interface, useful for capturing notes or conversations.

4.5 E-Book Reader

The player supports TXT format e-books.

1. Transfer TXT files to the 'E-book' folder on the device.
2. From the main menu, tap 'E-book' to access your library.

4.6 Photo Viewer

View JPEG/BMP image files on the 2.4-inch screen.

1. Transfer image files to the 'Pictures' folder.
2. From the main menu, tap 'Pictures' to browse your photos.

4.7 Alarm Function

Set alarms using your favorite music as the ringtone.

1. From the main menu, tap 'Alarm'.
2. Configure alarm time, repeat settings, and select a music file for the alarm sound.

Support Alarm Function

This MP3 player has an alarm function, and you can set your favorite music as the alarm ringtone.

As parents, we don't want to see our children get in touch with smartphones too early. Therefore, this MP3 player can not only bring pleasant music to children, but also help them get up on time.



Image 4.6: The MP3 player displaying an alarm clock icon, indicating its alarm function capability.

5. MAINTENANCE

5.1 Cleaning

- Wipe the device with a soft, dry cloth.
- Do not use liquid cleaners or aerosols, as they may damage the device.

5.2 Battery Care

- Avoid exposing the device to extreme temperatures.
- Charge the device regularly, even if not in use, to maintain battery health.

5.3 Storage

When not in use for extended periods, store the player in a cool, dry place, away from direct sunlight and moisture.

6. TROUBLESHOOTING

Problem	Possible Solution
Device does not turn on.	Ensure the device is fully charged. If the battery is depleted, it may take a few minutes of charging before it can power on.
Bluetooth headphones/speaker won't connect.	Ensure Bluetooth is enabled on both devices. Make sure the headphones/speaker are in pairing mode. Confirm the MP3 player is not attempting to connect to a mobile phone or car system, as this is not supported.
Cannot transfer files to the player.	Check the USB cable connection. Ensure the player is properly recognized by your computer. Try a different USB port or cable.

Problem	Possible Solution
Music playback is distorted or silent.	Check headphone connection or Bluetooth connection. Ensure volume is not muted and is set to an audible level. Verify the audio file format is supported.
Screen is unresponsive.	Perform a soft reset by pressing and holding the power button for 10-15 seconds. If the issue persists, ensure the device is charged.

7. SPECIFICATIONS

Feature	Detail
Brand	Oilsky
Model Number	M1
Special Features	Touchscreen, Built-in Speaker, Digital Noise Reduction
Connectivity Technology	Bluetooth 5.4, USB
Internal Storage	128 GB
Expandable Storage	Micro SD card up to 128 GB
Color	Black
Screen Size	2.4 Inches
Compatible Devices	Bluetooth Speakers, Bluetooth Headphones, Personal Computers
Supported Audio Formats	MP3, WMA, APE, FLAC, WAV, AAC
Supported E-book Format	TXT
Supported Image Formats	JPEG, BMP
Battery Life	Up to 50 Hours
Charging Time	Approximately 2 Hours
Item Weight	65 Grams
Item Dimensions (D x W x H)	1 cm x 5 cm x 7 cm

8. WARRANTY AND SUPPORT

8.1 Warranty Policy

Oilsky offers a one-year return policy for this product. This warranty covers manufacturing defects and issues arising from normal use.

8.2 Customer Support

Our team is dedicated to providing prompt, attentive, and high-quality support. We guarantee a response within 24 hours for any inquiries or issues you may have.

For assistance, please contact us through the platform where you purchased the product or refer to the contact information provided on the official Oilsky website.

We are committed to ensuring your satisfaction with your Oilsky M1 MP3 Player.