

electric toothbrush for kids 4-7 2 pack

Generic Electric Toothbrush User Manual

Model: electric toothbrush for kids 4-7 2 pack | Brand: generic

1. INTRODUCTION

Thank you for choosing the Generic Electric Toothbrush. This manual provides essential information for the safe and effective use of your new electric toothbrush. Please read it thoroughly before first use and keep it for future reference. This toothbrush is designed to provide a deep and effective clean, promoting better oral hygiene.

2. SAFETY INFORMATION

- Do not use this product for any purpose other than oral cleaning.
- Keep the toothbrush out of reach of small children.
- Consult a dentist before use if you have severe gum disease, oral surgery, or other oral health concerns.
- Do not immerse the charging base in water. The toothbrush handle is IPX7 waterproof, but the charging base is not.
- Do not attempt to disassemble or repair the toothbrush yourself. Contact customer support for assistance.
- Ensure the USB-C charging port cover is securely closed before exposing the toothbrush to water.

3. PACKAGE CONTENTS

Please check that all items are present in your package:

- 1 x Electric Toothbrush Handle
- 4 x Replacement Brush Heads
- 1 x USB-C Charging Cable (Charger not included, use a standard USB power adapter)



Figure 1: Package contents including the toothbrush handle, four brush heads, and charging cable.

4. PRODUCT OVERVIEW

The Generic Electric Toothbrush is designed for effective oral cleaning with advanced sonic technology. It features multiple brushing modes, a smart timer, and a long-lasting rechargeable battery.



Figure 2: Overview of the electric toothbrush design.

Key Features:

- **High-Frequency Vibrations:** Up to 40,000 vibrations per minute for effective plaque removal.
- **8 Brushing Modes:** Customizable cleaning experience for various oral care needs.
- **Smart Timer:** Built-in 2-minute timer with 30-second interval reminders.
- **Long Battery Life:** Up to 120 days of use on a single 2.5-hour charge.
- **IPX7 Waterproof:** Allows for safe use in the shower or bath.
- **USB-C Charging:** Convenient and fast charging.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the toothbrush for approximately 3 hours to activate the battery. The battery indicator light will show charging status.

1. Open the waterproof cover at the bottom of the toothbrush handle.

2. Insert the USB-C charging cable into the port.
3. Connect the other end of the USB-C cable to a standard USB power adapter (not included) and plug it into a power outlet.
4. Once charging is complete, remove the cable and securely close the waterproof cover.



Figure 3: Charging the electric toothbrush via USB-C.

5.2 Attaching a Brush Head

Align the brush head with the metal shaft on the toothbrush handle and push it down firmly until it clicks into place. Ensure it is securely attached before use.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Mode Selection

1. Press the power button once to turn on the toothbrush. It will start in the last used mode.
2. Press the power button repeatedly to cycle through the 8 available modes.
3. To turn off the toothbrush, press and hold the power button for 2 seconds, or cycle through all modes until it turns off automatically.

8 modes with LED indicator offers varying oral care needs

- **White**
Inverted frequency for gum care.
- **Clean**
Gentle frequency for sensitive gums.
- **Nurse**
Standard daily teeth cleaning
- **Care**
Improve gum health by delivering soothing into tissue.
- **Soft**
Low frequency for soft cleaning.
- **Polish**
Super-strong frequency for aliminate stubborn stains.
- **Pluse**
For massage & protect gums.
- **Brightening**
Deep whitening teeth.



Figure 4: The 8 brushing modes and their LED indicators.

6.2 Brushing Modes

The toothbrush offers 8 distinct modes to cater to various oral care needs:

- **White:** Inverted frequency for gum care.
- **Clean:** Gentle frequency for sensitive gums.
- **Nurse:** Standard daily teeth cleaning.
- **Care:** Improves gum health by delivering soothing vibrations into tissue.
- **Soft:** Low frequency for soft cleaning.
- **Polish:** Super-strong frequency to eliminate stubborn stains.
- **Pulse:** For massage and protecting gums.
- **Brightening:** Deep whitening teeth.

6.3 Brushing Technique and Smart Timer

Apply a small amount of toothpaste to the brush head. Place the brush head against your teeth at a slight angle towards the gumline. Gently move the brush across your teeth, allowing the sonic vibrations to do the work. Do not scrub vigorously.

The built-in smart timer will automatically turn off the toothbrush after 2 minutes, which is the dentist-

recommended brushing time. Additionally, it will pause briefly every 30 seconds to remind you to move to a different quadrant of your mouth, ensuring a thorough and even clean.

INTELLIGENT REMINDER

- Charge it 12 times a year
- Good news for cancer lazy people
- Travel or business
- No more bad hotel toothbrushes
- Go home for the holidays
- Don't worry about running out of power



Figure 5: Intelligent reminder for 2-minute brushing with 30-second intervals.

7. CLEANING AND MAINTENANCE

7.1 Cleaning the Toothbrush

1. After each use, rinse the brush head thoroughly under running water.
2. Wipe the toothbrush handle with a damp cloth. Do not use abrasive cleaners or harsh chemicals.
3. Ensure the USB-C charging port cover is always closed when not charging to maintain its IPX7 waterproof rating.



Figure 6: The toothbrush features an IPX7 waterproof design.

7.2 Replacing Brush Heads

Dentists recommend replacing brush heads every 3 months, or sooner if the bristles become frayed. To replace:

1. Pull the old brush head straight off the handle.
2. Align the new brush head with the metal shaft and push it down firmly until it clicks into place.

7.3 Storage

Store the toothbrush in a cool, dry place when not in use. Ensure it is clean and dry before storing.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toothbrush does not turn on.	Battery is depleted.	Charge the toothbrush for at least 3 hours.

Problem	Possible Cause	Solution
Toothbrush does not charge.	Charging cable or adapter faulty; port not connected properly.	Ensure the USB-C cable is securely connected to both the toothbrush and a working USB power adapter. Try a different cable or adapter.
Weak vibration or reduced performance.	Low battery; brush head worn out.	Recharge the toothbrush. Replace the brush head if bristles are frayed.
Brush head falls off during use.	Brush head not securely attached.	Ensure the brush head is pushed down firmly until it clicks into place.

9. SPECIFICATIONS

Feature	Specification
Model Number	electric toothbrush for kids 4-7 2 pack
Brand	generic
Vibration Frequency	Up to 40,000 VPM
Brushing Modes	8 Modes (White, Clean, Nurse, Care, Soft, Polish, Pulse, Brightening)
Smart Timer	2-minute auto-off with 30-second interval reminders
Battery Life	Up to 120 days on a 2.5-hour charge
Charging Port	USB-C
Waterproof Rating	IPX7 (Whole-body waterproof)
Included Components	Toothbrush Handle, 4 Replacement Brush Heads, USB-C Charging Cable
Item Weight	4.48 ounces
Brush Head Firmness	Medium
Color (for this variant)	Pink

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.