

[Manuals.plus](#) /

› [VERMESS](#) /

› VERMESS 5CYMJ-BK 47" Tall 5 Fabric Drawers Dresser with Hanging Rack Instruction Manual

VERMESS 5CYMJ-BK

VERMESS 5CYMJ-BK 47" Tall 5 Fabric Drawers Dresser with Hanging Rack Instruction Manual

Model: 5CYMJ-BK | Brand: VERMESS

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your VERMESS 5CYMJ-BK 47" Tall 5 Fabric Drawers Dresser with Hanging Rack. Please read all instructions carefully before assembly and use to ensure safe and proper functionality.



Image 1.1: Fully assembled VERMESS 5CYMJ-BK dresser in a bedroom setting.

2. SAFETY INFORMATION

Please observe the following safety precautions:

- **Anti-Tip Device:** Always install the included anti-tip device to prevent the dresser from tipping over, which can cause serious injury.
- **Weight Limits:** Do not overload drawers or shelves. Distribute weight evenly. The top surface has a maximum weight capacity.
- **Electrical Safety:** The integrated charging station is designed for indoor use only. Do not expose to moisture. Ensure the power cord is not pinched or damaged. Unplug when not in use or during cleaning.
- **Assembly:** Assemble on a soft, clean surface to prevent scratches. Ensure all fasteners are securely tightened before use.
- **Children:** Keep small parts away from children during assembly. Do not allow children to climb on the dresser.
- **Ventilation:** If a new product odor is present from the fabric drawers, ensure adequate ventilation in the room. This typically dissipates over time.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer service.

Part	Description	Quantity
A	Metal Frame Components	Varies
B	Top Wooden Board	1
C	Bottom Shelf Boards	Varies
D	Fabric Drawers	5
E	Hanging Rod	1
F	Charging Station Unit	1
G	LED Light Strip	1
H	Assembly Hardware (screws, wrench, etc.)	1 set
I	Anti-Tip Kit	1 set

4. SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have two people for assembly.

- Unpack Components:** Lay out all parts on a clean, soft surface to prevent damage. Refer to the parts list to ensure everything is present.
- Assemble the Metal Frame:** Connect the vertical and horizontal metal frame components using the provided screws and wrench. Ensure all connections are secure but do not overtighten initially.
- Install Shelf Boards:** Place the wooden shelf boards into their designated slots within the metal frame. Secure them if fasteners are provided.
- Attach Top Board:** Secure the top wooden board to the assembled metal frame.
- Assemble Fabric Drawers:** Each fabric drawer typically involves inserting a bottom panel and a front handle.



Image 4.1: Steps for assembling the fabric drawers.

6. **Insert Drawers:** Place the assembled fabric drawers into their respective compartments in the dresser frame.
7. **Install Hanging Rod:** Attach the hanging rod to the designated supports within the open closet section.
8. **Mount Charging Station:** Secure the charging station unit to the top surface of the dresser, typically at the rear, ensuring the power cord can reach an outlet.
9. **Apply LED Light Strip:** Adhere the LED light strip along the inside edge of the hanging rack section. Ensure the power cable for the LED strip is routed safely.
10. **Install Anti-Tip Kit:** Secure the anti-tip device to the back of the dresser and to a wall stud, following the instructions provided with the kit. This step is critical for safety.
11. **Final Tightening:** Once all components are in place, go back and securely tighten all screws and fasteners.



Image 4.2: Overview of the assembled dresser with key features highlighted.

5. OPERATING INSTRUCTIONS

5.1 Charging Station

The dresser includes a built-in charging station with 3 AC outlets (120V/12A) and 2 USB ports (5V/2A).

- **Power Connection:** Plug the dresser's main power cord into a standard wall outlet.
- **Using AC Outlets:** Insert your device's power adapter into one of the 3 AC outlets.
- **Using USB Ports:** Connect your device's USB charging cable to one of the 2 USB ports.
- **Safety:** Do not exceed the maximum electrical load. Unplug the dresser from the wall outlet when not in use or during electrical storms.



Image 5.1: Detail of the integrated charging station.

5.2 LED Lights

The dresser features an RGB LED light strip with adjustable colors, brightness, and dynamic modes.

- **Power On/Off:** Use the included remote control or integrated switch to turn the LED lights on or off.
- **Color Selection:** Select from 20+ colors using the remote control.
- **Dynamic Modes:** Choose from 21 dynamic modes for various lighting effects.

- **Brightness Adjustment:** Adjust the light intensity using the 8 brightness modes.
- **Speed Modes:** Control the speed of dynamic lighting effects with 8 speed modes.
- **Timing Functions:** Utilize timing functions for automatic shut-off.



Image 5.2: LED lights in operation, demonstrating color and mode options.

6. MAINTENANCE

- **Cleaning:** Wipe the wooden and metal surfaces with a dry, soft cloth. For fabric drawers, spot clean with a damp cloth and mild detergent if necessary, then air dry completely. Do not use harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust all surfaces to prevent buildup.
- **Drawer Care:** Avoid overfilling fabric drawers to maintain their shape and integrity.
- **Electrical Components:** Keep the charging station and LED lights free from dust and debris. Do not attempt to disassemble or repair electrical components.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dresser is wobbly or unstable.	Loose fasteners; uneven floor; anti-tip device not installed.	Ensure all screws are tightened. Adjust the adjustable feet if present. Install the anti-tip device securely to a wall stud.
Fabric drawers have an odor.	New product off-gassing.	Ensure the room is well-ventilated. The odor should dissipate over a few days.
Charging station not working.	Not plugged in; power outage; faulty device.	Check if the dresser's power cord is securely plugged into a working outlet. Test with another device. If issues persist, contact customer support.
LED lights not turning on.	Power cord unplugged; remote battery dead; light strip connection loose.	Verify the LED light strip is properly connected and the dresser is plugged in. Replace remote battery. Check for loose connections.
Clothes on hanging rack touch the bottom shelf.	Longer garments.	This unit is designed for shorter garments or folded items on the bottom shelf. Consider folding longer items or using the drawers.

8. SPECIFICATIONS

Feature	Detail
Brand	VERMESS
Model Number	5CYMJ-BK
Material	Wood, Metal, Non-Woven Fabric (drawers)
Product Dimensions (L x W x H)	118W x 36D x 119.2H Centimetres (approx. 46.5"W x 14.2"D x 47"H)
Number of Drawers	5
Color	Black
Charging Station	3 AC Outlets (120V/12A), 2 USB Ports (5V/2A)
LED Lights	RGB, 20+ Colors, 21 Dynamic Modes, 8 Speed Modes, 8 Brightness Modes, Timing Functions
Assembly Required	Yes
Product Weight	Approx. 43.21 Pounds

PRODUCT SIZE

Fabric Drawer

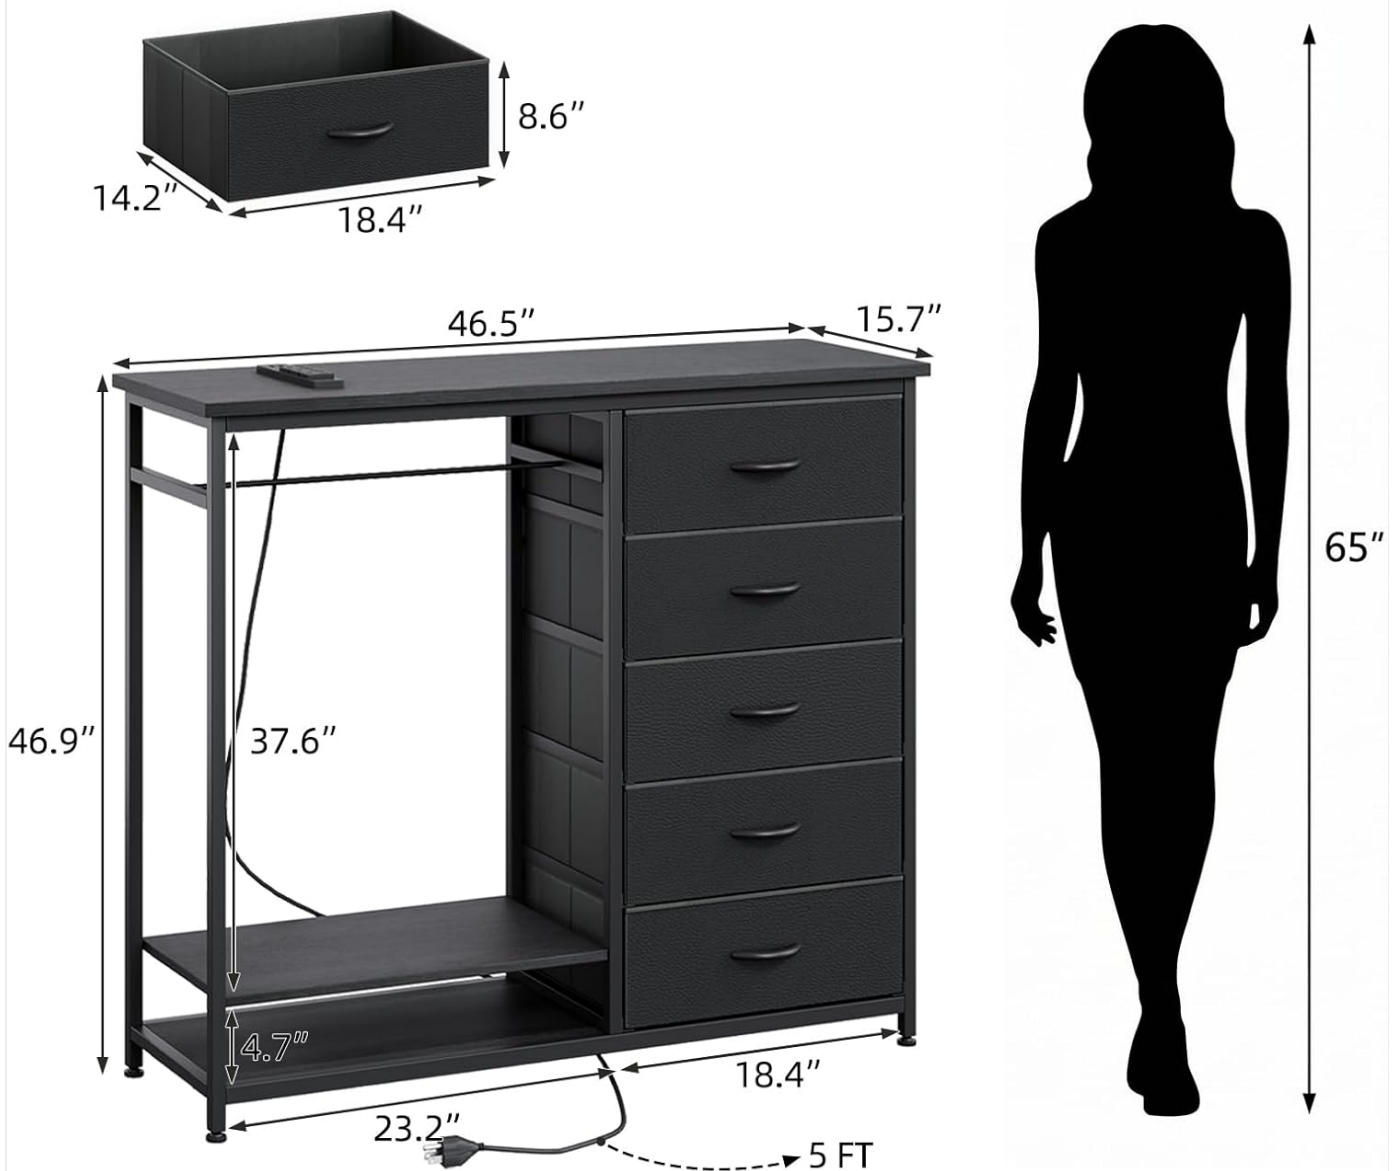


Image 8.1: Detailed product dimensions.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact VERMESS customer service directly. Keep your purchase receipt for warranty claims.

Contact information for VERMESS can typically be found on their official website or through the retailer where the product was purchased.

