

[Manuals.plus](#) /

› [Scosche](#) /

› Scosche SCOVAC 4-in-1 Cordless Handheld Vacuum Cleaner User Manual

Scosche SCOVAC-VA

Scosche SCOVAC 4-in-1 Cordless Handheld Vacuum Cleaner User Manual

Model: SCOVAC-VA

INTRODUCTION

The Scosche SCOVAC is a versatile 4-in-1 cordless handheld device designed for various cleaning and inflation tasks. It functions as a vacuum cleaner, air duster, inflator, and deflator, making it suitable for use in vehicles, homes, offices, and for outdoor equipment. This manual provides instructions for proper setup, operation, and maintenance to ensure optimal performance and longevity of your device.

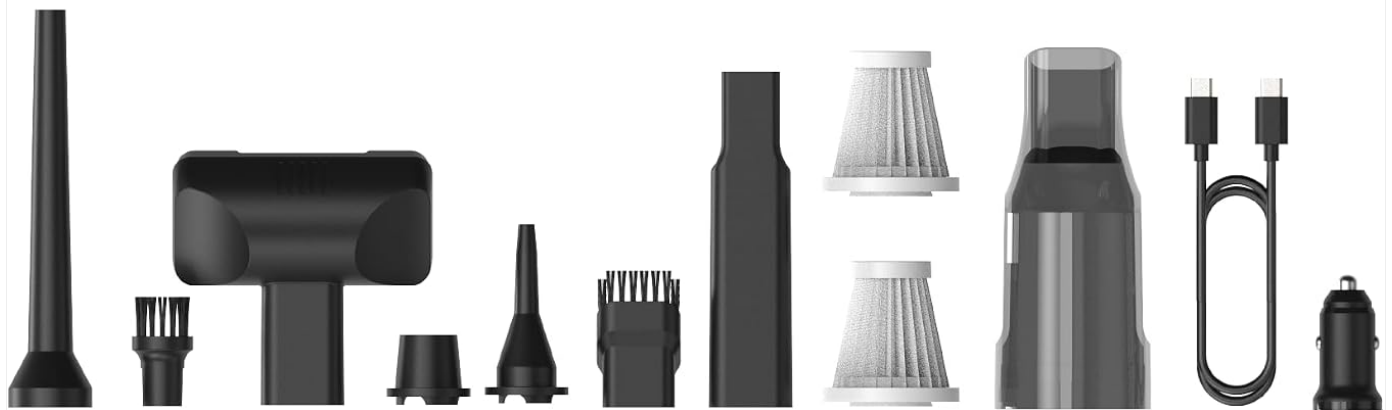


Image: The Scosche SCOVAC 4-in-1 device shown with its various attachments, including nozzles, brushes, and filters.

PRODUCT OVERVIEW AND CONTENTS

The SCOVAC 4-in-1 device is compact and lightweight, designed for portability and ease of use. It features a powerful motor with two operating modes (Eco and Turbo) and a rechargeable lithium-ion battery.

What's in the Box:

WHAT'S IN THE BOX?

2 Reusable, washable HEPA filters included



- ScoVac Mini Vacuum
- 8 Attachments with Drawstring Bag
- Carrying Case
- 3 Ft USB-C to USB-C Cable
- 12V Car Charger



Image: A view of the protective carrying case open, displaying the SCOVAC unit and its organized accessories.

- SCOVAC High Power Cordless Mini Vacuum & Duster
- 8 Attachments (various nozzles and brushes)
- Accessory Bag
- Protective Carrying Case
- USB-C to USB-C Cable
- 12V Car Charger Adapter
- 2 Washable HEPA Filters (one pre-installed, one spare)



Image: A detailed display of all eight included attachments, filters, and charging accessories.

SETUP

1. Initial Charging:

Before first use, fully charge the SCOVAC device. Connect the provided USB-C cable to the device's charging port and the other end to the 12V car charger adapter or a compatible USB-C power source. The charging indicator lights will provide status. A full charge ensures maximum battery life for initial operation.

2. Filter Installation:

Ensure a HEPA filter is correctly installed in the dust cup before operation. The device comes with one filter pre-installed. To access or replace the filter, twist the dust cup counter-clockwise to detach it from the main unit.

3. Attaching Accessories:

Select the appropriate attachment for your task. Firmly push the desired nozzle or brush onto the vacuum's intake or exhaust port until it is securely in place. For inflation/deflation, use the specific nozzles on the exhaust port.

OPERATING INSTRUCTIONS

The SCOVAC features two power modes: Eco and Turbo. Press the power button once for Eco mode, and a second time for Turbo mode. Press a third time to turn off the device.

Vacuum Function:

Attach a vacuum nozzle (e.g., crevice tool, brush tool) to the intake port. Select Eco mode for general cleaning or Turbo mode for stronger suction on stubborn debris like pet hair or larger crumbs. Direct the nozzle over the area to be cleaned. The device is effective for car interiors, small spills at home, or office desks.



Image: The SCOVAC in use, demonstrating its vacuuming capability on a car seat, operating in Turbo mode for maximum suction.

Air Duster Function:

Attach a suitable nozzle to the exhaust port. Use the duster function to clear dust from keyboards, delicate electronics, or hard-to-reach areas. The airflow can dislodge debris without direct contact.

VACUUM



INFLATOR



**4 IN 1: VACUUM, DUSTER,
INFLATOR & DEFLATOR**



DUSTER



DEFLATOR

Image: A composite image showing the SCOVAC performing its four main functions: vacuuming a car seat, inflating a pool toy, dusting a keyboard, and deflating a storage bag.

Inflator Function:

Attach the appropriate inflator nozzle to the exhaust port. Select Eco mode for inflating items such as pool toys, air mattresses, or small inflatables. Ensure the nozzle fits snugly into the item's valve.



Image: The SCOVAC inflating a pink pool float, illustrating its use in Eco mode for inflation tasks.

Deflator Function:

Attach a deflator nozzle to the exhaust port. Use this function to quickly remove air from storage bags or other inflatable items, making them more compact for storage or transport.

MAINTENANCE

Emptying the Dust Cup:

Regularly empty the dust cup to maintain optimal suction power. Twist the dust cup counter-clockwise to detach it from the main unit. Dispose of collected debris. Reattach the dust cup by aligning and twisting clockwise until secure.



Image: A user emptying the contents of the dust cup into a trash receptacle, demonstrating proper disposal of collected debris.

Cleaning the HEPA Filter:

The included HEPA filters are washable and reusable. After detaching the dust cup, carefully remove the filter. Rinse the filter under running water until clean. Allow the filter to air dry completely before reinserting it into the dust cup. Do not use the device with a wet filter.



Image: A user demonstrating how to remove the HEPA filter from the dust cup for cleaning or replacement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device using the provided USB-C cable and charger.
Low suction power.	Dust cup is full or filter is clogged.	Empty the dust cup and clean or replace the HEPA filter.
Attachments do not fit securely.	Incorrect attachment or improper alignment.	Ensure the correct attachment is used and firmly push it onto the port until it clicks into place.
Device stops unexpectedly.	Battery is low or device overheated.	Recharge the battery. If overheated, allow the device to cool down before resuming use.


SPECIFICATIONS

Feature	Detail
Brand	Scosche
Model Name	SCOVAC 4-in-1
Item Model Number	SCOVAC-VA

Feature	Detail
Special Features	Compact, Cordless, HEPA Filter, Rechargeable, Washable Filter
Filter Type	HEPA Filter
Power Source	Battery Powered (Lithium-Ion)
Battery Life	Up to 32 minutes (Eco mode), 16 minutes (Turbo mode)
Suction Power	12000 PA
Dust Cup Capacity	120 Milliliters
Product Dimensions	8.4"L x 1.9"W x 5.7"H
Item Weight	13.6 ounces
Connectivity Technology	USB-C Charging
Number of Speeds	2 (Eco, Turbo)

HIGH POWERED CORDLESS MINI VACUUM AND DUSTER

8 Accessories included for multi-surface cleaning

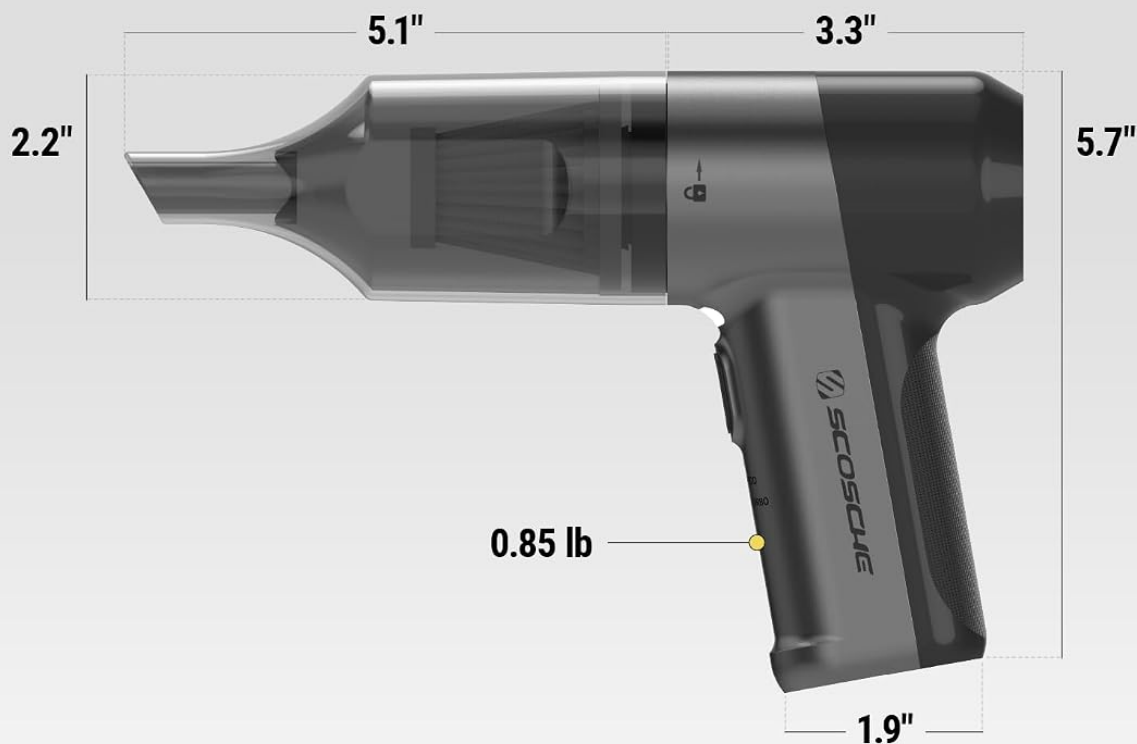

**RECHARGABLE
LI-ION BATTERIES**



**3 FT USB-C / USB-C
CABLE INCLUDED**

Image: Technical diagram illustrating the dimensions (length, width, height) and weight of the SCOVAC unit, along with icons for rechargeable battery and USB-C cable.

WARRANTY AND SUPPORT

The Scosche SCOVAC 4-in-1 Cordless Handheld Vacuum Cleaner is backed by a **3-Year Limited Warranty**. This warranty covers defects in materials and workmanship under normal use. For warranty claims or technical assistance, please contact Scosche customer support.

Scosche also provides **Lifetime Technical Support** for this product. If you encounter any issues or have questions regarding the operation, maintenance, or troubleshooting of your device, please reach out to their support team for

assistance.

For further information, visit the official Scosche website or refer to the contact details provided in your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question