
[Manuals.plus](#) /

› [Hibbent](#) /

› Hibbent Upgraded 3-in-1 Bathroom Sink Drain Strainer Instruction Manual

Hibbent 100-12.BDSD2507-2500-C-1P

Hibbent Upgraded 3-in-1 Bathroom Sink Drain Strainer Instruction Manual

Model: 100-12.BDSD2507-2500-C-1P

Brand: Hibbent

PRODUCT OVERVIEW

The Hibbent Upgraded 3-in-1 Bathroom Sink Drain Strainer is designed to provide efficient water storage, rapid drainage, and effective filtration for your bathroom sink. It features a durable construction and a user-friendly pop-up mechanism.



Image: The Hibbent 3-in-1 Bathroom Sink Drain Strainer in Chrome finish, showcasing its pop-up top and integrated filter basket.

KEY FEATURES

- **3-in-1 Design:** Integrates water storage, rapid drainage, and effective filtering functions.
- **Innovative Two-Layer Removable Basket:** Designed for two usage modes (with or without filter) and easy cleaning.
- **Pop-up Design:** High-quality stainless steel, plastic, and solid brass construction with a sensitive pop-up brass bullet core mechanism for easy switching between modes.
- **Versatile Compatibility:** Includes four O-rings to fit 99% of standard US sink drains (1.1" to 2.36" diameter).
- **Easy Installation:** No special tools or plumber fees required.
- **Easy to Clean:** Dual-layer removable basket for comprehensive cleaning.

PACKAGE CONTENTS

- 1 x Hibbent 3-in-1 Bathroom Sink Drain Strainer (Chrome)

- 4 x O-rings (various sizes for compatibility)

SETUP AND INSTALLATION

Before installation, please measure the diameter of your sink drain hole to ensure proper fit. This stopper is **NOT** suitable for bathtub drains.

1. **Prepare the Sink:** Ensure the sink drain area is clean and free of debris.
2. **Remove Old Stopper:** Carefully remove any existing drain stopper from your sink.
3. **Select O-ring:** Choose the appropriate O-ring from the provided sizes that best fits your sink drain hole diameter (between 1.1" and 2.36").
4. **Install O-ring:** Place the selected O-ring onto the base of the Hibbent drain strainer.
5. **Insert Strainer:** Gently insert the Hibbent drain strainer into the sink drain hole.
6. **Secure in Place:** Press down firmly to ensure the O-ring creates a tight seal and prevents any leaks.
7. **Test Functionality:** Run water into the sink and test the pop-up mechanism to ensure it seals and drains correctly.

Innovative Two-piece Detachable Strainer Basket Design

Easy cleaning and simplifies maintenance.



Image: Visual guide showing the simple 5-step installation process: remove old stopper, install rubber ring, insert new stopper, press to check stability, and finish.

Upgraded Pop Up Design

Easy switch between fast drainage and fill the sink mode.



Fast drainage for empty the sink



Fill the sink for socking or washing needs

Image: Diagram illustrating the four different O-ring sizes (1.2", 1.4", 1.8", 2.36") and their corresponding compatible sink hole diameters, emphasizing that it's not compatible with bathtubs.

Ours


- Anti-Clogging
- Water Storage
- Fast Drainage
- Easy to Clean
- Anti-rust
- Premium Material



Others



Can not filter ornaments or debris

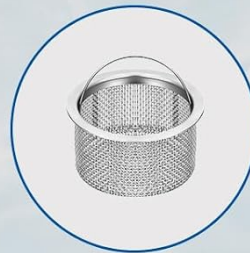

Can not fill the sink



Plastic material, easy to break



Hard to clean



Rusting

Image: A hand using a caliper to measure the sink drain opening, with a diagram showing the dimensions of the drain stopper and compatible sink hole diameters (1.1" to 2.36" with depth above 2").

OPERATING INSTRUCTIONS

The Hibbent drain strainer offers three primary functions:

- **Water Storage Mode:** Press the pop-up top down firmly until it clicks into place. This seals the drain, allowing the sink to fill with water for soaking or washing.
- **Rapid Drainage Mode:** Press the pop-up top again. It will pop up, opening the drain for water to flow out quickly.
- **Filtering Function:** The built-in stainless steel filter basket continuously captures hair, jewelry, and other debris, preventing clogs.

Anti-clogging, No Blockage

Jewelry

Gravel

Hair




Rotate the filter to remove the basket and its bottom piece, then take out the items to prevent blockages or loss.

Image: Illustration showing the anti-clogging feature, with the filter basket capturing hair, jewelry, and gravel, preventing blockages.

Two Way to Use

With Filter Basket

Effectively filters hair, debris, and gravel to prevent pipe blockage, while collecting valuable jewelry like earrings and necklaces to avoid loss.

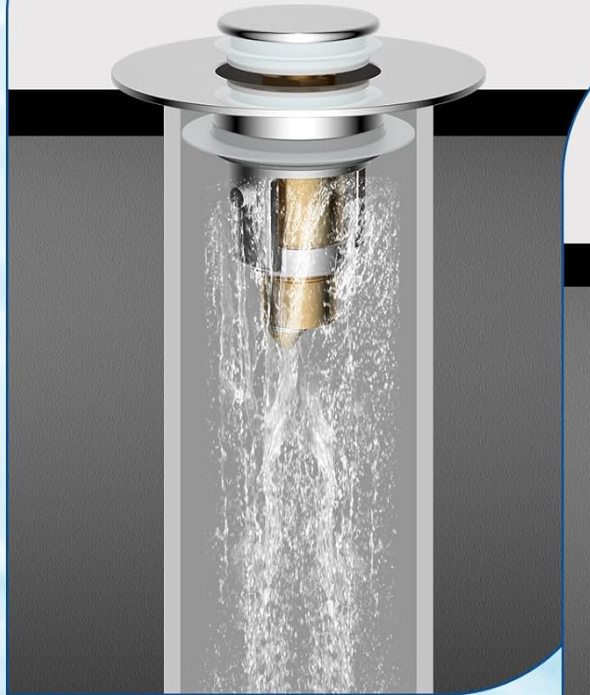

Without Filter Basket

Upgraded large holes design allows for faster drainage compared to traditional small hole designs, quickly emptying the sink.



Image: Diagram showing two usage modes: with the filter basket in place for filtering hair, debris, and ornaments, and without the filter basket for faster drainage through larger holes.

Premium Bathroom Sink Stopper

Chrome Finish Seal Cover

Chrome finish, long lasting and perfectly match your bathroom decors.

High Performance Rubber Ring ①

Fill the sink without any leaks.

Solid Brass Bounce Core

High-quality bounce core, long-lasting, smooth bounce without lag.

Stainless Steel Cover

The all metal cover will not break.

High Performance Rubber Ring ②

Fill the sink without any leaks.

Stainless Steel Basket with Removal Botto Piece

Innovative 2 layer removal design, easy to clean the basket.

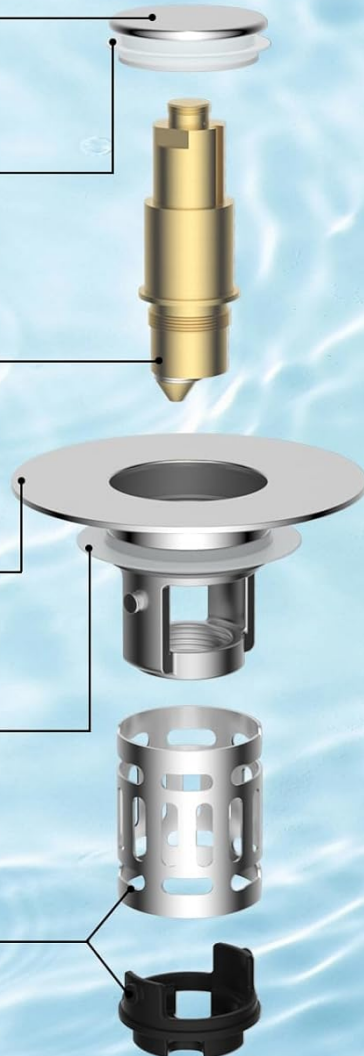 


Image: Illustration of the upgraded pop-up design, demonstrating how a simple press switches between fast drainage and fill sink modes.

MAINTENANCE AND CLEANING

Regular cleaning of your drain stopper is recommended every 1-3 months to prevent clogging, slow drainage, and incomplete water drainage.

1. **Remove the Stopper:** Simply pull the entire drain stopper out of the sink drain hole.
2. **Disassemble Basket:** The dual-layer removable basket can be easily separated by twisting its components.
3. **Clean Components:** Rinse the filter basket and its bottom piece under running water. Use a brush (like an old toothbrush) to remove any accumulated hair or debris. Clean the other parts of the stopper as needed.
4. **Reassemble and Reinsert:** Once clean, reassemble the basket components and reinsert the entire stopper back into the sink drain hole.



Image: Step-by-step visual guide on how to clean the bathroom sink stopper: remove basket and bottom piece, clean with a brush, clean other parts, and flush with water.



Image: A comparison chart highlighting the advantages of the Hibbent drain stopper (anti-clogging, water storage, fast drainage, easy to clean, anti-rust, premium material) versus other types of stoppers (cannot filter ornaments/debris, cannot fill sink, hard to clean, plastic/easy to break, rusting).

TROUBLESHOOTING

Problem	Possible Cause	Solution
Water drains slowly.	Filter basket is clogged with hair or debris.	Remove and clean the filter basket as per maintenance instructions.
Stopper does not seal completely, causing leaks.	Incorrect O-ring size or O-ring is not properly seated.	Ensure the correct O-ring size is used for your drain diameter. Re-seat the O-ring firmly.
Water remains in the sink after draining.	The stopper's rim sits slightly above the sink's existing drain opening.	This can occur with some sink designs. You may need to slightly lift the stopper to allow the last bit of water to drain, or remove it completely for full drainage.

Problem	Possible Cause	Solution
Pop-up mechanism is stiff or unresponsive.	Accumulation of mineral deposits or debris around the mechanism.	Remove the stopper and thoroughly clean the brass bullet core and surrounding components.

SPECIFICATIONS

- **Model Number:** 100-12.BDSD2507-2500-C-1P
- **Material:** Stainless Steel, Brass, Plastic
- **Color:** Chrome
- **Item Weight:** 2.82 ounces (0.08 Kilograms)
- **Product Dimensions:** 0.1 x 0.1 x 0.1 inches (approximate, as per provided data)
- **Compatible Drain Hole Diameter:** 1.1" to 2.36"
- **Special Features:** Anti-Clogging, Anti-Odor, Pop-Up, Twist-to-Lock, Rust Resistant

WARRANTY INFORMATION

All products purchased have a 360-day warranty as standard. The warranty period begins on the day the product is originally shipped. The warranty covers all of the items and conditions identified in the original manufacturer's warranty. Some of the items specifically not covered by the warranty are loss and theft, water damage, and customer abuse.

SUPPORT

For further assistance or inquiries, please visit the official Hibbent Store on Amazon:
[Visit the Hibbent Store](#)