

[Manuals.plus](#) /

› [WOOPKER](#) /

› WOOPKER Portable External CD Player User Manual

WOOPKER KC606

WOOPKER Portable External CD Player User Manual

Model: KC606

1. PRODUCT OVERVIEW

The WOOPKER Portable External CD Player (Model KC606) is designed to bring CD playback capabilities to various devices, including cars, laptops, desktops, and TVs, especially those without a built-in CD drive. This plug-and-play device offers versatile connectivity options via USB and AUX ports, ensuring broad compatibility. It features an upgraded chip for enhanced performance, including electronic shock resistance, improved readability, and noise reduction.



Image: The WOOPKER Portable External CD Player, a compact white device with a USB cable attached, shown from an angled perspective. It features a disc slot on top and control buttons on the sides.

ENJOY YOUR CDS



Image: The CD player connected to a laptop, with illustrations showing its compatibility with car stereos (with and without disc drives), smart TVs, and laptops.

PACKING LIST



Image: A graphic highlighting key features of the Mini Car CD Player: Multiple CD formats, Professional CD decoding, Plug and play, Anti-Seismic, and AUX Connection. The device is shown in a car's center console.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, humidity, or direct sunlight.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel.
- Keep the device away from water and other liquids.
- Ensure proper ventilation when in use to prevent overheating.
- Use only the provided cables and accessories.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- WOOPKER Portable External CD Player (Model KC606)
- USB Extension Cable
- AUX Cable
- USB-C Adapter
- User Manual
- Remote Control for AUX Connection



AUX CONNECTION

Portable CD Player for Car with Aux Port
For cars NOT support WAV:

This upgraded version is easier to connect, plug and play!

1. Connect the USB cable to any USB port in the car that can be charged.
2. Use the AUX cable to connect the CD player to the car.
3. Insert a CD disc.
4. The tracks will play automatically and can be controlled with the remote control.

Image: A visual representation of the package contents, including the CD player, USB extension cable, AUX cable, USB-C adapter, user manual, and remote control.

4. PRODUCT FEATURES


- **Portable Design:** Compact and lightweight, ideal for use in cars, at home, or with laptops.

- **Plug & Play:** Simple connection via USB or AUX, no complex installation required.
- **2025 Chip Upgrade:** Enhanced electronic shock resistance, improved readability, better compatibility, noise reduction, and efficient data transmission.
- **Anti-Skip Technology:** Professional CD decoding technology ensures accurate music playback without interruptions.
- **Wide Format Support:** Compatible with CD, CD-R, CD-RW, MP3, WMA, and WAV formats. *(Note: Not compatible with Blu-ray or DVD discs.)*
- **Broad Compatibility:** Works with car stereos (both Android and non-Android), laptops, desktop computers, and TVs.



Strong earthquake resistance, you can listen to music on the road without lagging

40%
Upgraded chip
for lossless
sound quality

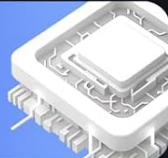

60% ↑
Shockproof
with Silicone
Strip



50% ↓
Smaller



30%
Heat dissipation
for longer life



Image: The CD player placed on a car dashboard, illustrating its strong earthquake resistance and anti-lag capabilities. Insets show details of the upgraded chip, shockproof silicone strip, smaller size, and heat dissipation features.



Image: A woman driving a car with the CD player visible, emphasizing its compatibility with 99% of car models and its support for CD/CD-R/CD-RW/MP3/WAV formats.

5. SETUP AND CONNECTION

The WOOPKER CD Player offers two primary connection methods: USB and AUX. Choose the method that best suits your device's capabilities.

5.1 USB Connection (For devices supporting WAV audio playback)

This method is recommended for car stereos, laptops, or other devices that can play WAV audio files directly from a USB source.

1. Connect the CD player's USB cable to a USB port (USB 2.0 or higher) on your car stereo, laptop, or compatible device.
2. Turn on the power of your car stereo/device.
3. Insert a CD disc into the CD player.

4. On your device's screen (e.g., car stereo), navigate to the Media or Source selection and choose USB.
5. The device will automatically read the disc, and tracks in WAV format will be displayed. You can then select a track to begin playback. *(Note: Some car systems may require you to click a USB music icon to access the song list.)*



Image: A visual guide demonstrating the USB connection process, showing the CD player connected to a car's USB port and the steps to select USB media on the car's display. A note indicates that the remote control is not available with USB connection.

5.2 AUX Connection (For devices NOT supporting WAV audio via USB)

This method is suitable for car stereos or other audio systems that do not support direct WAV audio playback from a USB source, but have an AUX input.

1. Connect the CD player's USB cable to any USB port in your car or device that can provide power.
2. Use the provided AUX audio cable to connect the AUX port of the CD player to the AUX input port of your car stereo or audio system.
3. Insert a CD disc into the CD player.

4. On your car stereo or device screen, select AUX mode.
5. The tracks will play automatically. Playback can be controlled using the provided remote control.

MINI CAR CD PLayer



Multiple CD formats Professional CD decoding Plug and play Anti-Seismic AUX Connection

Car audio systems must support WAV/MP3 audio files. Please confirm before purchasing.

Image: A visual guide demonstrating the AUX connection process, showing the CD player connected via USB for power and AUX cable to the car's AUX input. Steps to select AUX mode and use the remote control are highlighted.

Two types of connections



USB Connection



Plug and Play Plug the CD player USB cable into the car stereo USB data port. the car automatically recognizes the USB songs.(Note: Some cars need to click the USB music icon to enter the USB song page to listen to the song.)

AUX Audio Connection



Plug the CD player USB cable into any rechargeable USB port in your car, and then use the 3.5mm audio cable to plug the CD player into the car's AUX audio port respectively. Adjust the car mode to AUX mode to play songs automatically.

Image: A comparative graphic illustrating both USB and AUX audio connection methods for the CD player in a car environment, detailing the plug-and-play steps for each.

6. OPERATING INSTRUCTIONS

6.1 Playing a CD

1. Ensure the CD player is properly connected to your audio system (USB or AUX).
2. Gently insert a compatible CD disc into the disc slot until it clicks into place.
3. The player will automatically begin reading the disc. Playback should start shortly.
4. For USB connection, control playback via your connected device's interface.
5. For AUX connection, use the provided remote control to manage playback (play/pause, skip tracks, volume).

6.2 Supported Disc Formats

The WOOPKER CD Player supports the following audio disc formats:

- Audio CD (CD-DA)
- CD-R
- CD-RW
- MP3 CD
- WMA CD
- WAV CD

Important: This device is not designed for Blu-ray or DVD discs. Attempting to play incompatible discs may cause damage.

6.3 Remote Control (for AUX Connection)

The remote control allows convenient operation when using the AUX connection. Ensure the remote has working batteries (not included, typically AAA). Point the remote towards the CD player for optimal response.

- **Power Button:** Turns the CD player on/off.
- **Play/Pause Button:** Starts or pauses playback.
- **Next/Previous Track Buttons:** Skips to the next or previous track.
- **Volume Up/Down Buttons:** Adjusts the audio output volume.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the CD player. Do not use liquid cleaners or abrasive materials.
- **Disc Care:** Handle CDs by their edges. Keep discs clean and free of scratches or dust to ensure optimal playback.
- **Storage:** When not in use, store the CD player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Lens Cleaning:** Do not attempt to clean the internal laser lens yourself. If playback issues persist due to a dirty lens, consult customer support.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
CD player not powering on.	No power supply; loose USB connection.	Ensure USB cable is securely connected to a powered USB port. Try a different USB port or power source.
No sound or distorted sound.	Incorrect connection type; volume too low; incorrect source selected on car stereo/device.	Verify correct USB or AUX connection. Increase volume on both the CD player (if AUX) and the connected device. Ensure "USB" or "AUX" source is selected on your car stereo/device. Check if the disc is clean and undamaged.

Problem	Possible Cause	Solution
Disc not reading or skipping.	Dirty or scratched disc; incompatible disc format; player movement.	Clean the disc with a soft, lint-free cloth. Try a different, known-good audio CD. Ensure the disc format is supported (CD/CD-R/CD-RW/MP3/WMA/WAV). Minimize excessive vibration or movement during playback.
Remote control not working.	Batteries dead or inserted incorrectly; remote not pointed at player; remote only works with AUX.	Replace remote batteries and ensure correct polarity. Point the remote directly at the CD player. Confirm you are using an AUX connection, as the remote is not functional with USB connections.

9. SPECIFICATIONS

Feature	Detail
Brand	WOOPKER
Model	KC606
Product Dimensions	13.46 x 13.46 x 2.54 cm
Item Weight	449 g
Compatible Devices	Laptop, Television, Car, Speaker, Headphone
Special Features	Anti-Skip Protection, Portable
Supported Audio Formats	CD, CD-R, CD-RW, MP3, WMA, WAV
Connector Type	USB, AUX (3.5mm)
Color	White

10. WARRANTY AND SUPPORT

WOOPKER provides customer support for its products. For specific warranty details, please refer to the warranty card included in your package or contact WOOPKER customer service directly.

If you encounter any issues or have questions regarding your CD player, please contact our professional customer service team. We offer 24-hour customer service and satisfactory after-sales support.

Contact Information:

- Refer to the contact details provided on the product packaging or official WOOPKER website.
- For Amazon purchases, you can contact us via Amazon message for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DS572MQY>

More documents and user manuals: <https://manuals.plus/>