

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GODOX](#) /

› [Godox iA32 Mini Camera Flash Instruction Manual](#)

GODOX iA32

Godox iA32 Mini Camera Flash Instruction Manual

Model: iA32

INTRODUCTION

The Godox iA32 Mini Camera Flash is a compact and versatile speedlite designed to provide enhanced lighting for various camera models. It features a single-contact hot shoe for broad compatibility, adjustable power levels, and flexible angle adjustments to suit diverse photographic needs. This manual provides detailed instructions for the proper setup, operation, and maintenance of your iA32 flash.

PRODUCT FEATURES

- Wide Compatibility:** Features a single-contact hot shoe design, making it compatible with most mirrorless and film cameras, including models from Sony (e.g., ZV-1, ZV-E10), Ricoh (e.g., GR3), Canon, Nikon, Fuji, and Olympus. Note: Not compatible with Sony ZV-1F, A9III, A99, A77, A350, and other cameras without a universal touch point.
- Efficient Power:** Powered by two AA batteries, providing up to 490 flashes at full power with a quick recycle time of approximately 2.5 seconds.
- Adjustable Power Levels:** Offers 8 power levels, ranging from 1/128 to full power (1/1), allowing precise light output control for various scenes.
- Optimal Lighting Quality:** Delivers natural lighting with a guide number (GN) of 15 and a color temperature of 6500K±200K, enhancing photographic results.
- Versatile Modes:** Supports both Auto and Manual modes for flexible shooting requirements.
- Flexible Angle Adjustment:** The flash tube can be adjusted from -7° to 90° via a side dial, enabling bounce flash effects and varied lighting options.
- Compact Design:** Integrated flat design for easy portability and attachment to your camera.

PACKAGE CONTENTS



The package includes the following items:

- Godox iA32 Flash Body x 1
- Storage Bag x 1

This image shows the Godox iA32 flash unit alongside its included storage bag, illustrating the complete contents of the product package.

PARTS IDENTIFICATION

Familiarize yourself with the different parts of your Godox iA32 flash unit:

Name of Parts



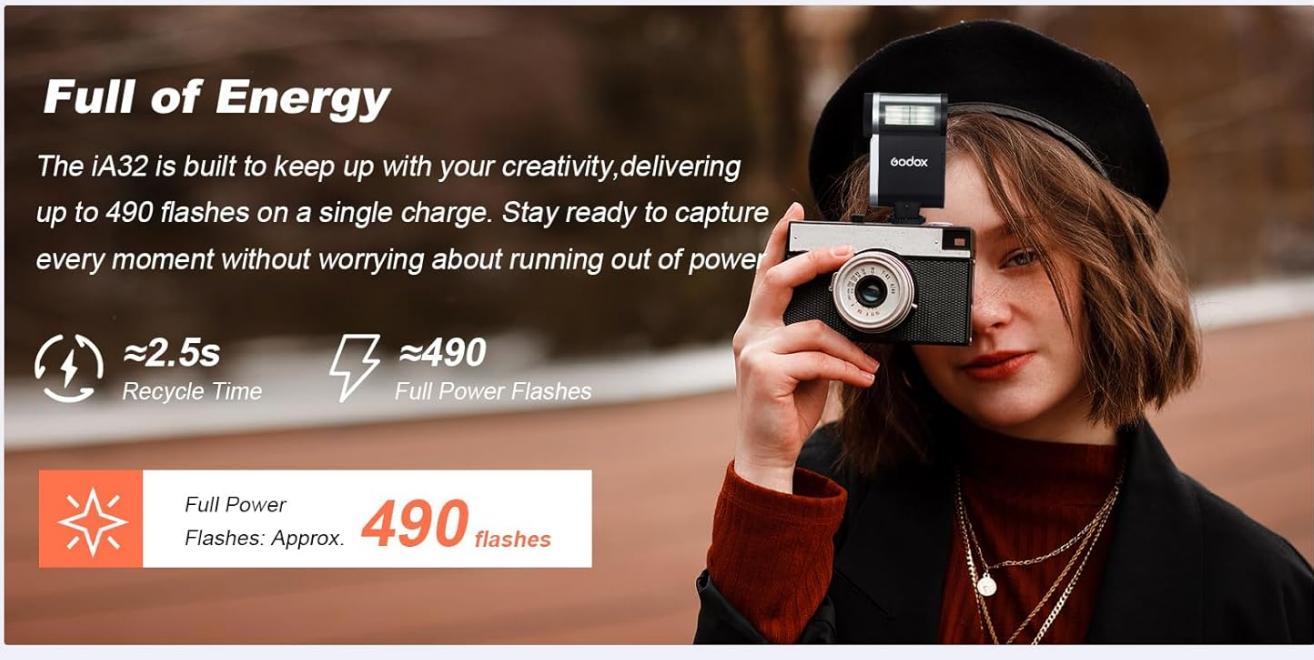
This diagram labels the key components of the Godox iA32 flash, including the display, buttons, optical sensor, flash tube, hot shoe, and battery cover.

1. Display
2. Power Switch/Test Button
3. MODE Button
4. < - > Button
5. < + > Button
6. Optical Sensor
7. Flash Tube Angle Adjust Dial
8. Hot Shoe
9. Hot Shoe Locking Ring
10. Flash Tube
11. Battery Cover
12. Auto Light Meter

1. Battery Installation

The Godox iA32 flash requires two AA batteries for operation.

- Locate the battery cover (Part 11 in the diagram) on the side of the flash unit.
- Open the battery cover.
- Insert two AA batteries, ensuring correct polarity (+/-) as indicated inside the battery compartment.
- Close the battery cover securely.



This image illustrates the Godox iA32 flash unit with its battery compartment open, showing the insertion of AA batteries.

2. Mounting on Camera

To attach the iA32 flash to your camera:

- Slide the hot shoe (Part 8) of the flash into your camera's hot shoe mount.

- Once fully inserted, rotate the hot shoe locking ring (Part 9) clockwise to secure the flash firmly in place.
- To remove, rotate the locking ring counter-clockwise and slide the flash off.



Single Contact Hot Shoe

The iA32 uses a single contact hot shoe, offering a simple and reliable connection. It is compatible with most camera models available



With electrical contacts



Without electrical contacts



Canon



Nikon



Fuji



Sony



Pentax



Olympus

This image demonstrates the single-contact hot shoe of the Godox iA32 and its compatibility with various camera brands, showing both compatible and incompatible hot shoe designs.

OPERATING INSTRUCTIONS

1. Power On/Off

- Press and hold the Power Switch/Test Button (Part 2) to turn the flash on or off.
- A short press of the Power Switch/Test Button will fire a test flash.

2. Mode Selection (Auto/Manual)

The iA32 supports both Auto and Manual modes.

Auto/Manual Modes

The iA32 offers both Auto and Manual modes. In Auto Mode, you can set ISO and aperture values, with the recommended shooting distance displayed on the panel.

Switching to Manual Mode allows you to adjust the flash power level



 **Auto Mode**



 **Manual Mode**

This image displays the Godox iA32's screen in both Auto Mode (left) showing ISO, aperture, and recommended distance, and Manual Mode (right) showing flash power level.

- Press the MODE Button (Part 3) to switch between Auto and Manual modes.
- **Auto Mode:** In this mode, you can set ISO and aperture values on the flash. The display will show the recommended shooting distance.
- **Manual Mode:** Allows you to manually adjust the flash power level.

3. Adjusting Power Levels (Manual Mode)

In Manual Mode, you can select from 8 power output levels.

Adjustable Power Levels

In Manual Mode, choose from 8 power output levels, ranging from 1/128 to full power (1/1), with 1/3-step increments



This image demonstrates the effect of different power levels (from 1/1 to 1/128) on a subject, illustrating the range of light output from the Godox iA32 flash.

- Use the $< - >$ Button (Part 4) and $< + >$ Button (Part 5) to cycle through the power levels from 1/128 to 1/1 (full power) in 1/3-step increments.
- Select the appropriate power level based on your desired exposure and lighting conditions.

4. Adjusting Flash Head Angle

The flash tube can be adjusted to direct light as needed.

Adjustable Angle

The flash head assembly allows easy angle adjustments from -7° to 90° , controlled via the side dial. This design also enables bounce flash effects for more varied lighting options



This image shows the Godox iA32 flash head being adjusted, with illustrations of its tilt capabilities from -7 degrees to 90 degrees, allowing for bounce flash.

- Use the Flash Tube Angle Adjust Dial (Part 7) on the side of the unit to tilt the flash head.
- The flash head can be adjusted from -7° to 90° . This allows for direct flash or bounce flash off ceilings or walls for softer lighting.

COMPATIBILITY

The Godox iA32 Mini Camera Flash is designed with a single-contact hot shoe for broad compatibility with various camera systems. It is generally compatible with most mirrorless and film cameras that feature a universal hot shoe with electrical contacts.

Compatible Brands: Sony (e.g., ZV-1, ZV-E10), Ricoh (e.g., GR3), Canon, Nikon, Fuji, Olympus, Pentax (with universal touch point).

Known Incompatibilities: Sony ZV-1F, A9III, A99, A77, A350, and other cameras that do not feature a universal hot shoe with a central electrical contact.

Always ensure your camera's hot shoe has a central contact for proper flash synchronization.

Maintenance

- Cleaning:** Use a soft, dry cloth to clean the flash unit. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using strong detergents or solvents.
- Storage:** When not in use for extended periods, remove the AA batteries to prevent leakage and store the flash in its provided storage bag in a cool, dry place.
- Handling:** Handle the flash with care. Avoid dropping it or subjecting it to strong impacts, which can damage internal components.
- Environmental Conditions:** Do not expose the flash to water, high humidity, extreme temperatures, or direct sunlight for prolonged periods.

Troubleshooting

Problem	Possible Cause	Solution
Flash does not power on.	<ul style="list-style-type: none">Batteries are dead or incorrectly inserted.Battery cover not closed properly.	<ul style="list-style-type: none">Replace batteries with fresh ones and ensure correct polarity.Ensure battery cover is securely closed.
Flash does not fire.	<ul style="list-style-type: none">Flash not securely mounted on camera hot shoe.Camera hot shoe is not compatible (no central contact).Flash is in standby mode.Camera settings (e.g., silent mode, electronic shutter) preventing flash.	<ul style="list-style-type: none">Ensure flash is fully inserted and locking ring is tightened.Verify camera compatibility (check for central hot shoe contact).Press the test button or half-press camera shutter to wake flash.Check camera manual for flash compatibility with current settings.
Flash output is too bright/dark.	<ul style="list-style-type: none">Incorrect power level setting in Manual Mode.Incorrect ISO/aperture settings in Auto Mode.Distance to subject is too far/close.	<ul style="list-style-type: none">Adjust power level using +/- buttons.Adjust ISO/aperture on flash or camera.Reposition closer or further from subject.
Long recycle time.	<ul style="list-style-type: none">Batteries are low.Using full power flashes repeatedly.	<ul style="list-style-type: none">Replace batteries.Allow more time between flashes or use lower power settings.

Specifications

Godox iFlash Camera Flash
iM30 / iA32 / iM20 / iM22
Snap, Shine, Anytime



This image displays a table of key specifications for the Godox iA32 flash, including battery type, guide number, recycle time, flash modes, and dimensions.

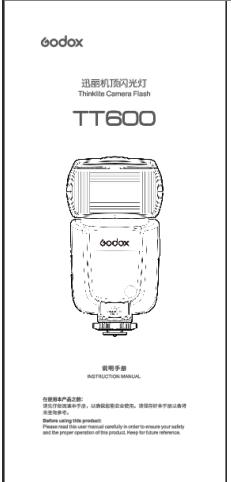
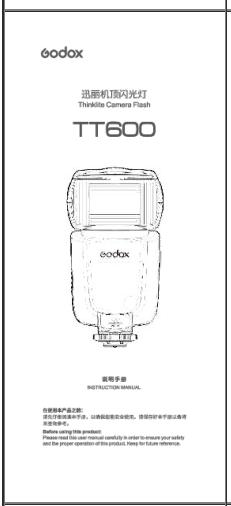
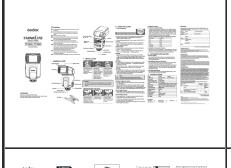
Feature	Detail
Model	iA32
Battery	Two AA NiMH batteries (or alkaline)
Guide Number (ISO 100, in meters)	15
Full Power Flashes	Approx. 490
Recycle Time	Approx. 2.5s
Flash Power Steps	8 levels: 1/128 ~ 1/1
Flash Modes	M Mode / AUTO Mode, Optical Trigger S1/S2
Dimension	Approx. 2.56" x 4.53" x 1.38" (65mm x 115mm x 35mm)
Net Weight	Approx. 117g (without batteries)
Flash Sync Speed	1/250s

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official GODOX website or contact your local distributor. Keep your purchase receipt as proof of purchase for any warranty claims.

GODOX is committed to providing high-quality products and customer service. Should you encounter any issues not covered in this manual, please reach out to their support channels for assistance.

Related Documents - iA32

 The image shows the front cover of the Godox TT600 Thinklite Camera Flash User Manual. It features the Godox logo at the top, followed by 'TT600' and 'Thinklite Camera Flash'. Below the title is a photograph of the Godox TT600 flash unit. At the bottom, there is a section for 'INSTRUCTION MANUAL' and a note in Chinese and English: '请仔细阅读此手册，以确保安全使用。请妥善保管此手册，以便将来参考。' (Please read this manual carefully to ensure safe use. Please keep this manual for future reference.)	<p>Godox TT600 Thinklite Camera Flash User Manual</p> <p>Comprehensive user manual for the Godox TT600 Thinklite Camera Flash, covering features, operation, safety warnings, technical specifications, and maintenance. Learn how to use manual mode, stroboscopic flash, S1/S2 slave modes, Hi-Speed Sync, and custom functions for professional photography.</p>
 The image shows the front cover of the Godox TT600 Thinklite Camera Flash Instruction Manual. It features the Godox logo at the top, followed by 'TT600' and 'Thinklite Camera Flash'. Below the title is a photograph of the Godox TT600 flash unit. At the bottom, there is a section for 'INSTRUCTION MANUAL' and a note in Chinese and English: '请仔细阅读此手册，以确保安全使用。请妥善保管此手册，以便将来参考。' (Please read this user manual carefully to ensure safe use and the proper operation of the product. Keep for future reference.)	<p>Godox TT600 Thinklite Camera Flash Instruction Manual</p> <p>This manual provides detailed instructions for the Godox TT600 Thinklite Camera Flash, covering its features, operation, safety warnings, and maintenance. Learn how to attach, use, and customize settings for various photography scenarios.</p>
 The image shows the front cover of the Godox TT520II/TT560II Camera Flash User Manual. It features the Godox logo at the top, followed by 'TT520II/TT560II' and 'Camera Flash'. Below the title is a photograph of the Godox TT520II/TT560II flash unit. At the bottom, there is a section for 'User Manual' and a note in Chinese and English: 'Please read this user manual carefully to ensure your safety and the proper operation of the product. Keep for future reference.' (Please read this user manual carefully to ensure your safety and the proper operation of the product. Keep for future reference.)	<p>Godox TT520II/TT560II Camera Flash User Manual</p> <p>User manual for the Godox TT520II and TT560II camera flashes, covering nomenclature, installation, usage, advanced applications, and specifications.</p>
 The image shows the front cover of the Godox PB960 PROPAC Power Pack User Manual. It features the Godox logo at the top, followed by 'PB960' and 'PROPAC Power Pack'. Below the title is a photograph of the Godox PB960 power pack. At the bottom, there is a section for 'User Manual' and a note in Chinese and English: 'Please read this user manual carefully to ensure your safety and the proper operation of the product. Keep for future reference.' (Please read this user manual carefully to ensure your safety and the proper operation of the product. Keep for future reference.)	<p>Godox PB960 PROPAC Power Pack User Manual</p> <p>User manual for the Godox PB960 PROPAC power pack, detailing its features, operation, technical specifications, and maintenance for charging speedlites and other electronic devices.</p>
 The image shows the front cover of the Godox iT32 iFlash User Manual. It features the Godox logo at the top, followed by 'iT32' and 'iFlash'. Below the title is a photograph of the Godox iT32 iFlash unit. At the bottom, there is a section for 'User Manual' and a note in Chinese and English: 'Please read this user manual carefully to ensure your safety and the proper operation of the product. Keep for future reference.' (Please read this user manual carefully to ensure your safety and the proper operation of the product. Keep for future reference.)	<p>Godox iT32 iFlash</p> <p>Godox iT32 iFlash</p>
 The image shows the front cover of the Godox iFlash iA32 Camera Flash Instruction Manual. It features the Godox logo at the top, followed by 'iFlash' and 'iA32'. Below the title is a photograph of the Godox iFlash iA32 unit. At the bottom, there is a section for 'User Manual' and a note in Chinese and English: 'Please read this user manual carefully to ensure your safety and the proper operation of the product. Keep for future reference.' (Please read this user manual carefully to ensure your safety and the proper operation of the product. Keep for future reference.)	<p>Godox iFlash iA32 Camera Flash Instruction Manual</p> <p>Comprehensive instruction manual for the Godox iFlash iA32 camera flash, covering safety precautions, operation modes (M, AUTO, S1, S2), technical specifications, and warranty information.</p>

