

DG11J1-35

Generic DG11J1-35 Air Conditioner Remote Control User Manual

Model: DG11J1-35

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Generic DG11J1-35 Air Conditioner Remote Control. This remote is designed as a replacement or alternative for various Whirlpool air conditioner models, including those originally supplied with DG11J1-31, DG11J1-32, DG11J1-34, DG11J1-35, and DG11J1-36 remote controls. Please read this manual thoroughly to ensure proper use and to maximize the functionality of your air conditioner.

2. PRODUCT OVERVIEW

2.1 Remote Control Layout

The following image illustrates the front and back of the DG11J1-35 remote control, highlighting its buttons and features.



Image: Front and back view of the DG11J1-35 Air Conditioner Remote Control. The front displays an LCD screen and various function buttons. The back shows the model number DG11J1-35 and instructions for battery cover removal.

2.2 Button Functions

Familiarize yourself with the primary functions of each button:

- **ON/OFF:** Powers the air conditioner on or off.
- **MODE:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **FAN:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **Temperature Up (▲):** Increases the set temperature.
- **Temperature Down (▼):** Decreases the set temperature.
- **SWING:** Activates or deactivates the louver swing function.
- **SLEEP MODES:** Engages or disengages sleep mode for energy-efficient operation during sleep.
- **TURBO:** Activates rapid cooling or heating for quick temperature changes.
- **6° SENSE:** Activates the 6th Sense intelligent operating mode (if supported by AC unit).
- **AROUND U:** Activates the 'Follow Me' function, sensing temperature around the remote (if supported by

AC unit).

- **DIM:** Adjusts the brightness of the air conditioner's display panel.
- **TIMER ON/CLOCK:** Sets the timer for the air conditioner to turn on, or adjusts the clock.
- **TIMER OFF:** Sets the timer for the air conditioner to turn off.
- **POWER SAVER:** Activates an energy-saving operating mode.

3. SETUP

3.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:



Image: The back of the remote control with the battery compartment cover removed, showing the slots for two AAA batteries.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover off in the direction indicated by the arrow.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: Replace batteries when the remote's display becomes dim or the remote stops responding. Do not mix old and new

batteries, or different types of batteries.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press the **ON/OFF** button once to turn the air conditioner on. Press it again to turn the air conditioner off.

4.2 Adjusting Temperature

Use the **▲** (Up) and **▼** (Down) buttons to increase or decrease the desired room temperature. The set temperature will be displayed on the remote's LCD screen.

4.3 Changing Operating Modes

Press the **MODE** button repeatedly to cycle through the available operating modes: Auto, Cool, Dry, Fan, and Heat (if your AC unit supports heating).

4.4 Fan Speed Control

Press the **FAN** button repeatedly to select the desired fan speed: Auto, Low, Medium, or High.

4.5 Swing Function

Press the **SWING** button to activate or deactivate the automatic louver swing, which helps distribute air evenly.

4.6 Sleep Mode

Press the **SLEEP MODES** button to engage a quiet, energy-saving mode that gradually adjusts the temperature for comfortable sleep.

4.7 Turbo Mode

Press the **TURBO** button for rapid cooling or heating. This mode operates the air conditioner at maximum power to reach the set temperature quickly.

4.8 Timer Functions

- **TIMER ON:** Press **TIMER ON/CLOCK** to set a time for the air conditioner to turn on automatically. Use the temperature adjustment buttons to set the desired time, then press **TIMER ON/CLOCK** again to confirm.
- **TIMER OFF:** Press **TIMER OFF** to set a time for the air conditioner to turn off automatically. Use the temperature adjustment buttons to set the desired time, then press **TIMER OFF** again to confirm.

4.9 DIM Function

Press the **DIM** button to adjust the brightness of your air conditioner's display panel, if supported by the unit.

4.10 Power Saver

Press the **POWER SAVER** button to activate an energy-saving mode that optimizes operation to reduce power consumption.

4.11 6th Sense / Around U

These functions (**6° SENSE** and **AROUND U**) are advanced features that, if supported by your air conditioner, allow for intelligent temperature control based on ambient conditions or the remote's location. Refer to your air

conditioner's manual for specific details on these features.

5. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common problems and solutions:

- **Remote not responding:**

- Check if the batteries are correctly installed with the correct polarity.
- Replace old batteries with new AAA batteries.
- Ensure there are no obstructions between the remote control and the air conditioner's receiver.
- Confirm the remote is pointed directly at the air conditioner's receiver.

- **Display is dim or blank:**

- This usually indicates low battery power. Replace the batteries.

- **Air conditioner not performing desired function:**

- Ensure the air conditioner unit is powered on and plugged in.
- Verify that the selected mode (e.g., Cool, Heat) is supported by your specific air conditioner model.
- Some advanced functions (e.g., 6th Sense, Around U) may require specific air conditioner models to be fully functional.

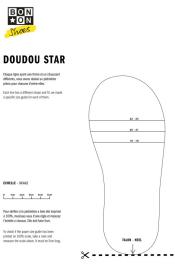
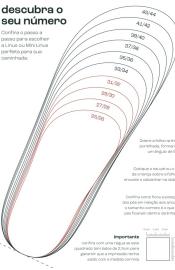
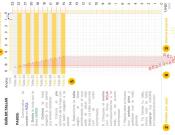
6. SPECIFICATIONS

Feature	Detail
Model Number	DG11J1-35 (Compatible with DG11J1-31, DG11J1-32, DG11J1-34, DG11J1-36)
Wireless Communication	Infrared (IR)
Frequency	433 MHz
Channel	1
Power Source	2 x AAA Batteries (not included)
Material	High-quality ABS
Item Weight	500 Grams (approximate, including packaging)
Parcel Dimensions	20 x 20 x 10 cm (approximate)

7. WARRANTY AND SUPPORT

As this is a generic replacement product, specific warranty details may vary. For any issues, questions, or support regarding your remote control, please contact the seller or retailer from whom you purchased the product. They will be able to provide assistance with troubleshooting or replacement if necessary.

Related Documents - DG11J1-35

REVSKÄR  <small>IKEA</small>	<p>REVSKÄR 3-Seat Outdoor Conversation Set Assembly Instructions</p> <p>Official assembly guide for the IKEA REVSKÄR 3-seat outdoor conversation set. Includes a detailed parts list and step-by-step instructions with visual descriptions.</p>
 <small>BON-ON</small>	<p>BON-ON Shoes PICKER HI Shoe Size Guide and Conversion Chart</p> <p>Download and print the BON-ON Shoes PICKER HI shoe size guide. Includes instructions for accurate foot measurement and a conversion chart from shoe size to foot length in CM.</p>
 <small>KOOPS</small>	<p>KOOPS Ultimate Footwear Size Guide</p> <p>A comprehensive guide from KOOPS to accurately measure your foot size using a 5 cm scale and provided size chart, ensuring the perfect fit for your footwear.</p>
 <small>BONON</small>	<p>BONON Shoes DOUDOU STAR Shoe Size Guide</p> <p>Official shoe size guide for BONON Shoes DOUDOU STAR. Learn how to measure your child's foot accurately to find the perfect fit using our printable size guide and conversion chart.</p>
 <small>Linus</small>	<p>Guia de Tamanhos Linus e Mini Linus: Descubra o Seu Número Perfeito</p> <p>Este guia passo a passo ajuda a encontrar o tamanho ideal de sapatos Linus e Mini Linus. Siga as instruções simples e verifique a medida para garantir o ajuste perfeito para caminhadas confortáveis.</p>
 <small>KOOPS</small>	<p>Guía de Tallas KOOPS: Cómo Medir y Elegir el Calzado Perfecto</p> <p>Descubre la guía definitiva de KOOPS para medir tus pies con precisión y seleccionar la talla de calzado ideal. Instrucciones paso a paso y consejos útiles para encontrar el ajuste perfecto.</p>