

[manuals.plus](#) /› [Westinghouse](#) /› [Westinghouse USB Rechargeable Water Pump Dispenser with Foldable Spout \(Model WWPP138\) - User Manual](#)

Westinghouse WWPP138

Westinghouse USB Rechargeable Water Pump Dispenser (Model WWPP138)

User Manual

INTRODUCTION

Thank you for choosing the Westinghouse USB Rechargeable Water Pump Dispenser. This device is designed to provide convenient and efficient water dispensing from large water bottles. Its foldable spout and rechargeable battery make it ideal for home, office, or travel use. Please read this manual carefully before use to ensure proper operation and maintenance.



Figure 1: Front view of the Westinghouse Water Pump Dispenser.

SAFETY INFORMATION

- Do not immerse the main unit in water or other liquids.
- Keep out of reach of children.
- Use only with potable water.
- Do not use with hot liquids (above 50°C / 122°F) or liquids other than water.
- Ensure the USB charging cable is disconnected before cleaning.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Charge the device using a standard 5V USB power adapter.

PACKAGE CONTENTS

Please check the package for the following items:

- Water Pump Dispenser Unit
- Food-grade Silicone Water Hose
- USB Charging Cable (Type-C)
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your water pump dispenser:

1. **Foldable Spout:** Delivers water and folds for compact storage.
2. **Control Panel:** Features touch buttons for operation and LED indicators.
3. **USB-C Charging Port:** For recharging the internal battery.
4. **Water Inlet:** Connects to the silicone water hose.
5. **Silicone Water Hose:** Draws water from the bottle.



Figure 2: Key features of the water pump dispenser.



Figure 3: Side view demonstrating the foldable spout design.

SETUP

Follow these steps to set up your water pump dispenser:

- 1. Clean the Hose:** Before first use, rinse the silicone water hose thoroughly with clean water.
- 2. Connect the Hose:** Insert one end of the silicone hose firmly into the water inlet port at the bottom of the dispenser unit.
- 3. Insert into Bottle:** Place the other end of the silicone hose into the water bottle. Ensure the hose reaches the bottom of the bottle for optimal water drawing.
- 4. Mount the Dispenser:** Place the dispenser unit securely on top of the water bottle opening. The dispenser is designed to fit most standard bottle sizes (e.g., 1.5, 2.6, 3, 4, 5 gallon bottles).

POWERFUL 1200mAh BATTERY

Enjoy up to 5 gallons of water on a single charge for uninterrupted use.



Figure 4: The dispenser is compatible with various bottle types.

SPILL-FREE SPOUT FUNCTION

Portable design ensures smooth and mess-free water flow.



Figure 5: Dispenser mounted on a water bottle.

OPERATING INSTRUCTIONS

Using your water pump dispenser is simple:

- 1. Unfold the Spout:** Gently lift the spout to its upright dispensing position.
- 2. Dispense Water:** Press the power button on the control panel to start dispensing water. The LED light will illuminate.
- 3. Stop Dispensing:** Press the power button again to stop the water flow.
- 4. Continuous Flow:** For continuous water flow, press and hold the power button for approximately 3 seconds. Press again to stop.
- 5. Fold for Storage:** After use, gently fold the spout back down to protect it from dust and save space.

FOLDABLE WATER SPOUT DESIGN

The spout folds neatly to save space and prevent dust buildup.



Figure 6: One-touch operation for dispensing water.

WESTINGHOUSE WATER PUMP



Safe & Clean Flow



Portable & Lightweight



One-Touch Dispensing

OTHER WATER DISPENSERS



Unclean



Difficult to Lift



Hard to Press

Figure 7: The foldable spout design for convenience.

CHARGING


The dispenser is equipped with a powerful 1200mAh rechargeable battery. When the battery is low, the LED indicator may flash or the pump performance may decrease.

- 1. Connect Charger:** Plug the provided USB-C charging cable into the charging port on the dispenser.
- 2. Connect to Power:** Connect the other end of the USB cable to a standard 5V USB power adapter (not included) or a USB port on a computer.
- 3. Charging Indicator:** The LED indicator will show the charging status. It typically glows steadily while charging and turns off or changes color when fully charged.
- 4. Full Charge:** A full charge provides enough power to dispense approximately 5 gallons of water.



EASY OPERATION

Dispense Water Instantly with a Simple Press

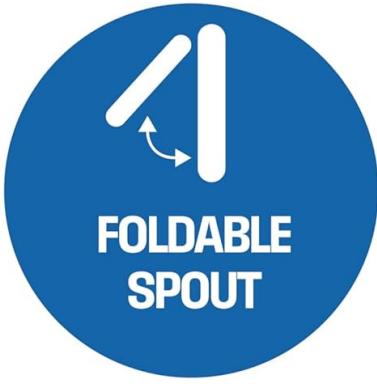


FOLDABLE SPOUT

Compact Spout Design for Easy Storage and Travel



UNIVERSAL BOTTLE BUCKET

Designed to Work with Various Container Sizes

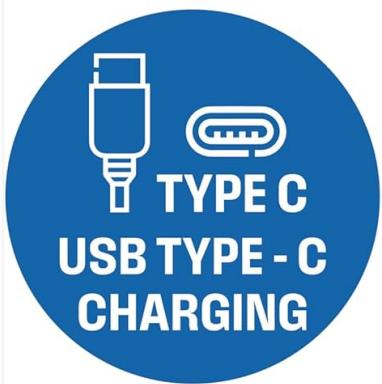

TYPE C USB TYPE - C CHARGING

Recharge through USB-C for Convenient & Quick Power-Ups



RECHARGEABLE BATTERY

Enjoy Cordless Use with a Long-Lasting Internal Battery



CONTINUOUS FLOW MODE

Delivers Smooth Water Output with No Interruptions

Figure 8: The dispenser features a powerful 1200mAh battery.

MAINTENANCE AND CLEANING

Regular cleaning ensures hygiene and extends the life of your dispenser:

- External Cleaning:** Wipe the exterior of the dispenser with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- Hose Cleaning:** Periodically remove and rinse the silicone water hose with warm, soapy water. Ensure it is thoroughly rinsed to remove any soap residue.
- Spout Cleaning:** Clean the spout regularly with a damp cloth. For thorough cleaning, you can run clean water through the dispenser.
- Storage:** When not in use for an extended period, ensure the dispenser is clean and dry. Store it in a cool, dry place with the spout folded.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No water dispensed / Weak flow	Low battery; Hose not properly inserted; Hose blocked; Water bottle empty.	Charge the dispenser; Re-insert hose firmly; Clean hose; Replace water bottle.

Problem	Possible Cause	Solution
Dispenser not turning on	Battery is completely drained.	Connect to charger and allow a few minutes for it to power on.
Water leakage	Hose not properly connected; Dispenser not seated correctly on bottle.	Ensure hose is firmly attached; Re-seat dispenser on bottle opening.
Charging indicator not working	Faulty USB cable or power adapter; Charging port issue.	Try a different USB cable and power adapter.

SPECIFICATIONS

- **Model Number:** WWPP138
- **Dimensions:** 7 x 7 x 12 cm (Depth x Width x Height)
- **Weight:** 270 grams
- **Material:** Plastic
- **Color:** Black
- **Power Source:** Battery operated
- **Battery Capacity:** 1200mAh (Rechargeable)
- **Charging Port:** USB Type-C
- **Style:** Foldable
- **Installation Type:** Stand-alone

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included in your package or contact Westinghouse customer service. Keep your purchase receipt as proof of purchase.