

[Manuals.plus](#) /

› [Edillas](#) /

› Edillas Kids Digital Watch 8203B Instruction Manual

Edillas 8203B

Edillas Kids Digital Watch Model 8203B Instruction Manual

INTRODUCTION

Thank you for choosing the Edillas Kids Digital Watch Model 8203B. This watch is designed for children aged 4-15, offering a range of useful functions in a durable and child-friendly design. Please read this manual carefully to understand how to operate and maintain your new watch.

This manual provides detailed instructions for setting the time, date, alarm, using the stopwatch, and understanding the watch's features. Proper use and care will ensure the longevity and optimal performance of your Edillas watch.

PRODUCT OVERVIEW

The Edillas Kids Digital Watch 8203B features a clear digital display and four control buttons for easy operation.





Figure 1: Front view of the Edillas Kids Digital Watch 8203B, displaying the time and day of the week.

Button Functions:

- **LIGHT Button (Top Left):** Activates the backlight for viewing in low-light conditions.
- **MODE Button (Bottom Left):** Cycles through different display modes: Time Display, Alarm Setting, and Stopwatch.
- **START Button (Top Right):** Used to start/stop the stopwatch, and to increase values during time/alarm setting.
- **RESET Button (Bottom Right):** Used to reset the stopwatch, and to select or move to the next setting item during time/alarm setting.

SETUP AND OPERATION

1. Setting Time and Date

1. From the normal Time Display Mode, press the **MODE** button three times. The seconds will begin to flash.

2. Press the **RESET** button to cycle through the setting items: Seconds → Hours → Minutes → Month → Date → Day of Week.
3. While an item is flashing, use the **START** button to adjust the value.
4. After setting all desired items, press the **MODE** button once to return to the normal Time Display Mode.

2. Setting the Alarm

1. From the normal Time Display Mode, press the **MODE** button twice. The alarm hours will begin to flash.
2. Press the **START** button to adjust the alarm hour.
3. Press the **RESET** button to move to the alarm minutes. The alarm minutes will flash.
4. Press the **START** button to adjust the alarm minutes.
5. Press the **MODE** button once to return to the normal Time Display Mode.

3. Activating/Deactivating Alarm and Hourly Chime

- From the normal Time Display Mode, press the **RESET** button and then the **START** button simultaneously to toggle the alarm ON/OFF. An alarm icon will appear/disappear on the display.
- To turn off the hourly chime: From the normal Time Display Mode, press the **RESET** button and then the **MODE** button simultaneously. The hourly chime indicator will disappear. Repeat to turn it back on.

4. Using the Stopwatch

1. From the normal Time Display Mode, press the **MODE** button once to enter Stopwatch Mode. The display will show '00:00:00'.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to '00:00:00'.
5. Press the **MODE** button to return to the normal Time Display Mode.

5. Using the Backlight

Press the **LIGHT** button (top left) to illuminate the display. The watch features 7 different backlight colors. Pressing the **LIGHT** button will cycle through these colors or activate a colorful flashing mode.



Figure 2: The watch display with and without the EL backlight activated, showcasing multiple color options.

FEATURES

- **Multifunctional:** Includes alarm clock, stopwatch, calendar, colorful lights, and 12H/24H time format switch.
- **Colorful Lights:** Features blue, green, red, light blue, yellow, and other colors. Supports switching between monochrome and colorful flashing.
- **Waterproof (30M/3ATM):** Suitable for daily activities such as hand washing, splashes, and brief immersion in cold water. Not suitable for hot water baths or prolonged underwater button pressing.
- **Japanese Movement:** Ensures accurate timekeeping.
- **Durable Construction:** Soft resin strap, metal steel case, stainless steel case back, and high-transparency resin glass for comfort and wear resistance.



Calendar Colorful light Waterproof Alarm Stopwatch 12/24 12/24H

Multi-functional children's digital watch

Figure 3: Visual representation of the watch's key functions.



Figure 4: Details of the watch's internal movement and material components.

MAINTENANCE AND CARE

Water Resistance

The Edillas Kids Digital Watch is rated 30M/3ATM waterproof. This means it can withstand splashes, rain, and brief immersion in cold water, such as during hand washing or playing in the rain. It is not designed for swimming, diving, or hot water activities. Avoid pressing any buttons while the watch is submerged in water to prevent water ingress.



Figure 5: The watch being worn during water play, highlighting its water resistance.

Battery

The watch uses 1 Lithium Metal battery (included). The battery is designed for long life. If you experience issues with the watch's power or functionality that you suspect are battery-related, please contact customer support.

Cleaning

To clean the watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the watch's finish or components.

TROUBLESHOOTING

- **Screen is blank or unresponsive:** Check if the battery needs replacement. If the issue persists, contact customer support.
- **Buttons are not responding:** Ensure the watch is not in a locked mode (if applicable, though this model typically does not have one). If buttons remain unresponsive, a reset might be needed (by removing and reinserting the battery,

which should be done by a professional), or contact customer support.


- **Time is inaccurate:** Re-set the time following the instructions in the 'Setting Time and Date' section. If inaccuracy persists, the battery might be low or the movement could be faulty.
- **Hourly Chime is active/inactive unexpectedly:** Refer to the 'Activating/Deactivating Alarm and Hourly Chime' section to adjust this setting.

SPECIFICATIONS

Feature	Specification
Model Number	8203B
Case Thickness	8mm / 0.31 inches
Case Diameter	32mm / 1.26 inches
Strap Width	15mm / 0.59 inches
Total Length (Watch + Strap)	21cm / 8.26 inches
Min Fit Wrist	13.5cm / 5.31 inches
Max Fit Wrist	19cm / 7.48 inches
Weight	24g / 0.05lb
Water Resistance	30M / 3ATM
Battery Type	1 Lithium Metal battery (included)
Recommended Age	4-15 years



Max Fit Wrist: 19cm/7.48in
Min Fit Wrist: 13.5cm/5.31in

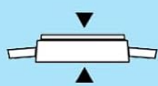

Case Thickness:
8mm/0.31in



Weight: 24g



Figure 6: Detailed dimensions and weight of the watch.

WARRANTY AND SUPPORT

Edillas provides a warranty for manufacturing defects. If you encounter any issues with your watch, please contact our customer support team. We are committed to providing satisfactory service and will assist with troubleshooting or replacements as needed.

For support, please refer to the contact information provided with your purchase or visit the official Edillas brand store online.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DS632RYB>

More documents and user manuals: <https://manuals.plus/>