

Piebert 2975680200

Piebert Lint Filter Replacement for Beko Tumble Dryers

Model: 2975680200

1. INTRODUCTION

This instruction manual provides essential information for the proper installation, operation, and maintenance of your new Piebert lint filter. This filter is designed as a compatible replacement part for various Beko, Grundig, and Cylinda tumble dryer models, including the Beko 2975680200. Please read this manual thoroughly before installation and retain it for future reference.

2. SAFETY INSTRUCTIONS

- **Disconnect Power:** Always ensure the tumble dryer is unplugged from the power outlet before attempting any installation, removal, or maintenance of the lint filter. Failure to do so may result in electric shock.
- **Handle with Care:** While installing or removing the filter, avoid applying excessive force that could damage the filter or the dryer's housing.
- **Keep Away from Children:** Store the lint filter and any packaging materials out of reach of children.
- **Proper Fit:** Ensure the replacement filter fits securely and correctly into its designated slot. An improperly seated filter can lead to reduced dryer performance or potential damage.

3. PACKAGE CONTENTS

Verify that your package contains the following item:

- 1 x Piebert Lint Filter (Part Number: 2975680200)

4. SETUP AND INSTALLATION

Follow these steps to install the Piebert lint filter:

1. **Power Disconnection:** Unplug the tumble dryer from the electrical outlet to ensure safety.
2. **Locate Filter Slot:** Open the dryer door and locate the lint filter slot, typically found at the bottom of the door opening or inside the drum.
3. **Remove Old Filter:** Grasp the handle or edges of the existing lint filter and pull it straight out. Dispose of the old filter responsibly.

4. **Insert New Filter:** Carefully align the new Piebert lint filter with the slot. Push it firmly into place until it sits flush with the dryer's surface. Ensure there are no gaps around the edges.
5. **Verify Fit:** Gently try to wiggle the filter to confirm it is securely seated and does not move freely.
6. **Restore Power:** Close the dryer door and plug the tumble dryer back into the electrical outlet.

5. OPERATING INSTRUCTIONS

The lint filter plays a crucial role in your tumble dryer's operation by trapping lint and debris from your clothes. It is a passive component that requires no active operation beyond proper installation and regular cleaning.

- **Before Each Load:** Always ensure the lint filter is clean and properly installed before starting a drying cycle. A clogged filter can significantly reduce drying efficiency and pose a fire hazard.
- **During Operation:** The filter will collect lint during the drying process.

6. MAINTENANCE

Regular cleaning of the lint filter is essential for optimal dryer performance and safety.

6.1. Cleaning the Lint Filter

1. **Power Off:** Unplug the tumble dryer from the power supply.
2. **Remove Filter:** Open the dryer door and pull the lint filter straight out of its slot.
3. **Remove Lint:** Gently peel off any accumulated lint from the filter screen. Most lint can be removed by hand.
4. **Rinse (if necessary):** If the filter screen is heavily soiled or has a waxy buildup from fabric softener sheets, you may rinse it under warm running water. Use a soft brush and mild detergent if needed.
5. **Dry Thoroughly:** Ensure the filter is completely dry before reinserting it into the dryer. A damp filter can cause moisture issues or damage.
6. **Reinstall Filter:** Push the clean, dry filter back into its slot until it is securely seated.
7. **Restore Power:** Plug the tumble dryer back into the electrical outlet.

6.2. Frequency of Cleaning

It is recommended to clean the lint filter **after every load** to maintain optimal drying performance and prevent lint buildup, which can be a fire hazard.

6.3. Inspection for Damage

Periodically inspect the lint filter for any signs of damage, such as tears in the mesh, cracks in the frame, or warping. A damaged filter should be replaced immediately to prevent lint from entering the dryer's internal components, which can cause blockages and potential hazards.

7. TROUBLESHOOTING

If you experience issues related to lint filtration, consider the following:

Problem	Possible Cause	Solution
Clothes not drying efficiently	Clogged lint filter	Clean the lint filter thoroughly.

Problem	Possible Cause	Solution
Dryer overheating	Restricted airflow due to clogged filter	Clean the lint filter. If problem persists, inspect dryer vents.
Lint escaping into dryer drum/vent	Damaged or improperly seated filter	Inspect filter for damage; replace if torn. Ensure filter is fully seated.

8. SPECIFICATIONS

- **Part Number:** 2975680200
- **Brand:** Piebert
- **Included Components:** Lint filter
- **Color:** Black
- **Dimensions (L x W x H):** Approximately 37 x 20 x 10 cm
- **Weight:** Approximately 193 grams
- **Compatibility:** Compatible with various Beko, Grundig, and Cylinda tumble dryer models (refer to product description for extensive list).

9. WARRANTY AND SUPPORT

This Piebert lint filter is designed to meet high-quality standards. For specific warranty information, please refer to the terms and conditions provided by your retailer or the manufacturer at the time of purchase. If you encounter any issues or require further assistance, please contact the seller or manufacturer directly through their official support channels.