

[Manuals.plus](#) /

› [OSCAL](#) /

› OSCAL Wireless Earbuds User Manual

OSCAL Hibuds 6

OSCAL Wireless Earbuds User Manual

Model: Hibuds 6

PRODUCT OVERVIEW

The OSCAL Hibuds 6 are wireless earbuds designed for a high-fidelity audio experience with advanced features like Bluetooth 5.4 connectivity, noise-cancelling microphones, and extended battery life. They are built for comfort and durability, suitable for various activities.



Image: OSCAL Wireless Earbuds in their charging case, displaying battery levels for both earbuds and the case.

WHAT'S IN THE BOX

Multi-point Connection

HiBuds 6 can connect to two phones simultaneously for seamless switching without interruption.



Image: A flat lay showing the product packaging, the charging case with earbuds, a quick start guide, a USB-C charging cable, and two extra pairs of ear tips.

- OSCAL Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable
- User Manual (this document)
- Silicone Ear Tips (S, M, L sizes)

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Connect the provided USB-C cable to the charging port on the case and a power source. The LED display on the case will indicate the charging status.

One Single Charge, Up to 40hrs of Daily Use

400mAh Mega Battery

40 hrs



Recharged for 10 mins, Use for 50 mins

*The data is tested by OSCAL lab based on the volume at 50%. The actual use depends as use cases may vary.

Image: The OSCAL charging case with earbuds inside, showing an LED display indicating battery percentage and a graphic illustrating up to 40 hours of total playtime.

A 10-minute charge can provide approximately 50 minutes of use.

2. Pairing with Your Device

1. Ensure the earbuds are in the charging case and the case has power.
2. Open the charging case lid. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth.
4. Search for "HiBuds 6" in the list of available Bluetooth devices.
5. Select "HiBuds 6" to connect. Once connected, the earbuds will automatically reconnect to your device when taken out of the case.

Fully Compatible

Compatible with devices that run on iOS,
Android OS



iOS



Android



Windows



Image: A smartphone screen showing the Bluetooth settings with "HiBuds 6" listed as a connected device, next to the charging case with earbuds.

3. Fitting the Earbuds

Select the silicone ear tips that provide the most comfortable and secure fit for your ears. A proper seal is essential for optimal sound quality and noise isolation.

Three Sizes of Silicone Ear Tips

There Is Always One for You



Image: A close-up of an ear with an earbud properly inserted, alongside small, medium, and large silicone ear tips.

OPERATING INSTRUCTIONS

Touch Controls

The earbuds feature touch-sensitive controls for easy management of audio playback and calls.

Action	Function
Single Tap (Left/Right)	Play/Pause Music, Answer/End Call
Double Tap (Right)	Next Track
Double Tap (Left)	Previous Track
Triple Tap (Left/Right)	Activate Voice Assistant

Action	Function
Long Press (2 seconds)	Reject Call

Voice Assistant Access

Press and hold the right earbud for 2 seconds in standby or music mode to instantly summon your device's voice assistant (e.g., Siri, Google Assistant).

Automatic Connection

Once initially paired, HiBuds 6 will connect to your device automatically.

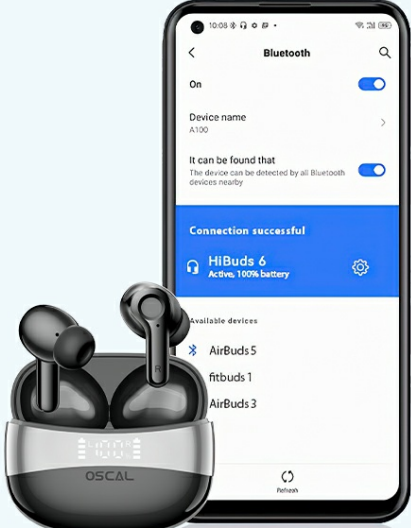


Image: A woman wearing an OSCAL earbud, demonstrating the use of voice assistant functionality.

Multi-point Connection

The Hibuds 6 supports multi-point connection, allowing you to connect to two devices simultaneously. This enables seamless switching between, for example, a smartphone and a laptop without needing to manually disconnect and reconnect.

One Pair, Two Devices.

Multipoint Connection

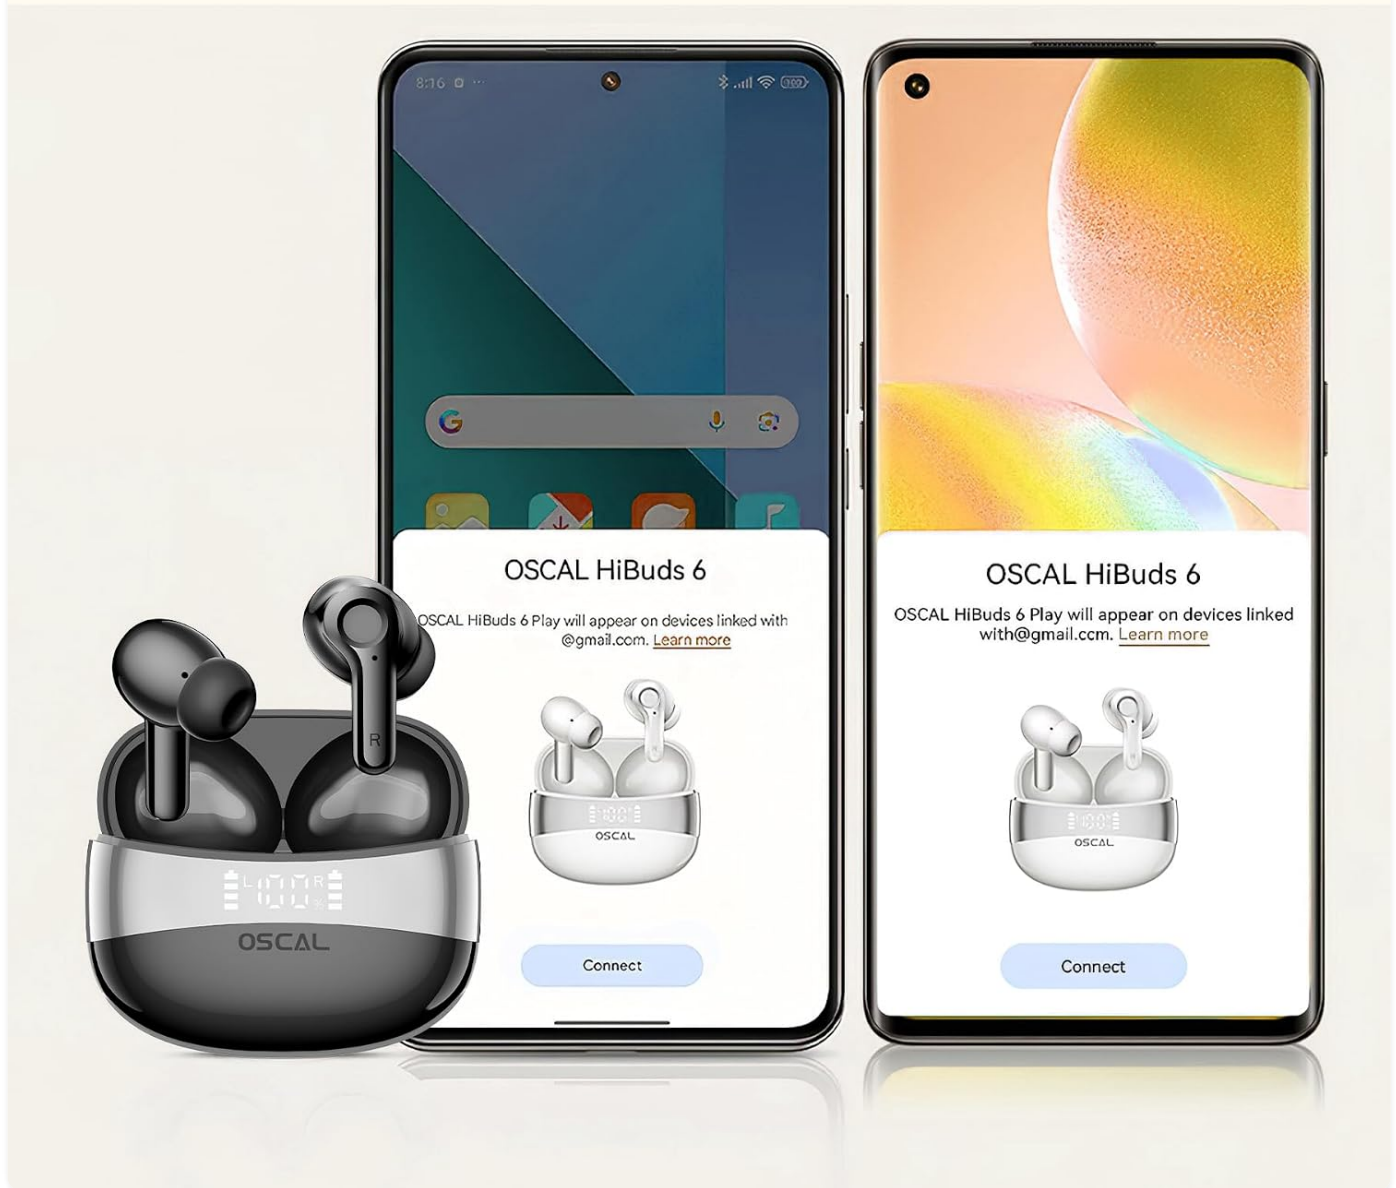


Image: The OSCAL earbuds and charging case positioned between two smartphones, illustrating the multi-point connection feature.

Battery Life and LED Display

The earbuds provide up to 8 hours of playtime on a single charge, with the charging case extending total battery life to 40 hours. The LED display on the charging case shows the battery percentage of the case and individual battery bars for the left and right earbuds.

What's in the box?



- User Guide
- OSCAL Earbuds
- Charging Case
- Type-C Charging Cable
- Two Extra Pairs of Eartips

Image: A woman holding the OSCAL charging case, with a close-up showing the digital LED display indicating the battery percentage of the case and the charge level of each earbud.

MAINTENANCE

Cleaning

Regularly clean your earbuds and charging case to ensure optimal performance and hygiene. Use a soft, dry, lint-free cloth. For ear tips, you may remove them and gently wipe with a damp cloth, ensuring they are completely dry before reattaching.

Do not use abrasive cleaners, alcohol, or chemical solvents.

Water Resistance (IPX7)

The earbuds are IPX7 rated, meaning they are protected against temporary immersion in water (up to 1 meter for 30 minutes). This makes them suitable for use during workouts or in light rain.

Important Note:

- The charging case is NOT water-resistant. Avoid exposing the charging case to water or moisture.
- Ensure earbuds are completely dry before placing them back into the charging case to prevent damage.

Worry-free from Sweat, Rain & Splash

IPX7 Certified

IPX7



*The charging case is not dust or water resistant.

Image: Two OSCAL earbuds partially submerged in water, illustrating their IPX7 water-resistant design.

TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing/connecting	◦ Ensure earbuds are charged and in pairing mode (open case lid). ◦ Turn off and on Bluetooth on your device. ◦ Forget "HiBuds 6" from your device's Bluetooth list and re-pair. ◦ Place earbuds back in the case, close the lid, wait a few seconds, then open again.

Problem	Possible Solution
Only one earbud works	◦ Ensure both earbuds are charged. ◦ Place both earbuds back in the charging case, close the lid, and then open it again. ◦ Try resetting the earbuds (refer to the full user manual for specific reset instructions if available).
Low volume or poor sound quality	◦ Adjust volume on both your device and via earbud controls. ◦ Ensure ear tips provide a good seal in your ear. Try different sizes. ◦ Clean any debris from the earbud nozzles.
Charging case not charging	◦ Check the USB-C cable and power adapter. Try a different cable or adapter. ◦ Ensure the charging port is clean and free of debris.

SPECIFICATIONS

Feature	Detail
Model Name	Hibuds 6
Connectivity Technology	Wireless, Bluetooth 5.4
Audio Driver Type	13mm Dynamic Driver
Battery Life (Earbuds)	Up to 8 hours per charge
Total Playtime (with Case)	Up to 40 hours
Charging Case Battery Capacity	400 mAh
Charging Case Charging Time	Approx. 1.5 hours
Water Resistance Rating	IPX7 (Earbuds only)
Earbud Weight	Approx. 4.15g (0.15oz) per earbud
Frequency Range	20 Hz - 20,000 Hz
Microphone	AI-enhanced ENC (Environmental Noise Cancellation)
Control Type	Touch Control
Compatible Devices	Cellphones, Tablets, Desktops (iOS, Android, Windows)

Fully Compatible

Compatible with devices that run on iOS, Android OS



iOS



Android



Windows



Image: A visual representation of the OSCAL earbuds and charging case surrounded by various compatible devices, including iPhones, Android phones, laptops, and smartwatches, highlighting broad compatibility.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your product packaging or visit the official OSCAL website. Keep your proof of purchase for warranty claims.

Manufacturer: OSCAL

Model Number: Hibuds 6

UPC: 810175528991

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question