

LAZYBOI LA808

LAZYBOI LA808 21V Cordless Electric Leaf Blower User Manual

Model: LA808

1. SAFETY INSTRUCTIONS

Read all safety warnings and instructions before operating this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

General Safety

- Always wear appropriate personal protective equipment, including eye protection, hearing protection, and gloves, when operating the leaf blower.
- Keep children and bystanders away while operating the leaf blower.
- Do not operate the leaf blower in wet conditions or rain.
- Inspect the leaf blower for any damage before each use. Do not operate if damaged.
- Ensure all vents are clear of debris to prevent overheating.

Battery Safety

- Use only the charger and batteries specified by LAZYBOI for this product.
- Charge batteries in a well-ventilated area.
- Do not expose batteries to extreme temperatures or direct sunlight.
- The batteries are equipped with overheat protection. If the battery becomes excessively hot during use, allow it to cool down for at least 5 minutes before recharging or resuming operation.
- For optimal battery lifespan, fully charge batteries before initial use.
- If storing the battery for an extended period (up to one year), ensure it is fully charged and recharge every six months for optimal performance.

2. PRODUCT OVERVIEW

Package Contents

The LAZYBOI LA808 Cordless Electric Leaf Blower package includes the following components:

- Leaf Blower Unit
- Extension Tube
- 2 x 21V 2.0Ah Lithium-Ion Batteries
- Battery Charger
- User Manual

Product Diagram



This image displays the complete LAZYBOI LA808 leaf blower kit, including the main blower unit, the long extension tube, two 21V 2.0Ah lithium-ion batteries, and the battery charger.

3. SETUP

Assembly

1. Align the extension tube with the blower's air outlet.
2. Push the tube firmly onto the outlet until it clicks into place, ensuring a secure connection.

Battery Charging

Before first use, fully charge both batteries. The charger provides rapid 1-hour charging.

1. Connect the charger to a standard power outlet.
2. Insert a 21V 2.0Ah battery into the charger.
3. The LED indicator on the charger will illuminate **red** to indicate charging.
4. Once fully charged, the LED indicator will turn **green**.
5. Remove the battery from the charger once charging is complete.



This image illustrates the battery charging process. Two 21V 2.0Ah batteries are connected to the charger, which is plugged into a wall outlet. The LED indicators on the charger show red for charging and green for fully charged.

Cordless with Ease



150 MPH



18000
RPM

SPEED



TURBO



This image highlights the 1-hour fast charger, demonstrating a battery being inserted into the charging dock. The graphic indicates rapid charging with electrical spark effects.

Battery Installation

1. Ensure the leaf blower is turned off.
2. Slide a charged battery into the battery slot on the blower handle until it locks securely into place.
3. To remove, press the battery release button and slide the battery out.

4. OPERATION

Powering On/Off

- To turn on the leaf blower, press the power button located on the handle.
- To turn off, press the power button again.

Speed Modes

The LAZYBOI LA808 features two speed modes for versatile cleaning tasks.

- **Low Speed Mode:** Ideal for lighter debris and extended operation. Provides approximately 30 minutes of continuous use with two fully charged batteries.
- **High Speed / Turbo Mode:** Engages advanced turbo technology for maximum air speed up to 150 MPH, effectively tackling stubborn debris. This mode consumes more power, resulting in approximately 20 minutes of continuous use with two fully charged batteries.



This image provides a detailed view of the leaf blower's controls, including the power button and the switch for selecting between the two speed modes, including the turbo function.

1-Hour Fast Charger

Never worry about continuous working time



(Only compatible with LAZYBOL tools)

This diagram visually represents the internal workings of the leaf blower, emphasizing its performance metrics: 150 MPH air speed, 18000 RPM motor speed, and the turbo mode capability.

Usage Tips

- Start with the low-speed mode for general clearing and switch to high-speed/turbo for tougher areas.
- Maintain a comfortable distance from the debris to maximize airflow effectiveness.
- The lightweight and cordless design makes it suitable for various tasks such as clearing sidewalks, patios, driveways, woodworking studios, automotive maintenance, and even roof cleaning.



Driveway Cleaning



Yard/Patio Cleaning



Dust/Sawdust Cleaning



Lawn Cleaning

This collage demonstrates various applications of the leaf blower, including clearing driveways, patios, sawdust from workshops, and leaves from lawns.



This image shows a person operating the leaf blower, emphasizing its lightweight design (3.38 lbs) and ease of maneuverability for tasks like clearing leaves from a paved area.

5. MAINTENANCE

Cleaning

- After each use, disconnect the battery and wipe down the exterior of the blower with a clean, damp cloth.
- Ensure the air intake and exhaust vents are free from debris to maintain proper airflow and prevent overheating.
- Do not use harsh chemicals or abrasive cleaners.

Storage

- Store the leaf blower and batteries in a cool, dry place, away from direct sunlight and moisture.
- Remove the battery from the blower before storing for extended periods.
- For optimal battery health, store fully charged and recharge every six months if not in use.

Battery Care

- Always allow batteries to cool down for at least 5 minutes after heavy use before recharging.
- Avoid completely draining the battery before recharging to prolong its lifespan.
- Do not attempt to open or modify the battery pack.

6. TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Blower does not turn on	Battery not charged or improperly installed	Ensure battery is fully charged and securely inserted into the blower.
Reduced power or short operating time	Battery not fully charged; battery overheating; heavy debris in turbo mode	Fully charge battery. Allow battery to cool down if hot. Use appropriate speed mode for the task.
Blower stops unexpectedly during use	Battery overheat protection activated	Remove battery and allow it to cool down for at least 5 minutes before resuming operation.
Extension tube detaches during use	Tube not securely attached	Ensure the extension tube is firmly pushed onto the air outlet until it clicks into place.

7. SPECIFICATIONS

Technical Data

Feature	Specification
Brand	LAZYBOI
Model Name	LA808
Power Source	Battery Powered
Voltage	21 Volts
Maximum Motor Speed	18000 RPM
Maximum Air Speed	150 MPH
Battery Type	Lithium Ion (2 included)
Battery Capacity	2.0Ah
Charging Time	1 Hour (Fast Charger)
Operating Time (Low Speed)	Up to 30 minutes (with two batteries)
Operating Time (High Speed/Turbo)	Up to 20 minutes (with two batteries)
Item Weight	6.18 pounds
Product Dimensions (L x W x H)	16.9" x 7.68" x 7.28"
Material	Plastic
Special Features	Adjustable Speed, Adjustable Tube Length, Compact Design, Lightweight, Rechargeable

8. WARRANTY AND SUPPORT

Warranty Information

This LAZYBOI product is covered by a **12-month warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover damage caused by misuse, neglect, unauthorized modification, or normal wear and tear.

Customer Support

Should you encounter any issues or have questions regarding your LAZYBOI LA808 Cordless Electric Leaf Blower, please do not hesitate to contact our customer support team.

We are committed to providing assistance and will respond to your inquiries within 24 hours.

Contact Information:

Please refer to the contact details provided on your purchase receipt or the official LAZYBOI website for the most up-to-date support information.