

[Manuals.plus](#) /

> [GeckoMan](#) /

> GeckoMan Rotating Head Electric Fly Swatter Instruction Manual

GeckoMan BUGZILLA2201

GeckoMan Electric Fly Swatter Instruction Manual

Model: BUGZILLA2201

Brand: GeckoMan

INTRODUCTION

Welcome to the instruction manual for your new GeckoMan Rotating Head Electric Fly Swatter. This versatile device is designed to effectively eliminate flying insects indoors and outdoors, offering multiple usage options for your convenience. Please read this manual thoroughly before use to ensure safe and optimal operation.

IMPORTANT SAFETY INFORMATION

WARNING: High voltage. Keep out of reach of children and pets.

- Do not touch the electric mesh while the device is active.
- Do not use near flammable gases or liquids.
- Do not use in wet environments or expose to rain.
- Do not insert metal objects into the mesh.
- This product is not a toy.
- Ensure the device is fully charged before first use.

PRODUCT FEATURES

- **Patented Rotating Head Design:** Allows for easy bug catching from any angle, including on walls or surfaces. Can be locked for traditional swinging.
- **Extendable Telescoping Handle:** Stretches from 17 to 28 inches for reaching high spots like ceilings.
- **Efficient Rechargeable Battery:** Equipped with a 1200mAh rechargeable battery, conveniently recharged via USB Type-C port.
- **Effective Insect Elimination:** Delivers a powerful 3500V electric shock against flies, mosquitoes, fruit flies, gnats, wasps, spiders, hornets, and more. Features a 3-layer wire mesh for safety.
- **Multiple Usage Options:** Can be used handheld, standing to attract bugs, or wall-mounted as a stationary bug zapper.

PACKAGE CONTENTS

- GeckoMan Electric Fly Swatter Racket
- Telescopic Extension Pole (for 1-Pack + 1 Pole style)
- USB Type-C Charging Cable
- Stand Base
- Wall Mount Bracket (optional, if included)



Image showing the electric fly swatter racket, telescopic extension pole, USB Type-C charging cable, and stand base.

SETUP

Initial Charging

Before first use, fully charge the fly swatter.

1. Connect the USB Type-C charging cable to the charging port on the handle.
2. Plug the other end of the cable into a compatible USB power source (e.g., computer, power bank, AC adapter).
3. The charging indicator light will illuminate (e.g., red) during charging and change color (e.g., blue or off) when fully charged.
4. A 1200mAh rechargeable battery provides long-lasting use. The overcharge protection chip stops charging when fully charged.



Image illustrating the electric fly swatter being charged via a USB Type-C cable plugged into a wall outlet, with the stand base.

Attaching the Telescopic Pole (if applicable)

For extended reach, attach the telescopic pole to the base of the fly swatter handle. Ensure it is securely fastened.

Extend to Reach High Spots



A person holding the electric fly swatter with the telescopic extension pole, demonstrating its use for reaching high areas.

OPERATING INSTRUCTIONS

Power On/Off and Modes

The device has a slide switch on the handle for different modes:

- **OFF (O):** The device is powered off.
- **Manual Zap Mode (Sun Icon):** Slide the switch to the "Sun" icon. Press and hold the activation button (top button) to activate the electric mesh. Release the button to deactivate.
- **Auto Zap Mode (Light Bulb Icon):** Slide the switch to the "Light Bulb" icon. The electric mesh will remain active, and a UV light will illuminate to attract insects. This mode is ideal when the swatter is placed on its stand or wall-mounted.

Auto Zap Mode



The electric fly swatter in Auto Zap Mode, standing on its base on a bedside table with a glowing UV light, attracting insects while a person sleeps in the background.

Using the Rotating Head

The swatter head can rotate 90 degrees to adapt to various surfaces.

1. To rotate, gently pivot the head until it clicks into the desired angle.
2. This feature is useful for zapping bugs on walls, ceilings, or other flat surfaces.

Rotate Head to Capture on Surfaces



A person demonstrating the rotating head feature of the electric fly swatter, using it to zap a bug on a wall.

Using as a Traditional Racket

The head can be locked in a flat position for traditional swinging.

1. Ensure the head is in the flat position.
2. Swing the racket to make contact with flying insects.

Lock Head to Swing like a Racket



A sequence of images showing a person swinging the electric fly swatter like a tennis racket to catch flying insects.

MAINTENANCE

Cleaning

- Ensure the device is OFF and unplugged before cleaning.
- Use a soft, dry brush or cloth to gently remove any insect debris from the mesh.
- Do not wash the device with water or any liquids.
- Do not use abrasive cleaners or solvents.

Storage

- Store the fly swatter in a cool, dry place away from direct sunlight and moisture.
- If storing for an extended period, charge the battery every 3 months to maintain its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Swatter not zapping	Battery is low or dead.	Charge the device fully.
Swatter not zapping	Not in active mode (Manual or Auto Zap).	Ensure the slide switch is in the correct position and the activation button is pressed (if in Manual mode).
Light not turning on	Device not in Auto Zap mode.	Slide the switch to the "Light Bulb" icon.
Difficulty reaching bugs	Pole not extended or head not rotated.	Extend the telescopic pole or rotate the swatter head for better access.

SPECIFICATIONS

Feature	Detail
Brand	GeckoMan
Model Number	BUGZILLA2201
Color	White
Product Dimensions	9.5"L x 1.2"W x 17.5"H
Item Weight	1.65 pounds (0.75 Kilograms)
Battery	1200mAh Lithium Ion (Rechargeable)
Voltage	3500V (Electric Shock)
Handle Extension	17 to 28 inches
Charging Port	USB Type-C

WARRANTY AND SUPPORT

For questions, returns, or refunds, please contact GeckoMan support.

Email: support@geckoman.net

Manufactured by GeckoMan LLC, Sheridan, WY 82801, USA.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DS8SK65N>

More documents and user manuals: **<https://manuals.plus/>**