

[manuals.plus](#) /

- › [Beautiful by Drew Barrymore](#) /
- › [Beautiful by Drew Barrymore Infrared Air Fry Toaster Oven \(Model 19330\) User Manual](#)

Beautiful by Drew Barrymore 19330

Beautiful by Drew Barrymore Infrared Air Fry Toaster Oven (Model 19330) User Manual

Comprehensive instructions for safe and efficient operation of your Beautiful Infrared Air Fry Toaster Oven.

1. INTRODUCTION

This manual provides essential information for the proper use, maintenance, and troubleshooting of your Beautiful by Drew Barrymore Infrared Air Fry Toaster Oven, Model 19330. This versatile appliance combines multiple cooking functions, including air frying, toasting, baking, broiling, and more, utilizing infrared heating and convection technology for efficient cooking.

Please read all instructions carefully before initial use and retain this manual for future reference.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in the oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and similar products.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Exercise extreme caution when removing tray or disposing of hot grease.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.

3. COMPONENTS AND FEATURES

Familiarize yourself with the parts of your Infrared Air Fry Toaster Oven:



Figure 3.1: Front view of the Beautiful Infrared Air Fry Toaster Oven, showcasing its sleek design and digital control panel.

- **Control Panel:** Touch-activated digital display for selecting functions, adjusting settings, and monitoring cooking progress.
- **Oven Door:** Dropdown door for easy access to the cooking cavity.
- **Handle:** Ergonomically designed handle for opening and closing the oven door.
- **Wire Rack:** For general baking and toasting.
- **Bake Pan:** For baking, roasting, and catching drips.
- **Air Frying Basket:** Specifically designed for air frying, allowing hot air to circulate around food for crispy results.
- **Removable Crumb Tray:** Located at the bottom for easy cleaning of crumbs and food debris.

Key Features:

- **Quartz-Infrared Heating with Convection:** Provides rapid and even heating, resulting in up to 80% faster preheat times compared to conventional ovens.
- **10 Preset Cooking Functions:** Includes Toast, Bagel, Air Fry, Broil, Bake, Pizza, Reheat, Cookies, Slow Cook, and Dehydrate.
- **Large 15 L Capacity:** Accommodates a 12-inch pizza, 9 slices of toast, or a 9x13-inch casserole dish, serving 5-7 people.
- **Powerful 1800-Watt Cooking System:** Ensures efficient and quick cooking.
- **Touch-Activated Display:** The digital screen illuminates only when needed, providing a clean aesthetic.
- **Adjustable 3-Speed Convection Fan:** Settings from low to turbo for customized cooking.



Figure 3.2: The oven in use, demonstrating its capacity and highlighting the 10 preset cooking functions available: Toast, Bagel, Air Fry, Broil, Bake, Pizza, Reheat, Cookies, Slow Cook, and Dehydrate.



Figure 3.3: A close-up of the touch-activated digital display, which illuminates only when in use, providing a seamless user experience.

4. SETUP AND FIRST USE

4.1 Unpacking

1. Carefully remove the toaster oven and all accessories from the packaging.
2. Remove any packing materials, stickers, or labels from the appliance.
3. Inspect the appliance for any damage. Do not use if damaged.

4.2 Placement

- Place the toaster oven on a stable, level, heat-resistant surface.
- Ensure there is adequate clearance (at least 4 inches) on all sides and above the oven for proper ventilation. Do not place directly under cabinets.
- Keep the appliance away from flammable materials such as curtains, walls, and paper products.

4.3 Initial Cleaning

1. Before first use, wipe the exterior of the oven with a damp cloth.
2. Wash the wire rack, bake pan, and air frying basket in warm, soapy water. Rinse thoroughly and dry completely.
3. Do not immerse the main unit, cord, or plug in water.

4.4 First Use (Burn-Off)

It is normal for a new appliance to emit a slight odor or smoke during its first use. This is harmless and will dissipate quickly.

1. Plug the oven into a grounded electrical outlet.
2. Set the oven to "Bake" at 400°F (200°C) for approximately 15 minutes.

3. Ensure the area is well-ventilated during this process.
4. After 15 minutes, turn off the oven and unplug it. Allow it to cool completely before proceeding with cooking.

5. OPERATING INSTRUCTIONS

5.1 General Operation

1. Ensure the oven is plugged into a standard 120V AC outlet.
2. The touch-activated display will illuminate when touched or when the oven is plugged in.
3. Place food on the appropriate accessory (wire rack, bake pan, or air frying basket) and insert into the oven.



Figure 5.1: The oven door open, revealing the internal racks and the air frying basket and bake pan in position. This illustrates the versatile interior setup for various cooking methods.

5.2 Selecting Cooking Functions

The oven features 10 preset cooking functions. Touch the desired function icon on the control panel to select it.

- **Toast:** Ideal for bread, bagels, and frozen waffles. Adjust shade level.
- **Bagel:** Toasts the cut side of bagels while gently warming the outside.
- **Air Fry:** For crispy foods like fries, chicken wings, and vegetables. Use with the air frying basket.
- **Broil:** For browning and cooking thin cuts of meat or melting cheese.
- **Bake:** Standard baking for cakes, cookies, and casseroles.
- **Pizza:** Optimized for cooking fresh or frozen pizzas.
- **Reheat:** Gently warms leftovers without drying them out.
- **Cookies:** Specific setting for baking cookies.
- **Slow Cook:** For low and slow cooking of stews and roasts.
- **Dehydrate:** For drying fruits, vegetables, and making jerky.



Figure 5.2: The air frying basket filled with vegetables, alongside a pizza, demonstrating the oven's capability for simultaneous or varied cooking tasks.



Figure 5.3: A hand carefully removing a casserole dish from the oven, illustrating the ease of access and the oven's capacity for larger items.

5.3 Adjusting Time and Temperature

After selecting a function, the default time and temperature will appear. Use the +/- buttons on the control panel to adjust these settings to your desired values. Press the Start/Pause button to begin cooking.

5.4 Convection Fan Settings

The convection fan can be adjusted to 3 speeds (low, medium, turbo) for most functions. This allows for precise control over air circulation, which is particularly useful for air frying and achieving even browning.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. **Always unplug the oven** from the power outlet and allow it to cool completely before cleaning.
2. **Exterior:** Wipe the exterior surfaces with a damp cloth and mild detergent. Dry thoroughly. Do not use abrasive cleaners or metal scouring pads.
3. **Interior:** Wipe the interior walls with a damp cloth. For stubborn stains, use a non-abrasive sponge with mild soap. Avoid spraying cleaners directly into the oven.
4. **Crumb Tray:** Pull out the removable crumb tray from the bottom of the oven. Discard crumbs and wash the tray in warm, soapy water. Rinse and dry thoroughly before reinserting.
5. **Accessories:** The wire rack, bake pan, and air frying basket can be washed in warm, soapy water. They are generally dishwasher safe, but hand washing is recommended for longevity.
6. **Do Not Immerser:** Never immerse the main unit, power cord, or plug in water or any other liquid.

7. TROUBLESHOOTING

If you encounter issues with your toaster oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure plug is securely in outlet; check household power; reset circuit breaker.
Food not cooking evenly.	Incorrect rack position; overcrowding food; uneven food placement.	Refer to cooking guide for recommended rack positions; do not overcrowd; arrange food in a single layer.
Excessive smoke during cooking.	Food residue or grease buildup; fatty foods.	Clean the oven interior and crumb tray thoroughly; use the bake pan to catch drips from fatty foods.
Display not responding.	Temporary electronic glitch.	Unplug the oven for 1 minute, then plug it back in to reset.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

- **Brand:** Beautiful by Drew Barrymore
- **Model Number:** 19330
- **Power:** 1800 Watts
- **Capacity:** 15 Liters (fits 12" pizza, 9 slices of toast, 9x13" casserole)
- **Product Dimensions:** 15.9"D x 19.4"W x 8.81"H
- **Item Weight:** 8 pounds
- **Material:** Stainless Steel
- **Control Type:** Touch Control, Digital Display

- **Special Features:** Quartz-Infrared Heating, Convection, Removable Crumb Tray, Programmed Cooking Modes
- **Included Components:** Air Frying Basket, Bake Pan, Wire Rack



Figure 8.1: The toaster oven on a kitchen counter, demonstrating its compact footprint while highlighting its capacity to prepare multiple bagels, serving 5-7 people.

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information or assistance with your Beautiful by Drew Barrymore Infrared Air Fry Toaster Oven, please refer to the warranty card included with your purchase or visit the official Beautiful by Drew Barrymore website. If you require further support, please contact customer service using the contact details provided in your product documentation.