

## Beautiful 19330

# Beautiful Infrared Air Fry Toaster Oven (Model 19330) - Instruction Manual

Your guide to operating and maintaining your versatile kitchen appliance.

## PRODUCT OVERVIEW

---

The Beautiful Digital Air Fry Toaster Oven with Infrared Technology is a compact yet versatile kitchen essential designed to integrate multiple cooking functions. Its space-saving design accommodates various food items, including a 12-inch pizza, 9 slices of toast, or a 9x13-inch casserole dish. This appliance features 10 preset cooking functions, allowing for easy preparation of a wide range of meals.

### Key Features:

- **Quartz-Infrared Heating:** Provides 80% faster preheat compared to conventional ovens, saving time on meal preparation.
- **Convection and Air Fry Technology:** Combines intense heat and super convection for crispy fried favorites with less fat.
- **Large 15 L Capacity:** Suitable for serving 5-7 people.
- **10 Preset Cooking Functions:** Includes Toast, Bagel, Air Fry, Broil, Bake, Pizza, Reheat, Cookies, Slow Cook, and Dehydrate.
- **Powerful 1800-Watt Cooking System:** Ensures efficient and consistent cooking.
- **Touch-Activated Display:** A screen that illuminates only when needed for a sleek appearance.
- **Adjustable 3-Speed Convection Fan:** Settings from low to turbo for customized cooking.
- **Removable Crumb Tray:** Facilitates easy cleanup.

## SETUP

---

1. **Unpack the Appliance:** Carefully remove the toaster oven and all accessories from the packaging. Retain packaging for future storage or shipping.
2. **Remove Packing Materials:** Ensure all internal and external packing materials, including any protective films or tape, are removed from the appliance and accessories.
3. **Clean Before First Use:** Wipe the exterior with a damp cloth. Wash the air frying basket, bake pan, wire rack, and removable crumb tray with warm, soapy water. Rinse thoroughly and dry completely.

4. **Placement:** Place the toaster oven on a stable, heat-resistant, and level surface. Ensure there is adequate clearance (at least 4-6 inches) on all sides and above the appliance for proper ventilation. Do not place near flammable materials.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

## OPERATING INSTRUCTIONS

---

### Control Panel Overview:

The toaster oven features a touch-activated digital display and intuitive controls for easy operation.

- **ON/OFF Button:** Powers the appliance on or off.
- **MENU Button:** Cycles through the 10 preset cooking functions.
- **TEMP Button:** Adjusts the cooking temperature.
- **TIME Button:** Adjusts the cooking time.
- **FAN Button:** Controls the convection fan speed (Low, Medium, High).
- **WARM Button:** Activates the warming function.
- **TOP/BTM Button:** Selects heating elements (Top, Bottom, or Both).
- **Control Dial:** Used to adjust temperature and time settings after selecting the respective button.

### Using Preset Cooking Functions:

1. **Select Function:** Press the MENU button repeatedly until the desired preset function (e.g., Air Fry, Bake, Toast) is highlighted on the display.
2. **Adjust Settings (Optional):** For most presets, the appliance will suggest default temperature and time. You can adjust these using the TEMP and TIME buttons, then turning the Control Dial.
3. **Start Cooking:** Once settings are confirmed, press the Control Dial to start the cooking cycle.
4. **Monitoring:** The transparent door allows you to monitor cooking progress.

### Example: Air Frying Chicken Nuggets

1. Place chicken nuggets in the air frying basket.
2. Insert the air frying basket into the oven on the appropriate rack level.
3. Press the ON/OFF button to power on the oven.
4. Press the MENU button until 'Air Fry' is selected.
5. Adjust the temperature to 410°F using the TEMP button and Control Dial.
6. Adjust the time to 10 minutes using the TIME button and Control Dial.
7. Press the Control Dial to begin air frying.



Image: The digital display showing the 10 preset cooking functions, including Toast, Bagel, Air Fry, Broil, Bake, Pizza, Reheat, Cookies, Slow Cook, and Dehydrate.



Image: The toaster oven showcasing its compact yet spacious interior, capable of fitting a 12-inch pizza or 9 slices of toast.



Image: A close-up of the oven interior, illustrating the Quartz-Infrared heating elements for efficient cooking.



Image: The sleek touch-activated display panel, which illuminates only when in use, providing a clean aesthetic.



Image: A pizza cooking inside the toaster oven, demonstrating its capacity for larger items.

## MAINTENANCE AND CLEANING

---

- **Always Unplug:** Before cleaning, ensure the appliance is unplugged from the power outlet and has cooled down completely.
- **Removable Crumb Tray:** Slide out the crumb tray from the bottom of the oven. Discard crumbs and wash the tray with warm, soapy water. Rinse and dry thoroughly before reinserting.
- **Accessories:** The air frying basket, bake pan, and wire rack can be washed with warm, soapy water. For stubborn food residue, soak in warm water before cleaning. All accessories should be dried completely.
- **Interior:** Wipe the interior walls with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
- **Exterior:** Clean the exterior surface with a soft, damp cloth. Do not immerse the appliance in water or any other liquid.

## TROUBLESHOOTING

---

- **Appliance Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check your household circuit breaker.
- **Food Not Cooking Evenly:** Ensure food is arranged in a single layer in the basket or on the tray for optimal air circulation. Adjust rack position or rotate food halfway through cooking.
- **Smoke Emitting from Oven:** A small amount of smoke during initial use is normal. Excessive smoke may indicate food residue or grease buildup. Clean the interior and accessories thoroughly. Reduce oil usage if air frying.
- **Digital Display Not Responding:** Unplug the appliance for a few minutes, then plug it back in to reset the system.

## SPECIFICATIONS

---

Feature	Detail
Brand	Beautiful
Model Name	Air Toaster
Item Model Number	19330
Color	Sage Green
Power Source	Electric (1800-watt)
Product Dimensions	15.9"D x 19.4"W x 8.81"H
Capacity	15 Liters (0.95 Cubic Inches)
Material	Stainless Steel
Control Type	Touch Control
Special Features	Crumb Tray, Programmed Cooking Modes, Digital Display, Quartz-Infrared Heating, Convection
Item Weight	8 pounds

## WARRANTY AND SUPPORT

---

For warranty information, please refer to the warranty card included with your purchase or visit the official Beautiful by Drew Barrymore website. For technical support or customer service inquiries, please contact the manufacturer directly using the contact information provided in your product documentation.

Video: A seller's review of the Beautiful Air Fry Toaster Oven, highlighting its features and performance. This video is provided by a seller and offers additional insights into the product's use.