

Beautiful 19330

Beautiful Infrared Air Fry Toaster Oven (Model 19330) Instruction Manual

Brand: Beautiful | Model: 19330

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your Beautiful Infrared Air Fry Toaster Oven, Model 19330. This versatile appliance combines the functionality of a toaster oven with the benefits of infrared heating and air frying technology, offering a wide range of cooking possibilities. Please read this manual thoroughly before first use and retain it for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. This appliance is for household use only.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to 'off', then remove plug from wall outlet.

- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Beautiful Infrared Air Fry Toaster Oven is designed for efficiency and convenience. It features a sleek black finish with a touch-activated digital display.

Key Features:

- **Quartz-Infrared Heating:** Provides 80% faster preheat compared to conventional ovens.
- **10 Preset Cooking Functions:** Includes Toast, Bagel, Air Fry, Broil, Bake, Pizza, Reheat, Cookies, Slow Cook, and Dehydrate.
- **Large Capacity:** 15 L interior accommodates a 12-inch pizza, 9 slices of toast, or a 9x13-inch casserole dish.
- **Powerful 1800-Watt System:** Ensures efficient cooking.
- **Touch-Activated Display:** Screen illuminates only when needed for a clean aesthetic.
- **Adjustable Convection Fan:** 3-speed settings (low to turbo) for optimal air circulation.
- **Easy Cleanup:** Features a removable crumb tray.

Included Accessories:

- Air frying basket
- Bake pan
- Wire rack



Image: The Beautiful Infrared Air Fry Toaster Oven in black, featuring a digital display highlighting its 10 preset cooking functions. A hand is shown placing a tray of cookies into the oven.



Image: A close-up of the toaster oven's control panel, featuring a touch-activated digital display that illuminates to show temperature and cooking settings.



Image: A large pizza baking inside the Beautiful Infrared Air Fry Toaster Oven, illustrating the spacious interior.

SETUP

1. **Unpacking:** Carefully remove the toaster oven and all accessories from the packaging. Remove any protective films or stickers from the appliance.
2. **Cleaning:** Before first use, wipe the exterior of the oven with a damp cloth. Wash the air frying basket, bake pan, and wire rack in warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the toaster oven on a stable, heat-resistant surface, ensuring adequate ventilation

around all sides. Do not place it directly against a wall or under cabinets. Maintain at least 4 inches of clearance on all sides.

4. **Power Connection:** Ensure the power cord is not damaged. Plug the appliance into a grounded 120V AC electrical outlet.
5. **Initial Burn-Off:** It is recommended to run the oven empty for about 15 minutes at 400°F (200°C) to burn off any manufacturing residues. A slight odor or smoke may be present during this process; this is normal. Ensure the area is well-ventilated.

Your browser does not support the video tag.

Video: This official seller video demonstrates the unboxing and initial setup of a Nuwave Bravo Pro Toaster Oven, which shares similar features and setup procedures with the Beautiful Infrared Air Fry Toaster Oven. It shows how to remove packaging, place accessories, and prepare the unit for first use.

OPERATING INSTRUCTIONS

Your Beautiful Infrared Air Fry Toaster Oven offers intuitive controls and preset functions for ease of use.

General Operation:

1. **Power On/Off:** Press the **ON/OFF** button to turn the appliance on or off.
2. **Select Function:** Use the **MENU** button to cycle through the 10 preset cooking functions (Toast, Bagel, Air Fry, Broil, Bake, Pizza, Reheat, Cookies, Slow Cook, Dehydrate). The display will show the selected function.
3. **Adjust Temperature:** Press the **TEMP** button, then use the dial to adjust the cooking temperature. The temperature range is 50°F to 450°F.
4. **Set Time:** Press the **TIME** button, then use the dial to adjust the cooking time. The time range is 1 minute to 99 hours and 99 minutes.
5. **Fan Speed:** Press the **FAN** button to cycle through 3 fan speed settings (Low, Medium, High) or turn the fan off.
6. **Top/Bottom Heating:** Use the **TOP/BTM** button to adjust the heat distribution between the top and bottom heating elements. This allows for precise cooking control.
7. **Start/Pause:** Press the **START/PAUSE** button to begin or pause cooking.
8. **Warm Function:** After cooking, press the **WARM** button to keep food warm at a default temperature of 140°F for up to 3 hours.

Using Preset Functions:

Each preset function is optimized with a default temperature and time. You can adjust these settings as needed after selecting a preset.

- **Air Fry:** Ideal for crispy foods like fries, chicken wings, and vegetables. Use the air frying basket.
- **Bake:** Perfect for cakes, cookies, and casseroles. Use the bake pan or an oven-safe dish.
- **Pizza:** Designed for cooking fresh or frozen pizzas. Place pizza on the wire rack or bake pan.
- **Toast/Bagel:** For perfectly browned toast or bagels. Place items directly on the wire rack.
- **Dehydrate:** For drying fruits, vegetables, or making jerky. Use the wire rack.

Your browser does not support the video tag.

Video: This official seller video provides a 'How-To' guide for operating a Nuwave Bravo Pro Toaster Oven, which features similar controls and functions to the Beautiful Infrared Air Fry Toaster Oven. It demonstrates how to power on, set temperature

and time, use fan speed, adjust top/bottom heating, and utilize preset menus.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your toaster oven.

Before Cleaning:

- Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.

Cleaning the Interior:

- Remove the crumb tray, wire rack, bake pan, and air frying basket. Wash these accessories in warm, soapy water or place them in the dishwasher.
- Wipe the interior walls with a damp cloth and a mild, non-abrasive cleaning solution. For stubborn stains, use a nylon scrubbing brush.
- Do not use abrasive cleaners or metal scouring pads, as they can damage the non-stick coating.

Cleaning the Exterior:

- Wipe the exterior surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- Clean the glass door with a glass cleaner or a damp cloth.

Crumb Tray:

- The removable crumb tray should be emptied and cleaned regularly to prevent grease buildup and potential fire hazards.

TROUBLESHOOTING

If you encounter any issues with your Beautiful Infrared Air Fry Toaster Oven, refer to the following common problems and solutions:

Common Troubleshooting Issues

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in; Power outage; Faulty outlet	Ensure plug is securely in outlet; Check household circuit breaker; Try a different outlet.
Food not cooking evenly	Incorrect temperature/time; Overcrowding; Fan speed too low	Adjust settings; Do not overcrowd the oven; Increase fan speed if applicable.
Smoke or unusual odor during cooking	Food residue; Initial burn-off; Fatty foods	Clean interior and accessories; This is normal for first use; Use a drip tray for fatty foods.
Digital display not responding	Temporary glitch; Power interruption	Unplug the unit for 1 minute, then plug back in; Ensure power supply is stable.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Beautiful Infrared Air Fry Toaster Oven (Model 19330)

Feature	Detail
Model Number	19330
Power	1800 Watts
Capacity	15 Liters
Dimensions (D x W x H)	15.9" x 19.4" x 8.81"
Weight	8 pounds
Material	Stainless Steel
Color	Black
Control Type	Touch Control
Special Features	Crumb Tray, Programmed Cooking Modes, Digital Display

WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please refer to the documentation included with your purchase or visit the official Beautiful by Drew Barrymore website. Keep your proof of purchase for any warranty claims.