

radtel RT-830

Radtel RT-830 Dual Band Ham Radio User Manual

Model: RT-830

INTRODUCTION

Thank you for choosing the Radtel RT-830 Dual Band Ham Radio. This handheld two-way radio is designed for reliable communication across various frequency bands, including 144-148Mhz and 420-450Mhz for amateur radio use, with additional reception capabilities for NOAA Weather Channels and Air Band (108-136Mhz AM RX). Featuring 128 channels, a 3500mAh battery, and multiple advanced functions, the RT-830 is a versatile tool for enthusiasts and professionals alike. This manual provides detailed instructions for the proper setup, operation, and maintenance of your radio to ensure optimal performance and longevity.

WHAT'S IN THE BOX

Please check the contents of your package to ensure all items are present:

- 1x Radtel RT-830 Radio
- 1x 3500mAh Rechargeable Battery
- 1x Desktop Charger
- 1x Dual Band Antenna
- 1x Belt Clip
- 1x User Manual (this document)

PRODUCT OVERVIEW

The Radtel RT-830 is a compact and robust handheld radio. Familiarize yourself with its components:



Figure 1: Front view of two Radtel RT-830 radios, highlighting the display, keypad, and main controls.

Key components include the antenna connector, volume/power knob, channel selector knob, PTT (Push-to-Talk) button, speaker, microphone, LCD display, and a full numeric keypad with function buttons.

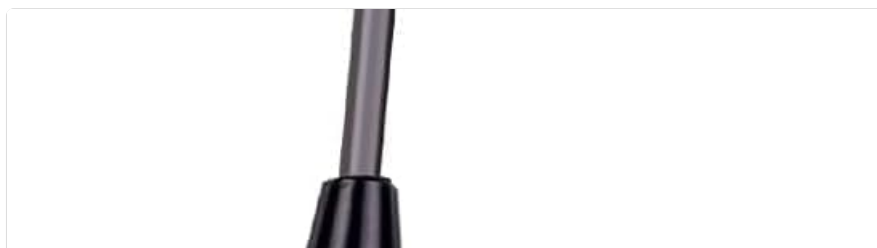






Figure 2: Angled view of the Radtel RT-830, illustrating the PTT button on the side and the antenna and control knobs on top.

SETUP

1. Battery Installation and Charging

The RT-830 comes with a 3500mAh Lithium Ion battery. Ensure the battery is fully charged before first use.

1. **Install Battery:** Align the battery pack with the grooves on the back of the radio and slide it upwards until it clicks into place.
2. **Remove Battery:** Press the battery release latch (usually at the bottom of the battery compartment) and slide the battery downwards to remove.
3. **Charging:**
 - **Desktop Charger:** Place the radio with the battery installed into the desktop charger cradle. The indicator light will show charging status (typically red for charging, green for fully charged).
 - **Type-C Charging:** The radio supports direct charging via a USB Type-C cable. Connect the Type-C cable to the port on the side of the radio.
 - **Charge Battery Only:** The desktop charger also allows charging the battery pack independently without the radio attached.



Figure 3: Illustration of the three available charging methods for the Radtel RT-830 radio and its battery.

2. Antenna Installation

Screw the provided dual-band antenna clockwise into the antenna connector on the top of the radio until it is finger-tight. Do not overtighten.

3. Belt Clip Installation

Attach the belt clip to the back of the radio using the screws provided. This allows for convenient carrying.

OPERATING INSTRUCTIONS

1. Power On/Off and Volume Control

Rotate the top-left knob clockwise to power on the radio. Continue rotating to increase the volume. Rotate counter-clockwise to decrease volume and power off.

2. Channel Selection (CH/VFO Mode)

The RT-830 supports both Channel (Memory) mode and VFO (Frequency) mode. Press the **V/M** button on the keypad to switch between these modes.

- **Channel Mode:** Use the UP/DOWN arrow keys or the numeric keypad to select from the 128 pre-programmed channels.
- **VFO Mode:** Directly input frequencies using the numeric keypad.

3. Frequency Ranges and Bands

The radio operates across multiple bands for transmit and receive:

- **Transmit/Receive (TX/RX):**
 - 144-148Mhz (VHF)
 - 420-450Mhz (UHF)
- **Receive Only (RX):**
 - 108-136Mhz AM (Air Band)
 - 136-520Mhz (Wideband Receiver)
 - FM Broadcast Receive



Figure 4: Multi-band capabilities of the Radtel RT-830, including transmit and receive frequencies.

4. NOAA Weather Channel

The RT-830 can receive 8 US NOAA weather channels. Refer to the menu settings to activate and monitor these channels for weather alerts.

5. Keypad Lock

To prevent accidental key presses, press and hold the **#V/M** button to lock or unlock the keypad.

6. Backlight Select

Adjust the display backlight settings through the radio's menu to suit your environment and conserve battery life.

7. Voice Prompt (English/Chinese)

The radio offers voice prompts for various operations. You can select between English and Chinese languages in the settings menu.

8. Beep Tone / Roger Beep

Enable or disable keypad beep tones and the Roger Beep (a short tone transmitted at the end of your transmission) via the menu.

9. Dual Standby

The dual standby feature allows the radio to monitor two different frequencies simultaneously. If a signal is received on either frequency, the radio will switch to that frequency.

10. Repeater Offset

Configure the transmit frequency offset for repeater operation in the menu settings.

11. Bandwidth (Wide/Narrow)

Select between wideband (25kHz) and narrowband (12.5kHz) operation depending on the channel spacing requirements.

12. VOX / Squelch

- **VOX (Voice Operated Transmit):** Enables hands-free transmission when your voice is detected. Adjust VOX sensitivity in the menu.
- **Squelch:** Eliminates background noise when no signal is present. Adjust the squelch level to an appropriate setting to block static while still receiving weak signals.

13. Power Level (HI/LOW)

Select between High and Low transmit power levels to conserve battery life or extend range as needed.



Figure 5: The Radtel RT-830's long-range capability, influenced by power level and antenna gain, with estimated ranges for various environments.

14. TOT (Time-Out Timer) / Busy Channel Lockout

- **TOT:** Prevents excessively long transmissions by automatically stopping transmission after a preset time.
- **Busy Channel Lockout (BCLO):** Prevents transmission on a channel that is already in use.

15. Scrambler / Encrypt

Activate the scrambler function for basic voice privacy. Note that this is not a secure encryption method.

16. Frequency Scan

The scan function allows the radio to automatically search for active signals across a programmed frequency range or channels.

17. CTCSS / DCS

Continuous Tone-Coded Squelch System (CTCSS) and Digital Coded Squelch (DCS) are used to filter out unwanted

signals and allow you to hear only calls from specific groups using the same tone/code.

18. Emergency SOS

The radio features an emergency SOS function. Refer to the menu for activation and configuration of this feature.

19. DTMF / 1750Hz Tone

Dual-Tone Multi-Frequency (DTMF) signaling can be used for various functions, such as remote control of repeaters. A 1750Hz tone burst is also available for repeater access.

20. Fast Copy Frequency

This feature allows for quick copying of a received frequency into a memory channel.

21. Hands-free Transmit

In addition to VOX, the radio may offer other hands-free transmit options. Consult the full menu for details.



Figure 6: Overview of the Radtel RT-830's powerful multi-function capabilities.

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the radio's surface. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:**
 - Avoid overcharging or completely discharging the battery.
 - Store the battery in a cool, dry place if not used for extended periods.
 - Recharge the battery every 3-6 months during long-term storage to maintain its health.
- **Storage:** Store the radio in a dry, dust-free environment away from direct sunlight and extreme temperatures.
- **Water Resistance:** The Radtel RT-830 is **Not Water Resistant**. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Radio does not power on.	Battery is low or not installed correctly.	Charge the battery or re-install it securely.
Cannot transmit or receive.	Incorrect frequency/channel, squelch too high, antenna loose, battery low.	Verify frequency/channel, adjust squelch, check antenna connection, charge battery.
Poor audio quality.	Low signal strength, incorrect bandwidth, antenna issue.	Move closer to transmitting radio, check bandwidth setting, ensure antenna is secure.
Keypad is unresponsive.	Keypad lock is active.	Press and hold the #V/M button to unlock the keypad.

SPECIFICATIONS

Feature	Detail
Model	RT-830
Frequency Range (TX/RX)	144-148Mhz, 420-450Mhz
Frequency Range (RX Only)	108-136Mhz AM, 136-520Mhz
Number of Channels	128
Battery Capacity	3500mAh Lithium Ion (included)
Voltage	3.7 Volts
Tuner Technology	AM/FM/UHF/VHF
Maximum Talking Range	5 Kilometer (approx. 3.1 miles)
Item Weight	15.2 ounces
Package Dimensions	7.48 x 5.51 x 2.36 inches
Water Resistance Level	Not Water Resistant
Manufacturer	Xiamen Radtel Electronics Co.Ltd

WARRANTY AND SUPPORT

The Radtel RT-830 comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For technical support, warranty claims, or any questions regarding your Radtel RT-830 radio, please contact Radtel customer service. Refer to the contact information provided on the product packaging or the official Radtel website. Please retain your proof of purchase for warranty service.

© 2023 Radtel. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question