

[Manuals.plus](#) /

› [Reebok](#) /

› Reebok POD1 EARCLIP True Wireless Earbuds User Manual

Reebok RBK-TWP1-W

Reebok POD1 EARCLIP True Wireless Earbuds

MODEL: RBK-TWP1-W

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Reebok POD1 EARCLIP True Wireless Earbuds. Please read this manual thoroughly before using the product and retain it for future reference.

SAFETY INFORMATION

- Do not expose the earbuds or charging case to extreme temperatures, humidity, or corrosive environments.
- Avoid dropping, impacting, or disassembling the device.
- Keep away from children and pets.
- Use only the provided USB charging cable.
- Clean the earbuds and charging case with a soft, dry cloth. Do not use harsh chemicals.
- Prolonged listening at high volume levels may cause hearing damage. Adjust volume to a safe level.

PACKAGE CONTENTS

- Reebok POD1 EARCLIP True Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- User Manual



Image: The Reebok POD1 EARCLIP True Wireless Earbuds shown with their charging case. The earbuds are white with black accents, and the case is predominantly white and black, designed to securely hold and charge the earbuds.

PRODUCT OVERVIEW

The Reebok POD1 EARCLIP earbuds are designed for a secure fit and wireless audio experience. They feature Bluetooth 5.3 connectivity and an IPX5 water resistance rating, making them suitable for various activities.



Image: Front view of the Reebok POD1 EARCLIP earbuds nestled in their charging case. The earbuds display indicator lights, and the case shows the Reebok logo.



Image: Side view of the Reebok POD1 EARCLIP earbuds within their charging case, highlighting the ergonomic design and earclip mechanism.



Image: Back view of the Reebok POD1 EARCLIP earbuds in their charging case, showing the rear contours and branding details.

SETUP

1. Initial Charging

1. Before first use, place both earbuds into the charging case.
2. Connect the USB charging cable to the charging port on the case and to a power source.
3. Allow the earbuds and case to fully charge. Charging indicators will show the status.

2. Pairing with a Device

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode (indicator lights will flash).
3. On your device (smartphone, tablet, etc.), enable Bluetooth.
4. Search for available Bluetooth devices and select "Reebok POD1 EARCLIP".

5. Once connected, the indicator lights on the earbuds will stop flashing.

3. Wearing the Earbuds

1. Identify the left (L) and right (R) earbuds.
2. Gently insert each earbud into your ear canal.
3. Adjust the earclip for a comfortable and secure fit.

4. Power On/Off

- **Power On:** Open the charging case, and the earbuds will power on automatically. Alternatively, press and hold the touch control area on both earbuds for 3 seconds.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will power off automatically. Alternatively, press and hold the touch control area on both earbuds for 5 seconds.

OPERATING INSTRUCTIONS

Basic Controls

- **Play/Pause:** Tap the touch control area on either earbud once.
- **Next Track:** Double-tap the touch control area on the right earbud.
- **Previous Track:** Double-tap the touch control area on the left earbud.
- **Volume Up:** Triple-tap the touch control area on the right earbud.
- **Volume Down:** Triple-tap the touch control area on the left earbud.

Call Management

- **Answer/End Call:** Tap the touch control area on either earbud once.
- **Reject Call:** Press and hold the touch control area on either earbud for 2 seconds.

Voice Assistant

- **Activate Voice Assistant:** Press and hold the touch control area on either earbud for 2 seconds (when not on a call).

CHARGING

The Reebok POD1 EARCLIP earbuds offer approximately 6 hours of continuous playback on a single charge. The charging case provides additional charges.

- **Charging Earbuds:** Place the earbuds into the charging case. They will automatically begin charging.
- **Charging Case:** Connect the provided USB cable to the charging port on the case and to a 5V/1A USB power adapter (not included). The charging case has a 300 mAh battery capacity.
- **Battery Indicators:** Refer to the LED indicators on the earbuds and case for charging status.

MAINTENANCE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use liquids or abrasive cleaners.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place.

- **Water Resistance:** The earbuds are IPX5 water-resistant, meaning they can withstand splashes and sweat. They are not designed for submersion in water. Ensure the charging port is dry before charging.

TROUBLESHOOTING

Issue	Possible Solution
Earbuds not powering on	Ensure earbuds and charging case are fully charged.
Cannot pair with device	Make sure Bluetooth is enabled on your device. Place earbuds back in case, close, then reopen to re-enter pairing mode. Forget previous pairings on your device and try again.
No sound from earbuds	Check device volume and earbud volume. Ensure earbuds are properly connected to your device. Try re-pairing.
Charging case not charging	Verify the USB cable is securely connected to both the case and the power source. Try a different USB cable or power adapter.
Earbuds frequently disconnect	Ensure your device is within the 10-meter Bluetooth range. Avoid obstacles between the earbuds and your device.

SPECIFICATIONS

- **Model:** RBK-TWP1-W
- **Connectivity:** Bluetooth 5.3
- **Wireless Range:** Up to 10 meters (33 feet)
- **Earbud Battery Life:** Approximately 6 hours continuous playback
- **Charging Case Battery Capacity:** 300 mAh
- **Water Resistance:** IPX5 (splash and sweat resistant)
- **Material:** Plastic
- **Dimensions:** 10 x 5 x 9 cm
- **Weight:** 230 g
- **Included Components:** USB Charging Cable
- **Compatible Devices:** Smartphone, Tablet, Desktop Computer, Laptop, Smart TV, Smart Garage

WARRANTY AND SUPPORT

Reebok products are manufactured to high-quality standards. For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Reebok website. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question