

[Manuals.plus](#) /

› [OLEVS](#) /

› [OLEVS Women's Quartz Watch GX-JP-L5523-MB Instruction Manual](#)

## OLEVS GX-JP-L5523-MB

# OLEVS Women's Quartz Watch Instruction Manual

Model: GX-JP-L5523-MB

## INTRODUCTION

---

Thank you for choosing the OLEVS Women's Quartz Watch. This timepiece is designed for elegance and functionality, featuring a sophisticated diamond-studded dial, luminous hands for visibility in low light, and a comfortable leather strap. It is built with 30-meter water resistance suitable for daily use. Please read this manual thoroughly to understand the features and ensure proper operation and longevity of your watch.

## SAFETY PRECAUTIONS

---

- **Water Resistance:** This watch is rated for 30 meters (3 ATM) water resistance, suitable for daily use like hand washing or light rain. It is **not** suitable for showering, swimming, diving, or any water sports. Do not operate the crown or pushers while the watch is wet.
- **Temperature:** Avoid exposing the watch to extreme temperatures (above 60°C / 140°F or below 0°C / 32°F) or sudden temperature changes, as this can affect the movement and battery life.
- **Magnetic Fields:** Keep the watch away from strong magnetic fields, such as those produced by speakers, refrigerators, or mobile phones, to prevent affecting the accuracy of the quartz movement.
- **Chemicals:** Avoid direct contact with solvents, detergents, perfumes, cosmetics, or other chemical products, as they can damage the watch case, strap, or seals.
- **Impact:** Protect the watch from strong impacts or shocks.

## WATCH COMPONENTS

---

Familiarize yourself with the main parts of your OLEVS watch:

- **Crown:** Used for setting the time and date.
- **Pushers (A & B):** Used to operate the chronograph function.
- **Hour, Minute, Second Hands:** Indicate the current time.
- **Sub-dials:** Display chronograph minutes, seconds, and 24-hour time.
- **Date Window:** Displays the current date.

- **Case:** The main body of the watch, protecting the internal movement.
- **Strap:** The leather band for wearing the watch.



This image provides a clear front view of the watch, displaying its overall design and key components.

## SETUP

---

### Setting the Time

1. Pull the crown out to the **second click** position.
2. Turn the crown to move the hour and minute hands to the desired time. Ensure the 24-hour sub-dial also aligns correctly (e.g., if setting to 3 PM, the 24-hour hand should point to 15).
3. Push the crown back to the normal position to start the watch.

### Setting the Date

1. Pull the crown out to the **first click** position.

2. Turn the crown to adjust the date. If the date changes during the day, advance the time by 12 hours.
3. Push the crown back to the normal position.



A close-up view of the OLEVS women's watch, highlighting the elegant dial and crown for time and date adjustments.

## OPERATING THE CHRONOGRAPH

---

Your OLEVS watch features a chronograph function for measuring elapsed time.

1. **Starting the Chronograph:** Press pusher **A** (top pusher) to start the chronograph. The chronograph second hand will begin to move.
2. **Stopping the Chronograph:** Press pusher **A** again to stop the chronograph. The elapsed time can be read from the chronograph sub-dials (seconds, minutes).
3. **Resetting the Chronograph:** After stopping, press pusher **B** (bottom pusher) to reset all chronograph hands to their zero positions.



The watch is shown on a wrist, illustrating its size and how it appears when worn, with visible pushers for chronograph functions.

## MAINTENANCE

---

- **Cleaning:** Wipe the watch case and crystal regularly with a soft, dry cloth. For the leather strap, use a slightly damp cloth and allow it to air dry completely.
- **Strap Care:** Avoid prolonged exposure of the leather strap to direct sunlight, water, or excessive humidity, as this can cause discoloration or damage.
- **Battery Replacement:** When the watch stops or the second hand moves erratically, the battery may need replacement. This should be done by a qualified watch technician to ensure proper sealing and function.
- **Water Resistance Check:** It is recommended to have the water resistance seals checked periodically, especially if the watch has been exposed to water frequently.



# OLEVS

## 製品パラメーター

📏 ケース直径 (MM) : 29MM

📏 ケース厚み (MM) : 10MM

📏 チェーン幅 (MM) : 14MM

📏 チェーンの長さ (CM) : 21CM

📏 重さ : 26G

This composite image highlights key features relevant to maintenance: 30M water resistance, the durable coated glass, the comfortable breathable leather strap, and the watch's luminous display.

### TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Battery depleted; Crown not pushed in.	Replace battery (professional service recommended); Push crown fully into normal position.
Date changes during the day	Time set incorrectly (AM/PM).	Advance the time by 12 hours.

Problem	Possible Cause	Solution
Water or condensation inside watch	Water resistance seals compromised; Exposure to excessive moisture.	Seek professional service immediately to prevent further damage.
Chronograph hands not resetting to zero	Requires calibration.	Consult a watch repair specialist for adjustment.

## SPECIFICATIONS

---

Model Number	GX-JP-L5523-MB
Movement	Japanese Quartz
Display Type	Analog
Case Diameter	32 mm
Case Thickness	12 mm
Band Material	Leather
Band Width	14 mm
Band Length	22 cm
Crystal Material	Crystal
Water Resistance Depth	30 Meters (3 ATM)
Special Features	Luminous hands, Chronograph, Date display
Watch Weight	Approx. 26 g
Package Weight	80 g

## WARRANTY AND SUPPORT

---

Your OLEVS watch comes with a **one-year quality guarantee** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear.

For any product inquiries, issues, or warranty claims, please contact our customer support via email. We commit to responding within 24 hours to assist you.

Please retain your proof of purchase for warranty validation.

