

[Manuals.plus](#) /

› [Avisontek](#) /

› Avisontek GK-R G1T-BX Genie Garage Door Opener Keypad Remote Instruction Manual

Avisontek GK-R G1T-BX

Avisontek GK-R G1T-BX Genie Garage Door Opener Keypad Remote Instruction Manual

Model: GK-R G1T-BX | Brand: Avisontek

1. INTRODUCTION

This manual provides detailed instructions for the installation, programming, operation, and maintenance of your Avisontek GK-R G1T-BX Genie Garage Door Opener Keypad Remote. Please read these instructions carefully before use to ensure proper functionality and safety.

2. COMPATIBILITY

The Avisontek GK-R G1T-BX keypad remote is universally compatible with all Genie and Overhead Door garage door openers manufactured since 1995. It serves as a replacement for models such as GK-R, GK-BX, GWKPD-BL, OKP-BX, GWK-IC, GWKP, ACSDA1, ACSDG, ACSD1G, B8QACSDA1, and B8QACSDA.

Important Note: This device does **not** support Dip Switch Garage Door Openers.

UNIVERSAL COMPATIBILITY

Notice: Not sure about compatibility? Feel free to contact us !

**FOR 2
BRAND**



Genie



Overhead Door

**ALL OPENERS MANUFACTURED
FROM 1995-CURRENT**



It can also Replaces older model Genie Intellicode Keypads

GWKP, GWK-IC, ACSDG, ACSDA1, ACSD1G, B8QACSDA, B8QACSDA1

Equivalent to: 37332R, GK-BX



NOT WORKS FOR DIP SWITCH

of genie (from 1982 to 1996) and Overhead Door
(from 1995 to 1996)

Image: Compatibility chart for Avisontek GK-R G1T-BX keypad remote.

3. INSTALLATION

The Avisontek GK-R G1T-BX keypad remote is designed for effortless wireless installation, requiring no complex wiring or professional assistance. It can be set up in minutes using basic tools.

Mounting the Keypad

1. Choose a convenient location outside your garage, within range of your garage door opener.
2. Open the keypad cover to expose the mounting holes.
3. Mark the positions for the two mounting screws.
4. Drill pilot holes if necessary.
5. Secure the keypad to the surface using the provided screws.
6. Ensure the keypad is firmly attached and the cover can open and close freely.

UNIVERSAL COMPATIBILITY

Notice: Not sure about compatibility? Feel free to contact us !

FOR 2 BRAND



Genie



Overhead Door

ALL OPENERS MANUFACTURED FROM 1995-CURRENT



It can also Replace older model Genie Intellicode Keypads

GWKP, GWK-IC, ACSDG, ACSDA1, ACSD1G, B8QACSDA, B8QACSDA1

Equivalent to: 37332R, GK-BX



NOT WORKS FOR DIP SWITCH

of genie (from 1982 to 1996) and Overhead Door (from 1995 to 1996)

Image: Wireless keypad installation example.

4. PROGRAMMING INSTRUCTIONS

Follow these steps to set your Personal Identification Number (PIN) and synchronize the keypad with your garage door opener.



Image: Programming Instruction Guide.

4.1. Setting PIN on Keypad

1. Confirm that the keypad backlight is off (do not press any buttons).
2. Press **3, 5, 7** on the keypad, then press the **PROGRAM** button.
3. The LED will blink, indicating it is ready to accept a new PIN. Now, enter a unique 3-8 digit PIN number.
4. Press the **PROGRAM** button again.
5. The keypad LED will blink twice and then shut off, confirming successful PIN programming.

4.2. Syncing Keypad with Garage Door Opener

There are typically two options to enter programming mode on your garage door opener:

- **Option 1:** Press and hold the program button on your opener until the LED indicator illuminates, then release. The round LED will turn off and the long LED will begin flashing.
- **Option 2:** Press and release the 'Learn Code' button. The LED will flash, indicating programming mode (usually for 30 seconds).

Once your opener is in programming mode, proceed with these steps:

1. Confirm that the keypad backlight is off (do not press any buttons).
2. Enter your previously set PIN on the keypad.
3. Press the **UP** or **DOWN** arrow key on the keypad 3-4 times until the garage door operates, confirming successful synchronization.

5. OPERATING INSTRUCTIONS

The Avisontek GK-R G1T-BX keypad remote offers convenient and secure access to your garage.

5.1. Opening/Closing the Garage Door

- To open or close your garage door, simply enter your personalized 3-8 digit PIN on the keypad.
- After entering the PIN, press the **UP** or **DOWN** arrow key. The door will activate.

5.2. Enhanced Security Features

- **Rolling Code Encryption:** The keypad utilizes rolling code technology to prevent unauthorized access, enhancing the security of your property.
- **Temporary Password Function:** For guests or temporary access, a temporary password function can be set up (refer to your garage door opener's manual for specific instructions on setting temporary codes if supported).

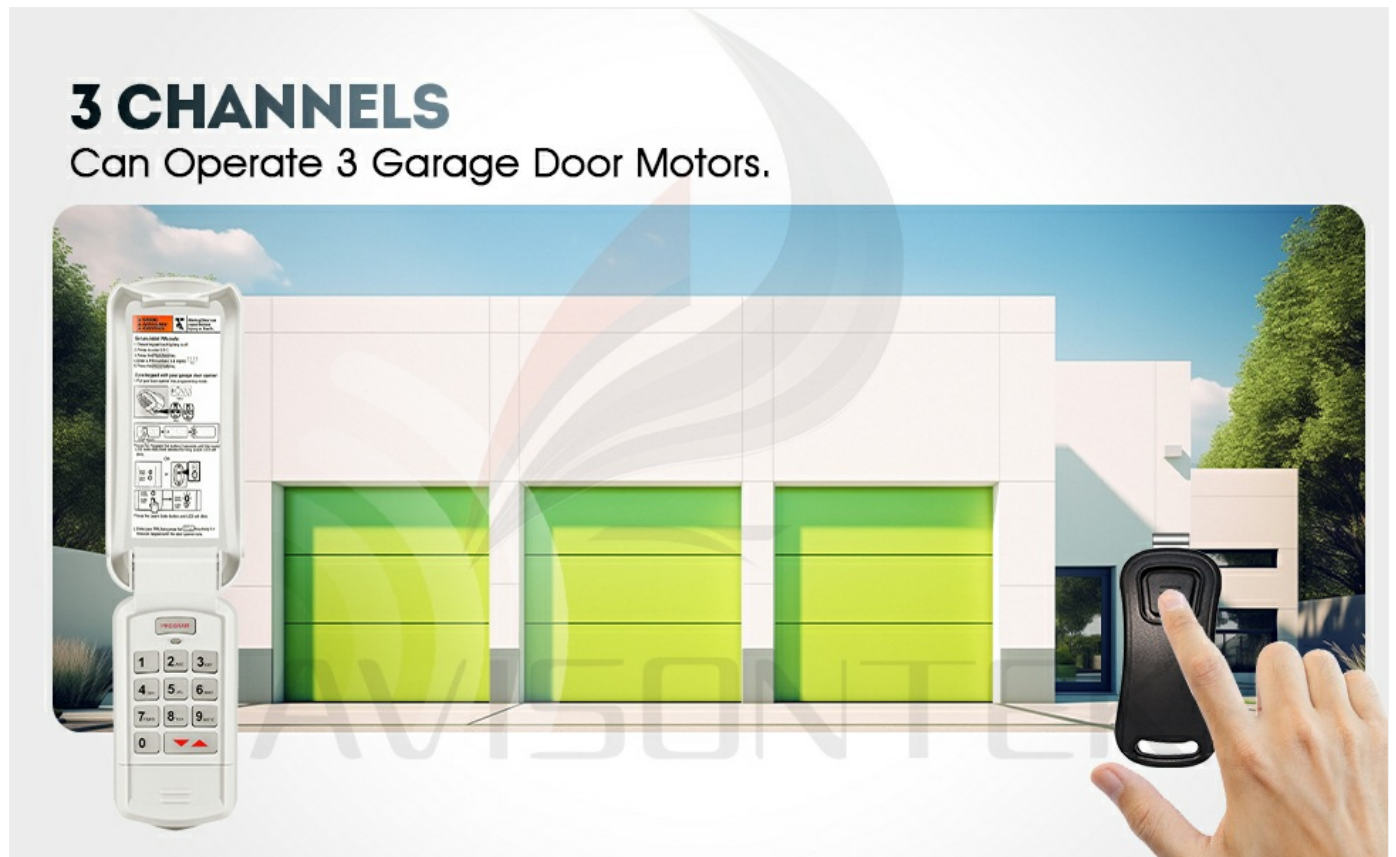


Image: Industrial-grade chip and rolling code encryption.

5.3. User-Friendly Design

- **Night Light Function:** The keypad features a built-in night light, illuminating the buttons for easy use in low-light conditions.
- **Ultra-Long Remote Range:** The effective range extends up to 164 feet, providing reliable operation from a distance.
- **Multi-Channel Operation:** The keypad supports up to 3 channels, allowing control of up to three different garage door motors.

4-PIN CODE OPERATION

Eliminate The Need For A Remote Control,



simply enter your **PIN** on the keypad for quick garage access, simplifying the process.

Effective Range Extends To 164 Feet.

Image: Ultra-long remote range capability.

DAY-AND-NIGHT USER-FRIENDLINESS

Supports temporary passwords



Features an built-in night light for safe and convenient use at all times.

Image: Weatherproof housing and luminous design.

6. MAINTENANCE

6.1. Battery Replacement

The keypad is powered by a high-capacity AAA Alkaline battery, designed for extended usage and reliability. When the battery

power is low, the keypad's performance may degrade, or the backlight may dim. To replace the battery:

1. Open the keypad cover.
2. Locate the battery compartment, typically at the bottom of the keypad.
3. Remove the old AAA Alkaline battery.
4. Insert a new AAA Alkaline battery, ensuring correct polarity (+/-).
5. Close the battery compartment and the keypad cover.



Image: High-capacity AAA Alkaline battery for extended performance.

6.2. Cleaning

Wipe the keypad surface with a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these may damage the finish or electronic components.

7. TROUBLESHOOTING

If you encounter issues with your Avisontek GK-R G1T-BX keypad remote, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Keypad does not respond	Dead battery	Replace the AAA Alkaline battery (see Section 6.1).
Garage door does not open/close after entering PIN	Keypad not programmed or out of sync	Re-program the keypad with your garage door opener (see Section 4.2). Ensure the opener is in programming mode.
Limited range	Obstructions or interference	Ensure there are no large metal objects or other sources of radio interference between the keypad and the opener. Check battery level.
Keypad backlight not working	Low battery or fault	Replace the battery. If the issue persists, contact customer support.

Problem	Possible Cause	Solution
Keypad is not compatible	Opener is a Dip Switch model	This keypad is not compatible with Dip Switch garage door openers. Verify your opener type (see Section 2).

If these solutions do not resolve the issue, please contact Avisontek customer support for further assistance.

8. SPECIFICATIONS

Below are the technical specifications for the Avisontek GK-R G1T-BX keypad remote:

Feature	Detail
Model	GK-R
Working Range	164 Feet
Frequency	390/315MHz (Auto-Seek Intellicode/CodeDodger Code)
Working Voltage	3V
Battery Model	AAA Alkaline (included)
Channels	3
Shell Material	ABS Alloy
Color	White
Item Weight	6.7 ounces
Package Dimensions	8.11 x 3.27 x 1.54 inches
Special Feature	10 Year Warranty
Compatible Devices	Universal for Genie & Overhead Door Garage Door Opener Since 1995

24 HOURS — Amazon Online services



Image: Product Parameter details.

9. WARRANTY AND SUPPORT

9.1. Warranty Information

Avisontek provides a **10-year warranty** for this product, ensuring long-lasting performance and peace of mind.

9.2. Customer Support

For any queries or assistance, please contact Avisontek customer support. We offer **24-hour Amazon Online Tech Support**. You can reach us through our store homepage by clicking "Ask a question" or via our support email. We aim to respond within 24 hours.



Image: After-sales service and support information.

10. PRODUCT VIDEOS

No official seller videos are available for this product. The provided videos are from customer reviews and are not embedded as per instructions.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question