



Manuals.plus /

- › **Aeitto** /
- › Aeitto Masticating Juicer HSJ1908 User Manual

Aeitto HSJ1908

Aeitto Masticating Juicer User Manual

Model: HSJ1908

Brand: Aeitto

1. INTRODUCTION

Thank you for choosing the Aeitto Masticating Juicer. This appliance is designed to efficiently extract juice from a variety of fruits and vegetables, providing you with fresh, nutritious beverages. Featuring a 4.9-inch wide feed chute and upgraded pre-cutting technology, it simplifies the juicing process by minimizing the need for pre-cutting ingredients. Please read this manual thoroughly before operation to ensure safe and optimal performance.



Image: The Aertto Masticating Juicer in operation, showing juice being dispensed into a measuring cup and pulp collected in a separate container.

2. IMPORTANT SAFETY PRECAUTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the motor base in water or other liquids.
- Ensure the appliance is unplugged from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Keep hands and utensils away from moving parts during operation to prevent injury.
- Do not operate the juicer if the power cord or plug is damaged, or if the appliance malfunctions or has

been dropped or damaged in any manner.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The juicer features a safety design that automatically stops operation if the hopper cover is opened during use. Do not attempt to bypass this safety mechanism.
- Use only attachments and accessories recommended or sold by the manufacturer.



Image: Visual representation of the juicer's safety design, anti-drip feature, and one-button operation.

3. PARTS IDENTIFICATION

Familiarize yourself with the components of your Aeitto Masticating Juicer:

- **Hopper Cover:** Top cover with a wide opening for feeding ingredients.
- **Feed Chute:** The large opening where fruits and vegetables are inserted.

- **Pre-cutting Blade:** Internal blades that automatically cut ingredients before pressing.
- **Auger (Squeezing Screw):** The main component that crushes and presses ingredients.
- **Filter Screen:** Separates juice from pulp. Features a multi-layer design for purer juice.
- **Juice Outlet:** Spout for dispensed juice, with an anti-drip stopper.
- **Pulp Outlet:** Opening for expelled pulp.
- **Motor Base:** Contains the motor and control knob.
- **Control Knob:** For ON/OFF and Reverse functions.
- **Juice Container:** Collects extracted juice.
- **Pulp Container:** Collects expelled pulp.
- **Cleaning Brush:** For easy cleaning of the filter screen and other parts.

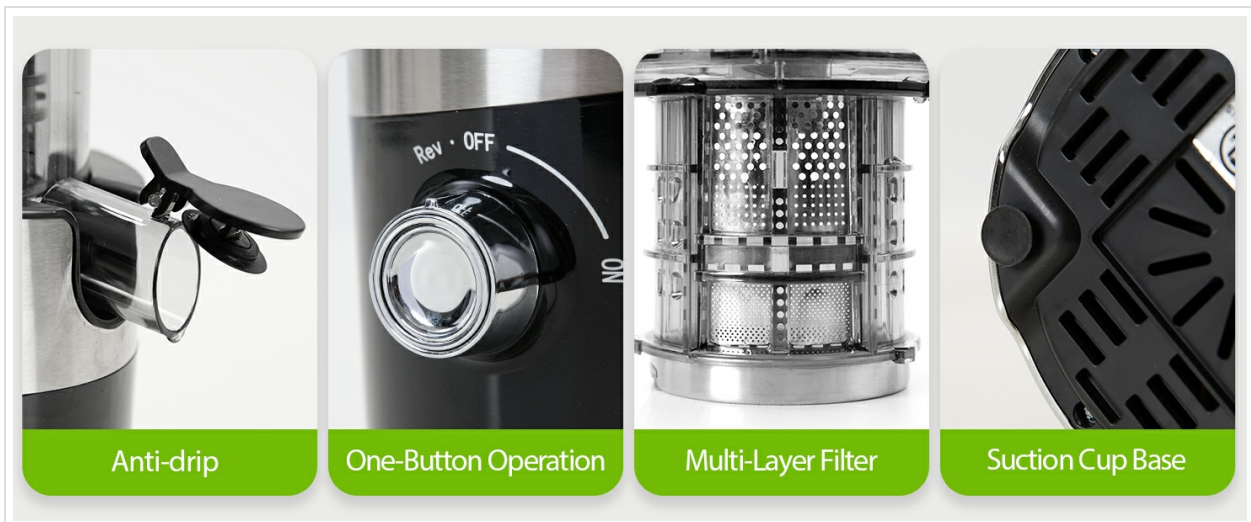


Image: Close-up views highlighting the anti-drip design, one-button control, multi-layer filter, and suction cup base.

4. SETUP AND ASSEMBLY

Before first use, wash all detachable parts that will come into contact with food. Ensure the motor base is unplugged.

1. Place the motor base on a stable, flat surface.
2. Insert the filter screen into the motor base, aligning it correctly.
3. Place the auger into the center of the filter screen, pressing down gently until it clicks into place.
4. Attach the hopper assembly onto the motor base, ensuring it is securely locked. Rotate clockwise until you hear a click, indicating it's locked. The safety lock indicator should align.
5. Position the juice container under the juice outlet and the pulp container under the pulp outlet.

Easy to Assemble



Image: Step-by-step visual instructions for assembling the juicer components.

5. OPERATING INSTRUCTIONS

5.1 Ingredient Preparation

- Wash all fruits and vegetables thoroughly.
- The 4.9-inch wide feed chute allows for whole fruits and vegetables like apples, oranges, and carrots, reducing preparation time.
- For very large or hard ingredients, or those with tough skins/seeds (e.g., pineapple, mango, avocado), it is recommended to peel them and cut them into smaller pieces to prevent clogging and ensure efficient juicing. Remove hard pits from fruits like peaches or cherries.
- Fibrous vegetables like celery or kale should be cut into 1-2 inch pieces to prevent fibers from wrapping around the auger.

4.9 INCH Extra Large Feed Chute

No Cutting, Less Oxidation



Image: The wide 4.9-inch feed chute accommodating whole apples, oranges, and carrots, minimizing the need for pre-cutting.

5.2 Juicing Process

1. Ensure the juicer is properly assembled and the juice and pulp containers are in place.
2. Plug the power cord into a grounded electrical outlet.
3. Turn the control knob to the "ON" position. The juicer will begin operating.
4. Slowly feed prepared ingredients into the feed chute. The upgraded pre-cutting technology will automatically process the ingredients before cold pressing.
5. Do not force ingredients into the chute. Allow the juicer to process at its own pace.
6. Once juicing is complete, turn the control knob to the "OFF" position and unplug the appliance.
7. Close the anti-drip stopper on the juice outlet to prevent drips.

Upgraded Pre-cutting Technology



Automatically cut fruits and veggies into pieces



Multi-Stage auger makes juicing more efficient



Image: An exploded view showing how the built-in blades automatically cut fruits and vegetables, and the multi-stage auger efficiently processes them.



Image: The juicer producing a high yield of pure juice with minimal, dry pulp, indicating efficient extraction.

5.3 Reverse Function

If ingredients become clogged or the juicer stops during operation, turn the control knob to the "Rev" (Reverse) position and hold for a few seconds. This will rotate the auger in the opposite direction to clear the blockage. Release the knob to return to the "OFF" position, then switch back to "ON" to resume juicing. Do not hold the "Rev" position for extended periods.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your juicer. Always unplug the appliance before cleaning.

1. Turn the control knob to "OFF" and unplug the juicer from the power outlet.
2. Disassemble the juicer by rotating the hopper assembly counter-clockwise and lifting it off. Remove the auger and filter screen.

3. Rinse all detachable parts (hopper cover, auger, filter screen, juice outlet, juice container, pulp container) under running water immediately after use to prevent pulp from drying and sticking.
4. Use the provided cleaning brush to thoroughly clean the filter screen, as small pulp particles can get lodged in the mesh.
5. For stubborn residue, soak parts in warm, soapy water for a few minutes before scrubbing.
6. Wipe the motor base with a damp cloth. Never immerse the motor base in water or place it under running water.
7. Dry all parts completely before reassembling or storing.
8. Note: The juicer parts are not dishwasher safe. Hand washing is recommended.

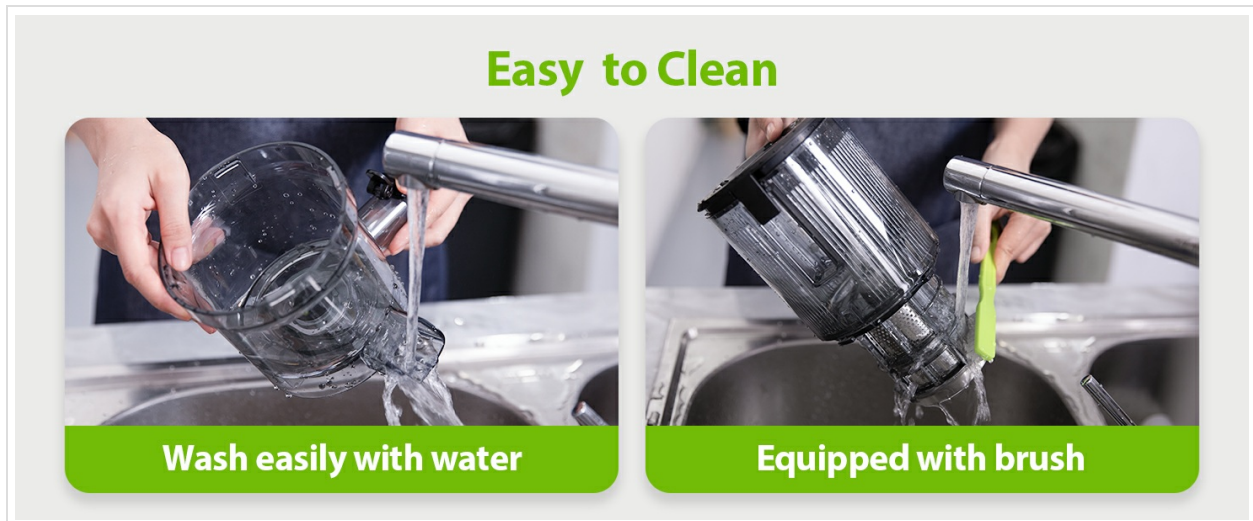


Image: Visual guide showing how to easily wash juicer components with water and use the equipped cleaning brush.

7. TROUBLESHOOTING

If you encounter issues with your juicer, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---|--|---|
| Juicer does not turn on. | Not plugged in; not assembled correctly; power outage. | Ensure power cord is securely plugged in. Check if the hopper assembly is locked correctly (safety lock engaged). Check power supply. |
| Juicer stops during operation or motor strains. | Ingredients are clogged; too many ingredients fed at once; hard ingredients. | Turn to "OFF", then use "Rev" (Reverse) function for a few seconds to clear blockage. Reduce amount of ingredients. Cut hard ingredients into smaller pieces. |
| Low juice yield or wet pulp. | Ingredients not suitable for juicing; filter screen clogged. | Ensure ingredients are fresh and suitable for masticating juicers. Clean the filter screen thoroughly after each use. |
| Vibration or loud noise. | Improper assembly; hard ingredients. | Disassemble and reassemble all parts, ensuring they are securely locked. Cut hard ingredients into smaller pieces. |
| Leakage from juice outlet. | Anti-drip stopper not closed; parts not assembled correctly. | Ensure the anti-drip stopper is in the closed position. Check assembly of the juice outlet and filter screen. |

8. SPECIFICATIONS

| Feature | Detail |
|-----------------------|---|
| Brand | Aeitto |
| Model Name | HSJ1908 |
| Color | Black |
| Special Feature | Pre-Cutting Blade, 4.9" Wide Feed Chute |
| Product Dimensions | 8"D x 7"W x 16"H |
| Item Weight | 9.06 pounds |
| Voltage | 120V |
| Blade Material | Acrylonitrile Butadiene Styrene (ABS) |
| Dishwasher Safe Parts | No |

9. WARRANTY AND SUPPORT

Aeitto products are manufactured to high-quality standards. For warranty information, technical support, or customer service inquiries, please refer to the contact information provided with your product packaging or visit the official Aeitto website. Please retain your proof of purchase for warranty claims.