

INTERGREAT INTERGREAT

INTERGREAT 12-15 Gun Safe Instruction Manual

Model: INTERGREAT

1. INTRODUCTION

Thank you for choosing the INTERGREAT 12-15 Gun Safe. This manual provides essential information for the safe and effective use, installation, and maintenance of your new gun safe. Please read these instructions carefully before operating the safe and retain them for future reference. Proper installation and usage are crucial for ensuring the security of your firearms and valuables.

2. SAFETY INFORMATION

- Always store the safe in a secure, discreet location, preferably bolted to the floor or wall to prevent removal.
- Keep emergency keys and digital codes in a separate, secure location away from the safe and out of reach of children.
- Never store loaded firearms in the safe. Ensure all firearms are unloaded and safety mechanisms are engaged before storage.
- Regularly check the safe's locking mechanism and mounting bolts for any signs of tampering or loosening.
- The safe features a dual alarm system that activates after 5 incorrect password attempts or any forceful breach. Be aware of this feature and its operation.

3. PRODUCT OVERVIEW

The INTERGREAT 12-15 Gun Safe is designed for secure storage of rifles, pistols, and other valuables. It features a robust all-steel construction and multiple locking mechanisms for enhanced security.

Key Features:

- **Large Storage Capacity:** Accommodates 10-14 rifles up to 51 inches, with or without scopes.
- **Adjustable Interior:** Includes 3 removable gun racks and 4 pistol pockets on the door for organized storage of long guns, handguns, and ammunition.
- **Durable Construction:** Made from cold-rolled steel with four 20mm lock bolts for anti-pry and anti-theft protection.
- **Multiple Access Methods:** Digital keypad, traditional key, and emergency battery box for reliable entry.
- **Advanced Security:** Dual alarm system and mute mode for discreet operation.



Image: The INTERGREAT 12-15 Gun Safe, a tall black cabinet, securely placed in a modern living room next to a fireplace.



Adjustable Shelf



Adjusted gun racks



4 Pistol Pockets



Bullet Bag


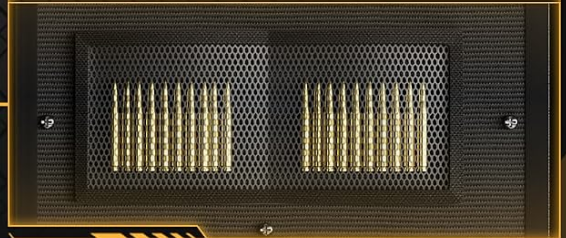 



Image: An open view of the gun safe's interior, highlighting adjustable shelves, gun racks, pistol pockets on the door, and a bullet bag, demonstrating its versatile storage capabilities.

Heavy Duty Gun Safe

 Sturdy and Pry-resistant

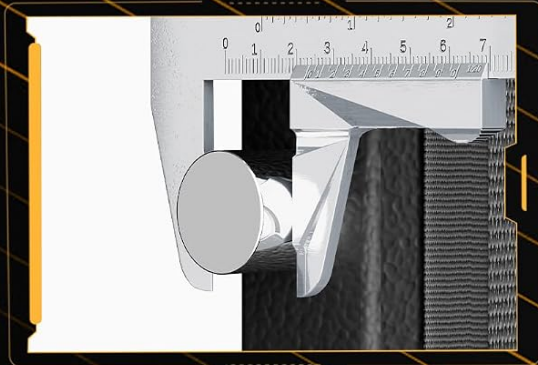

20 MM

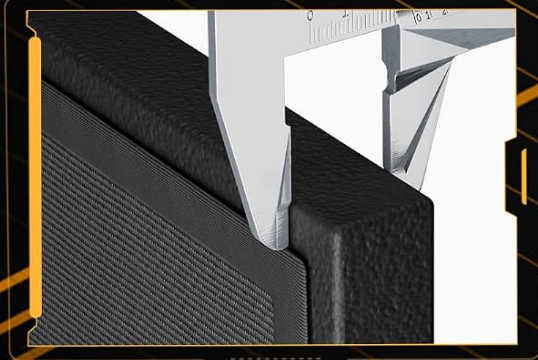 

50 MM



Image: A graphic detailing the heavy-duty, pry-resistant construction of the gun safe, showing measurements of 20mm lock bolts and 50mm thick steel.

DUAL ALERT SYSTEM FOR PEACE OF MIND

3 Incorrect Password or Any Forceful Breach

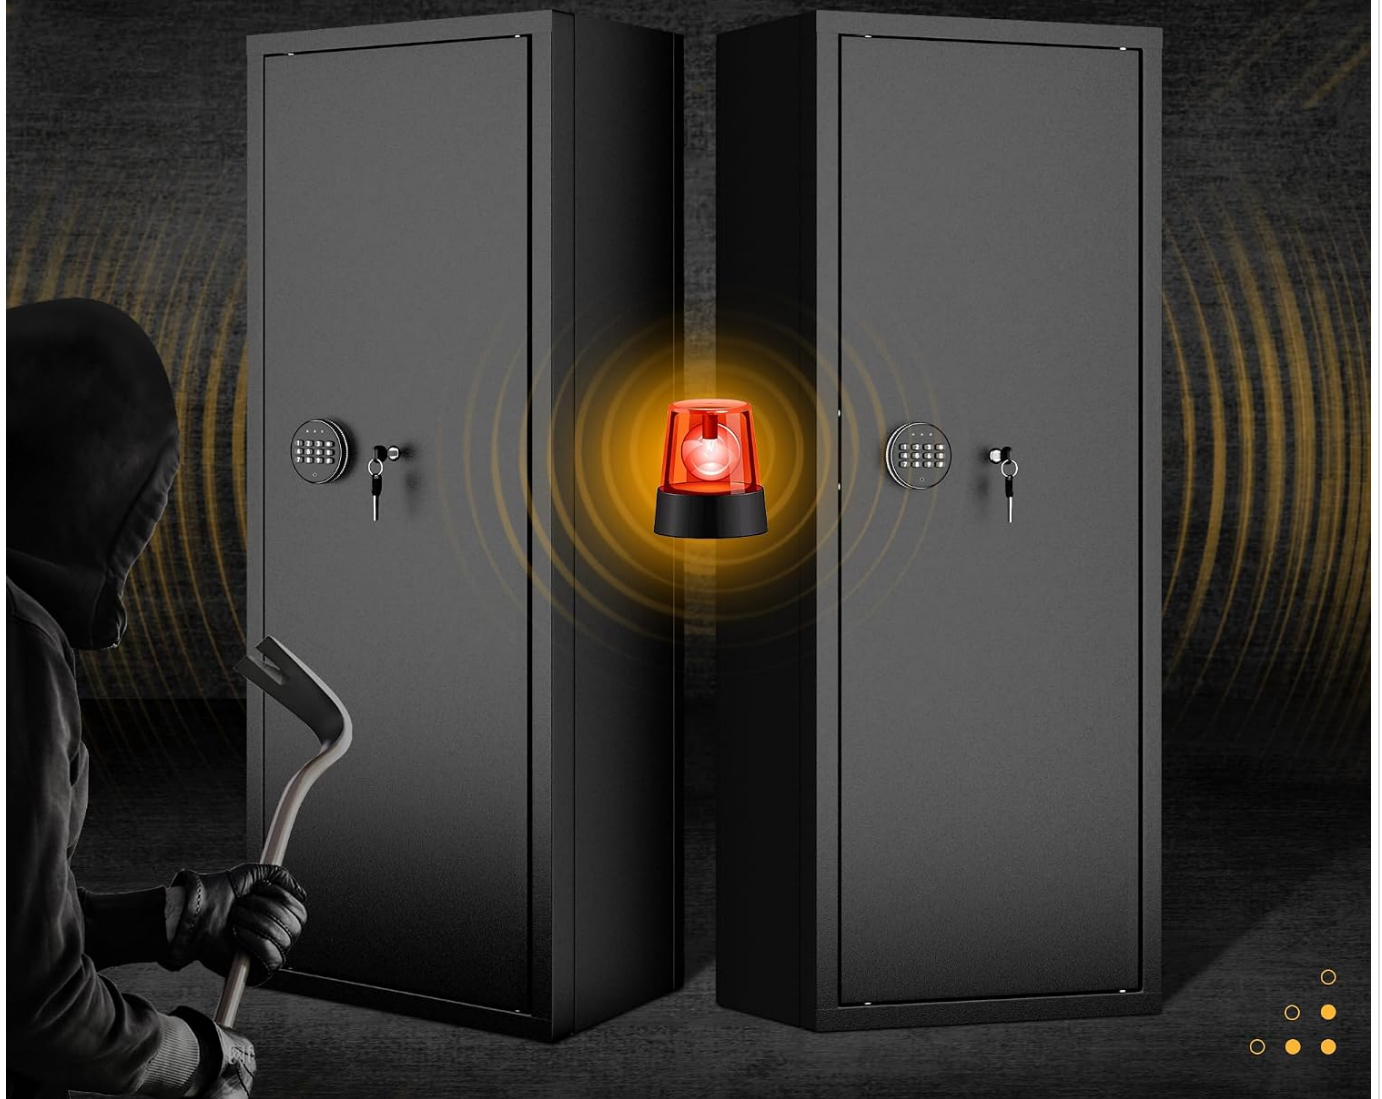 


Image: A visual representation of the safe's dual alert system, showing a flashing red alarm light between two safes, indicating activation upon 3 incorrect password attempts or a forceful breach.

4. SETUP AND INSTALLATION

The INTERGREAT gun safe is designed for easy assembly and installation. It is recommended to have 1-2 people for the setup process.

Included Components:

- 1 x Rifle Gun Safe Cabinet
- 1 x Instruction Manual
- 1 x Emergency Battery Pack
- 2 x Backup Keys
- 4 x Anchor Bolts for Mounting

Installation Steps:

1. **Unpack and Verify:** Carefully unpack all components and verify against the included parts list.

2. **Assembly:** Follow the detailed instructions in the provided manual for assembling the safe panels.
3. **Mounting:** For optimal security, use the provided 4 anchor bolts to fix the gun cabinet to a wall or floor. Pre-drilled holes are available on the back and bottom of the safe.
4. **Interior Setup:** Install the removable gun racks and pistol pockets as desired for your storage needs.



Image: A visual guide displaying the external dimensions (H 55.2 in, W 21.0 in, L 15.2 in) of the gun safe and illustrating included accessories such as a gray carpet, anchor bolts, and emergency keys.

Installation Video Guide:

Your browser does not support the video tag.

Video: A detailed instruction video demonstrating the assembly and installation process of the INTERGREAT 10-gun safe.

5. OPERATING INSTRUCTIONS

Your INTERGREAT gun safe offers multiple secure ways to access your firearms.

Access Methods:

1. **Digital Keyboard + Knob:** Enter your programmed digital code followed by the '#' key, then turn the knob to open.
2. **Key + Knob:** Insert the backup key into the keyhole, turn it, and then turn the knob to open.
3. **Emergency Battery Box + Knob:** If the internal batteries are depleted, connect the emergency battery box to the external port, enter your digital code, and turn the knob.



Image: A visual guide detailing the three quick access methods for the gun safe: Digital keyboard + Knob, Override Key + Knob, and Backup Power Box + Code + Knob. The initial password is shown as 123456+#.

Special Modes:

- **Mute Mode:** To enter silent mode, long press the "*" key on the digital keypad. This provides a quiet operating environment. Repeat the action to exit mute mode.
- **Locking System:** If an incorrect password is entered 5 times consecutively, the gun cabinet will temporarily lock, enhancing security against unauthorized access.

Operation Video Guides:

Your browser does not support the video tag.

Video: A demonstration of the fingerprint access feature of the INTERGREAT gun safe.

Your browser does not support the video tag.

Video: A demonstration of the keypad access feature of the INTERGREAT gun safe.

6. MAINTENANCE

- **Battery Replacement:** Replace the digital lock batteries annually or when the low battery indicator appears. Use the emergency battery box or backup key if batteries are completely depleted.
- **Cleaning:** Wipe the exterior and interior surfaces with a soft, dry cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Security Check:** Periodically inspect all mounting bolts to ensure they remain tight and secure. Check the door and locking mechanism for smooth operation.

7. TROUBLESHOOTING

- **Safe will not open with digital code:**
 - Ensure batteries are not depleted. Use the emergency battery box or backup key.
 - Verify the correct code is being entered. The safe will lock after 5 incorrect attempts.
- **Alarm is sounding:**
 - The alarm activates after 5 incorrect code entries or if the safe detects a forceful breach.
 - Enter the correct code or use the emergency key to disarm the alarm.
- **Door is stiff or difficult to open/close:**
 - Check for any obstructions around the door frame or locking bolts.
 - Ensure the safe is level and securely mounted.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	15.2"D x 21"W x 55.2"H
Item Weight	66 Pounds
Material	Metal (Cold-rolled steel)
Lock Type	Electronic
Capacity	10.2 Cubic Feet (10-14 Rifles)
Special Features	Alarm System, Anti-Theft, Combination Lock, Scratch Resistant, Waterproof

9. WARRANTY & SUPPORT

Your INTERGREAT gun safe comes with a 30-day easy return policy. For any product inquiries, technical assistance, or support needs, please contact INTERGREAT customer service through your purchase platform. Please have your product model and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question