

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fossil](#) /

› [Fossil Chronograph Men Neutra Grey Quartz Stainless Steel Blue Dial Watch FS6111 User Manual](#)

Fossil FS6111

Fossil Chronograph Men Neutra Grey Quartz Stainless Steel Blue Dial Watch FS6111 User Manual

INTRODUCTION

This manual provides instructions for the proper use and care of your Fossil Chronograph Men Neutra Grey Quartz Stainless Steel Blue Dial Watch, model FS6111. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.



Image: Front view of the Fossil Chronograph Men Neutra Grey Quartz Stainless Steel Blue Dial Watch FS6111.

PRODUCT OVERVIEW

The Fossil FS6111 is a chronograph watch featuring a precise quartz movement, a durable stainless steel case and band, and a distinctive blue sunray dial. It incorporates three sub-dials for chronograph functions and a date display. The watch is designed for daily wear and offers water resistance suitable for minor water exposure.



Image: Angled view of the Fossil FS6111 watch, showcasing the blue dial and grey stainless steel band.

SETUP

Setting the Time

1. Pull the crown (center knob on the right side of the watch) out to position 2.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Push the crown back into position 0 (normal operating position) to start the watch.

Setting the Date

1. Pull the crown out to position 1.
2. Turn the crown clockwise or counter-clockwise to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this may interfere with the date change mechanism.
3. Push the crown back into position 0.

Adjusting the Bracelet

The stainless steel bracelet may require adjustment to fit your wrist comfortably. It is recommended to have

this adjustment performed by a qualified jeweler or watch technician to prevent damage to the bracelet or clasp.



Image: Side view of the Fossil FS6111 watch, illustrating the crown and chronograph pushers.

OPERATING THE CHRONOGRAPH

The chronograph function allows for precise timing of events. Your watch features two pushers located above and below the crown.

1. **Start/Stop:** Press the upper pusher (A) to start the chronograph. Press it again to stop the timing.
2. **Reset:** After stopping the chronograph, press the lower pusher (B) to reset all chronograph hands to their zero positions. If the chronograph hands do not reset to zero, refer to the troubleshooting section.

The sub-dials typically display elapsed seconds, minutes, and a 24-hour indicator for the main time.



Image: Close-up side view of the Fossil FS6111 watch, showing the crown and chronograph pushers for operation.

MAINTENANCE

Water Resistance

Your Fossil FS6111 watch has a water resistance rating of **50 meters (5 ATM)**. This means it is suitable for short periods of recreational swimming, showering, or washing hands. It is **not recommended** for diving, snorkeling, or high-impact water sports. Ensure the crown is fully pushed in before any contact with water.

Cleaning

To maintain the appearance of your watch:

- Wipe the case and crystal with a soft, damp cloth.
- For the stainless steel bracelet, use a soft brush and mild soapy water to clean, then rinse thoroughly and dry with a soft cloth.
- Avoid using harsh chemicals or abrasive materials.

Battery Replacement

The watch is powered by a quartz movement requiring one LR44 battery. When the battery runs low, the watch may stop or the second hand may skip. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped	Low battery	Replace battery (professional service recommended).
Time is inaccurate	Incorrect setting, magnetic interference, or low battery	Reset time. Keep watch away from strong magnetic fields. Replace battery if needed.
Chronograph hands do not reset to zero	Impact or misalignment	Consult a qualified watch technician for adjustment.
Moisture under crystal	Water resistance compromised	Immediately take to a watch repair center to prevent further damage.

SPECIFICATIONS



Image: Dimensional diagram of the Fossil FS6111 watch.

Feature	Detail
Brand	Fossil
Model Name	FS6111
Movement Type	Quartz
Display Type	Chronograph
Case Material	Stainless Steel
Case Diameter	44 Millimetres
Case Thickness	11.3 Millimetres
Band Material	Stainless Steel
Band Width	22 Millimetres
Band Colour	Gray

Feature	Detail
Dial Colour	Blue
Crystal Material	Mineral
Water Resistance Depth	50 Metres
Clasp Type	Deployment Clasp
Battery	1 LR44 (included)
Item Weight	118 g
Country of Origin	China

WARRANTY AND SUPPORT

Warranty Information

This Fossil watch comes with a **2-year manufacturer's warranty** from the date of purchase. The warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear.

Customer Support

For warranty claims, service, or technical assistance, please contact Fossil India Pvt. Ltd. at the following address:

Fossil India Pvt. Ltd.

Khasra No: 2058/1754/18 & 2059/1754/18

Waka Mouza Bhatoli kalan, Baddi 173205 India

Please retain your proof of purchase for warranty validation.