

[Manuals.plus](#) /

> [SEUNKWANG](#) /

> SEUNKWANG GX710S Backlit Wired USB Computer Keyboard User Manual

SEUNKWANG GX710S

SEUNKWANG GX710S Backlit Wired USB Computer Keyboard User Manual

Model: GX710S | Brand: SEUNKWANG

INTRODUCTION

The SEUNKWANG GX710S is a full-size wired USB computer keyboard designed for comfortable and efficient typing. It features a simple white backlight, upgraded water drop pudding keycaps for enhanced light transmittance and reduced noise, and an ergonomic design for extended use. This manual provides detailed instructions for setting up, operating, and maintaining your keyboard.

SETUP

Connecting the Keyboard

1. Locate the USB-A cable attached to your GX710S keyboard.



Image: The GX710S keyboard with its wired USB-A cable, illustrating the 'Plug and Play' functionality.

2. Plug the USB-A connector into an available USB port on your computer (PC, desktop, laptop, or notebook).

3. The keyboard is plug-and-play, meaning it should be recognized automatically by your operating system without requiring additional driver installation.

OPERATING INSTRUCTIONS

Backlight Control

The GX710S keyboard features a simple white backlight with adjustable brightness levels and a breathing light mode.

- **Adjusting Brightness:** Press **FN + PU** to increase the backlight brightness. Press **FN + PD** to decrease the backlight brightness. There are 5 levels of brightness adjustment.
- **Turning On/Off Backlight:** Press **FN + Light Mode Key** (often indicated by a light bulb icon) to toggle the backlight on or off.
- **Breathing Light Mode:** The keyboard supports a breathing light mode, which can be activated or adjusted using the FN key combinations.



Image: Close-up of the keyboard showing the FN key and dedicated keys for adjusting backlight brightness and toggling the light mode.

Multimedia Functions

Utilize the FN key in combination with the F1-F12 keys for various multimedia and system shortcuts:

Key Combination	Function
FN+F1	Open Multimedia Player
FN+F2	Volume Decrease
FN+F3	Volume Increase
FN+F4	Mute
FN+F5	Stop Playing
FN+F6	Play Previous Song
FN+F7	Play/Pause
FN+F8	Play Next Song
FN+F9	Open Email

FN+F10	Open My Home Page
FN+F11	Lock Keyboard
FN+F12	Calculator
FN+WIN	Win Lock
FN+W/A/S/D	Interchange arrow keys with W/A/S/D

Key Features

- **Water Drop Pudding Keycaps:** The upgraded suspended water drop keycaps feature a transparent pudding structure, enhancing light transmission. Their concave and convex surface is designed for comfortable typing and gaming.
- **Quiet Typing Experience:** The silent membrane keyboard design, combined with the water drop keycaps, reduces typing noise by up to 95%, making it suitable for quiet environments.
- **26-Key Anti-Ghosting:** This feature allows up to 26 keys to be pressed simultaneously without conflict, ensuring accurate and fast responses during typing or gaming.
- **Ergonomic Design:** The keyboard features concave and convex keys that fit your fingertips, promoting smoother typing. It includes two adjustable footrests and four anti-slip bottom stickers, allowing for a 7° tilt to enhance typing comfort and reduce hand fatigue.



Image: A user typing on the GX710S keyboard, highlighting its comfortable ergonomic design.

COMPATIBILITY

The SEUNKWANG GX710S keyboard offers broad compatibility with various operating systems and devices:

- **Operating Systems:** Windows, Linux, Chrome, Mac OS.
- **Devices:** PC, desktop, laptop, notebook, gaming consoles, smart TVs, smartphones, tablets.



Image: A visual representation of the keyboard's universal compatibility across different systems and devices.

MAINTENANCE

To ensure the longevity and optimal performance of your keyboard, follow these maintenance guidelines:

- **Cleaning:** Regularly wipe the keyboard surface with a soft, damp cloth. For deeper cleaning, use compressed air to remove dust and debris from between the keys. Avoid using harsh chemicals or abrasive materials.
- **Spill Prevention:** Keep liquids away from the keyboard to prevent damage. In case of a spill, immediately unplug the keyboard and allow it to dry completely before reconnecting.
- **Storage:** When not in use, store the keyboard in a clean, dry environment away from extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your GX710S keyboard, try the following steps:

- **Keyboard Not Responding:**
 - Ensure the USB cable is securely plugged into both the keyboard and the computer.
 - Try plugging the keyboard into a different USB port on your computer.
 - Restart your computer.
- **Backlight Not Working:**
 - Ensure the backlight is turned on using the **FN + Light Mode Key** combination.
 - Adjust the brightness using **FN + PU/PD**.
- **Keys Not Registering Correctly:**
 - Clean the affected keys to ensure no debris is obstructing their movement.
 - Test the keyboard on another computer to determine if the issue is with the keyboard or the computer's software/drivers.

SPECIFICATIONS

Feature	Detail
Model Number	GX710S
Brand	SEUNKWANG (Manufactured by EWEADN)
Connectivity Technology	USB-A (Wired)
Keyboard Description	Quiet Wired Membrane Keyboard
Special Features	Backlit, Ergonomic, Foldable (via footrests), Lightweight, Quiet
Backlighting Color	Single White Color
Material	Metal, Plastic
Item Weight	1.57 pounds
Package Dimensions	17.76 x 6.85 x 1.5 inches
Color (Current Product)	Purple

WARRANTY AND SUPPORT

The SEUNKWANG GX710S keyboard comes with **48-month brand support**. For any questions, troubleshooting, accessory reissues, or returns and exchanges, please contact the seller directly. You can typically find seller contact information on the product's purchase page or through your order history.



Image: A guide illustrating how to contact customer support for inquiries before or after placing an order.

PRODUCT VIDEOS

Taro Purple Silent Keyboard Overview

Video: A short demonstration of the Taro Purple Silent Keyboard, showcasing its design and quiet operation.

Aesthetic & Effective Keyboard Preview

Video: A brief preview highlighting the aesthetic appeal and effective functionality of the keyboard, including its backlighting.