

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- > [Uthfy](#) /
- > [Uthfy 1800 CFM Evaporative Air Cooler User Manual](#)

## Uthfy JDAC75R

# Uthfy 1800 CFM Evaporative Air Cooler User Manual

Model: JDAC75R

Brand: Uthfy

## INTRODUCTION

Thank you for choosing the Uthfy 1800 CFM Evaporative Air Cooler. This portable unit is designed to provide efficient and comfortable cooling for various indoor environments. It functions as an evaporative cooler, fan, and humidifier, offering versatile climate control. Please read this manual thoroughly before operation to ensure proper use, maintenance, and safety.



The Uthfy Evaporative Air Cooler is suitable for use in diverse environments such as living rooms, offices, patios, and classrooms, providing versatile cooling solutions.

## SAFETY INSTRUCTIONS

---

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using this appliance.
- Ensure the power supply matches the voltage specified on the rating label.
- Do not operate the cooler with a damaged cord or plug.
- Do not use the cooler in areas with high humidity or direct water exposure.
- Always unplug the appliance before cleaning, servicing, or moving.
- Keep children and pets away from the appliance during operation.
- Do not insert fingers or foreign objects into the air inlet or outlet.
- Use only on a stable, level surface to prevent tipping.
- Do not use without water in the tank when the cooling function is active.

## PACKAGE CONTENTS

---

Verify that all items are present in the package:

- Uthfy Evaporative Air Cooler Unit
- Remote Control
- Ice Packs (quantity may vary, typically 2-4)
- User Manual (this document)

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your evaporative air cooler:



The main unit features a top-mounted control panel, a large air outlet with adjustable louvers, and a visible water level indicator.

# 32 Inch Swamp Cooler Air Conditioner

3 Speeds

4 Modes

12H Timers

120° Oscillation

Remote Control



Key features include multiple speed and mode settings, a programmable timer, wide oscillation for broad coverage, and convenient remote control operation.

## SETUP

### Unpacking and Placement

1. Carefully remove the air cooler from its packaging.
2. Place the unit on a firm, level surface. Ensure there is adequate space around the unit for proper airflow.
3. Attach the 360-degree wheels to the bottom of the unit if they are not pre-installed. These wheels allow for easy portability.



The 360-degree wheels provide easy mobility for the unit.

### Filling the Water Tank and Adding Ice Packs

4. Open the water tank cover, usually located at the top or rear of the unit.
5. Fill the water tank with clean, cool water. Do not exceed the maximum fill line. The tank capacity is 4.2 gallons.
6. For enhanced cooling, place the provided ice packs (after freezing them) into the designated ice tray or directly into the water tank.



Place frozen ice packs into the top reservoir for colder air output.

## OPERATING INSTRUCTIONS

---

The Uthfy Evaporative Air Cooler can be operated using the touch control panel on the unit or the included remote control.

### Control Panel Functions

- **ON/OFF:** Powers the unit on or off.
- **SPEED:** Cycles through 3 fan speeds: Low, Medium, High.
- **TIMER:** Sets the auto-off timer for up to 12 hours.
- **MODE:** Selects between 4 operating modes: Normal, Natural, Sleep, and Cooling.
- **COOL:** Activates or deactivates the evaporative cooling function. This requires water in the tank.
- **SWING:** Activates or deactivates the 120-degree automatic oscillation of the internal louvers.



Choose from Normal, Natural, Sleep, or Cooling modes to suit your preference.

### Adjusting Airflow Direction

The unit features both automatic oscillation and manual vertical louver adjustment.

- Use the **SWING** button on the control panel or remote to activate the automatic 120-degree horizontal oscillation.
- Manually adjust the vertical louvers to direct airflow up or down as desired.



Manually adjust the vertical louvers to direct the airflow.

## MAINTENANCE

---

Regular maintenance ensures optimal performance and longevity of your air cooler.

### Cleaning the Water Tank

- Unplug the unit from the power outlet.
- Drain any remaining water from the tank using the drain plug at the bottom.
- Remove the water tank (if detachable) or access the interior for cleaning.
- Clean the tank with a soft cloth and mild detergent. Rinse thoroughly with clean water.
- Allow the tank to air dry completely before reassembling or refilling.



Regularly clean the water tank to prevent mineral buildup and maintain hygiene.

### Cleaning the Cooling Pad/Filter

- Refer to the product diagram to locate and remove the cooling pad/filter.
- Rinse the cooling pad under running water to remove dust and debris. For stubborn dirt, use a soft brush.
- Allow the cooling pad to dry completely before placing it back into the unit.

### External Cleaning

- Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## TROUBLESHOOTING

---

If you encounter issues with your Uthfy Evaporative Air Cooler, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Unit does not turn on	No power supply; Power button not pressed.	Check power cord connection; Press ON/OFF button.
No cool air	Water tank empty; Cooling function not activated; Cooling pad dirty.	Fill water tank; Press COOL button; Clean cooling pad.
Weak airflow	Fan speed too low; Air inlet/outlet blocked.	Increase fan speed; Clear any obstructions.
Unusual noise	Unit not on a level surface; Foreign object inside.	Place on a stable surface; Unplug and check for obstructions.
Remote control not working	Batteries dead; Obstruction between remote and unit.	Replace batteries; Ensure clear line of sight.

## SPECIFICATIONS

Feature	Detail
Brand	Uthfy
Model Name	swamp cooler air conditioner
Item Model Number	JDAC75R
Air Flow Capacity	1800 CFM (Cubic Feet Per Minute)
Water Tank Capacity	4.2 Gallons
Oscillation	120° Wide-Angle
Timer	Up to 12 Hours
Number of Speeds	3
Modes	Normal, Natural, Sleep, Cooling
Controls Type	Touch Panel, Remote Control
Noise Level	25 dB
Product Dimensions	12.6"D x 12.8"W x 31.1"H
Item Weight	14.99 pounds
Voltage	120 Volts
UPC	774882974956

## WARRANTY

This Uthfy Evaporative Air Cooler comes with a **1 Year Manufacturer Warranty** from the date of purchase. Please retain your

proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or improper maintenance.

## CUSTOMER SUPPORT


For any questions, technical assistance, or warranty inquiries, please contact Uthfy customer support. Refer to the product packaging or the official Uthfy website for the most current contact information.

**Online Support:** Visit the Uthfy official website for FAQs and support resources.

**Email Support:** Refer to your product registration card or packaging for the support email address.




### Related Documents - JDAC75R

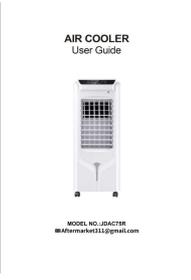	<p><a href="#">JDAC75R Air Cooler User Guide</a></p> <p>User guide for the JDAC75R Air Cooler, detailing its features, operation, maintenance, and troubleshooting.</p>
	<p><a href="#">Uthfy Evaporative Air Cooler User Guide</a></p> <p>User guide for the Uthfy Evaporative Air Cooler, model HY-43Y. Includes important safety instructions, operating instructions, parts list, and troubleshooting.</p>
	<p><a href="#">Uthfy JDAC75 JDAC75R Air Cooler Instruction Manual</a></p> <p>Comprehensive instruction manual for the Uthfy JDAC75 and JDAC75R evaporative air coolers. Includes details on operation, installation, technical specifications, safety precautions, and maintenance.</p>
	<p><a href="#">JDAC75 &amp; JDAC75R Air Cooler Instruction Manual</a></p> <p>Comprehensive instruction manual for the JDAC75 (mechanical type) and JDAC75R (digital type) air coolers. Includes operating instructions, technical parameters, safety precautions, and maintenance guidelines.</p>

	<p><a href="#">Uthfy Air Cooler User Guide</a></p> <p>User guide for the Uthfy Air Cooler, model HY-66R. Learn about important safety instructions, how to use and clean your air cooler, and customer care information.</p>
	<p><a href="#">JH-60AI-H Mobile Evaporative Air Cooler Operation User Manual</a></p> <p>User manual for the JH-60AI-H Mobile Evaporative Air Cooler, detailing operation, safety instructions, cleaning, maintenance, and troubleshooting.</p>

Documents - Uthfy – JDAC75R

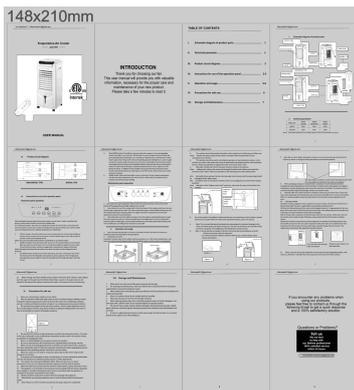

[\[pdf\]](#) User Manual

JDAC75 and JDAC75R 2022 11 3 cdr Administrator Installation Manual Uthfy Evaporative Air Cooler 32 Swamp with 4 2 Gallons Water Tank Remote Control 90° Oscillation Cooling Fan Speeds 12H Timer In 1 Tower thats Blow Cold for Home Office Kitchen B1g4qFleg9L m media amazon images I |||

...

lang: score:16 filesize: 3.97 M page\_count: 1 document date: 2023-05-22