

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Etna](#) /

› [Etna Wonder Washer: Compact Portable Washing Machine Instruction Manual \(Model WDRWSHR\)](#)

## Etna WDRWSHR

# Etna Wonder Washer: Compact Portable Washing Machine Instruction Manual

Model: WDRWSHR

## INTRODUCTION

---

Thank you for choosing the Etna Wonder Washer, Model WDRWSHR. This compact portable washing machine is designed for convenience and efficiency, making it ideal for small living spaces, RVs, camping, and dorm rooms. Please read this manual thoroughly before operating your new washing machine to ensure safe and optimal performance. Keep this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- To reduce the risk of electric shock, do not immerse the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Use this appliance only for its intended use as described in this manual.
- Do not use outdoors.
- Always ensure the drain hose is properly positioned to prevent water leakage.
- Do not overload the machine. Refer to the capacity guidelines in the specifications.
- Keep hands and foreign objects clear of moving parts during operation.

**WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. (Proposition 65 Warning)**

## PACKAGE CONTENTS

---

Please check to ensure all items are included in your package:

- Etna Wonder Washer Unit (Model WDRWSHR)
- Drain Hose
- Water Inlet Hose
- Spin Basket/Insert
- Instruction Manual

## SETUP

---

1. **Unpacking:** Carefully remove all packaging materials. Inspect the unit for any damage.
2. **Positioning:** Place the Wonder Washer on a flat, stable surface near a water source (like a sink or faucet) and a drain. Ensure there is enough space for the drain hose.
3. **Connect Water Inlet Hose:** Attach one end of the water inlet hose to the water inlet port on the washing machine (usually marked "Water Inlet"). Connect the other end to a suitable faucet. Ensure connections are secure to prevent leaks.
4. **Position Drain Hose:** Place the drain hose into a sink, tub, or other suitable drainage area. Ensure the hose is not kinked or blocked.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

# WONDER SNAKE

PROFESSIONAL  
DRAIN HAIR  
REMOVER



Insert



Twirl



Pull

*Image: The Etna Wonder Washer showing the water inlet and drain hoses connected, ready for use.*

## OPERATING INSTRUCTIONS

### Washing Cycle:

1. **Load Laundry:** Open the lid and place your clothes into the wash tub. Do not overload. The capacity is 10 Liters.
2. **Add Water:** Fill the wash tub with water to the desired level. You can use the water inlet hose or manually pour water.
3. **Add Detergent:** Add the appropriate amount of laundry detergent. For optimal results and to prevent excessive suds, use a low-sudsing detergent designed for high-efficiency machines or use a smaller amount of regular detergent.
4. **Set Wash Timer:** Turn the "Wash Timer" knob to select the desired wash time (up to 15 minutes). The machine will begin agitating.
5. **Drain Water:** Once the wash cycle is complete, turn the "Drain Selector" knob to the "Drain" position to empty the water from the tub.



*Image: The wash tub of the Wonder Washer with clothes and water, illustrating the washing process.*

### Spin Drying Cycle:

1. **Transfer Clothes:** After the wash cycle and draining, transfer the wet clothes from the wash tub to the spin basket. Ensure clothes are evenly distributed.
2. **Secure Spin Basket:** Place the spin basket cover on top of the clothes inside the spin basket.
3. **Set Spin Timer:** Turn the "Spin Timer" knob to select the desired spin time (typically 1-5 minutes). The machine will begin spinning to remove excess water.
4. **Remove Clothes:** Once the spin cycle is complete, carefully remove the clothes. They will be damp and ready for air drying or further drying.



*Image: The spin basket of the Wonder Washer, designed to remove excess water from clothes.*

### Video Demonstration:

Your browser does not support the video tag.

*Video: A demonstration of a portable mini washing machine's operation, including filling, washing, and spinning cycles.  
This video is provided by the seller, Giantex.*

## MAINTENANCE

---

- **Cleaning the Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Interior:** After each use, rinse the wash tub and spin basket with clean water. Ensure no detergent residue or lint remains.
- **Drain Hose:** Periodically check the drain hose for blockages or damage. Clean if necessary.
- **Storage:** When not in use, ensure the machine is completely dry. Store in a cool, dry place. The collapsible design allows for easy storage.



*Image: The Etna Wonder Washer demonstrating its compact, collapsible design for convenient storage.*

## **TROUBLESHOOTING**

---

Problem	Possible Cause	Solution
Machine does not start.	Not plugged in; Power outage; Timer not set.	Check power connection; Verify power supply; Set the wash/spin timer.
Water does not drain.	Drain hose kinked or blocked; Drain selector not set to "Drain".	Straighten drain hose, clear blockages; Turn drain selector to "Drain".
Excessive vibration during spin.	Uneven load in spin basket.	Redistribute clothes evenly in the spin basket.
Water leaks from machine.	Hoses not securely connected; Overfilling the tub.	Check and tighten all hose connections; Do not fill water above the maximum level indicator.

## SPECIFICATIONS

---

- **Brand:** Etna
- **Model:** WDRWSHR
- **Capacity:** 10 Liters
- **Product Dimensions:** 1.2"D x 10"W x 12.96"H
- **Item Weight:** 12 Pounds
- **Material:** Plastic
- **Installation Type:** Freestanding
- **Access Location:** Top Load
- **Control Console:** Knob
- **Special Feature:** Compact
- **Color:** Blue
- **Cycle Options:** Normal, Delicates, Quick Wash (via timer adjustment)
- **Batteries Required:** No

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Etna website. Keep your purchase receipt as proof of purchase for any warranty claims.