

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Garvee](#) /
- › [Garvee 10x20 Pop Up Canopy Tent Instruction Manual](#)

## Garvee SX-GV-ZDP

# Garvee 10x20 Pop Up Canopy Tent Instruction Manual

Model: SX-GV-ZDP

## INTRODUCTION

---

Welcome to your Garvee 10x20 Pop Up Canopy Tent. This manual provides essential instructions for the safe setup, operation, maintenance, and troubleshooting of your canopy. Please read this manual thoroughly before assembly and retain it for future reference.

## IMPORTANT SAFETY INFORMATION

---

- **Adverse Weather Conditions:** To prevent damage to the canopy and potential hazards to individuals and property, avoid assembling or leaving the fully assembled canopy in adverse weather conditions such as strong winds, heavy rain, or snow.
- **Heat and Flames:** Keep the canopy away from heat sources and open flames. The fabric is flame-retardant (CPAI-84), but direct exposure to fire can cause damage.
- **Assembly and Disassembly:** Always follow assembly and disassembly instructions carefully. Ensure all components are securely locked before use.
- **Anchoring:** Always secure the canopy to the ground using stakes and ropes, especially in outdoor environments, to prevent it from being lifted by wind.
- **Storage:** Store the product in a clean, dry location, protected from humidity, direct sunlight, frost, and dust. Keep it out of children's reach.

## PACKAGE CONTENTS

---

The package for your Garvee 10x20 Pop Up Canopy Tent includes the following components:

- Folding canopy tent frame (Alloy Steel)
- 210D Oxford Fabric top cover (Gray)
- Carrying bag
- Necessary components for assembly (e.g., stakes, ropes - typically included for anchoring)

## SETUP INSTRUCTIONS

---

Follow these steps for quick and easy assembly of your Garvee Pop Up Canopy Tent. It is recommended that at least two people assist with the setup.

**1. Step 1: Unpack and Position**

Remove the canopy frame and top cover from the carrying bag. Place the folded frame in the desired setup location.

**2. Step 2: Partially Expand Frame**

With a person at each end, gently pull the frame outwards to partially expand it. Do not fully extend yet.

**3. Step 3: Attach Canopy Top**

Drape the 210D Oxford fabric top cover over the partially expanded frame. Secure the corners of the fabric to the frame's corner posts using the attached fasteners (e.g., hook-and-loop straps).

**4. Step 4: Fully Expand and Lock**

Once the top cover is in place, press the central lock system of the canopy tent upwards until it clicks into place, fully opening and securing the frame.


**5. Step 5: Adjust Height**

The canopy legs have 3 height adjustment holes. Press the release buttons on each leg and extend them to your desired height, ensuring all legs are adjusted evenly and click into their locking positions.

**6. Step 6: Secure the Canopy**

For stability, especially in light wind, use the provided stakes and ropes to anchor the canopy to the ground. Attach ropes to the canopy's D-rings and secure them to stakes driven into the ground at an angle.

## **UPF 50+ UV Protection & 100% Waterproof**

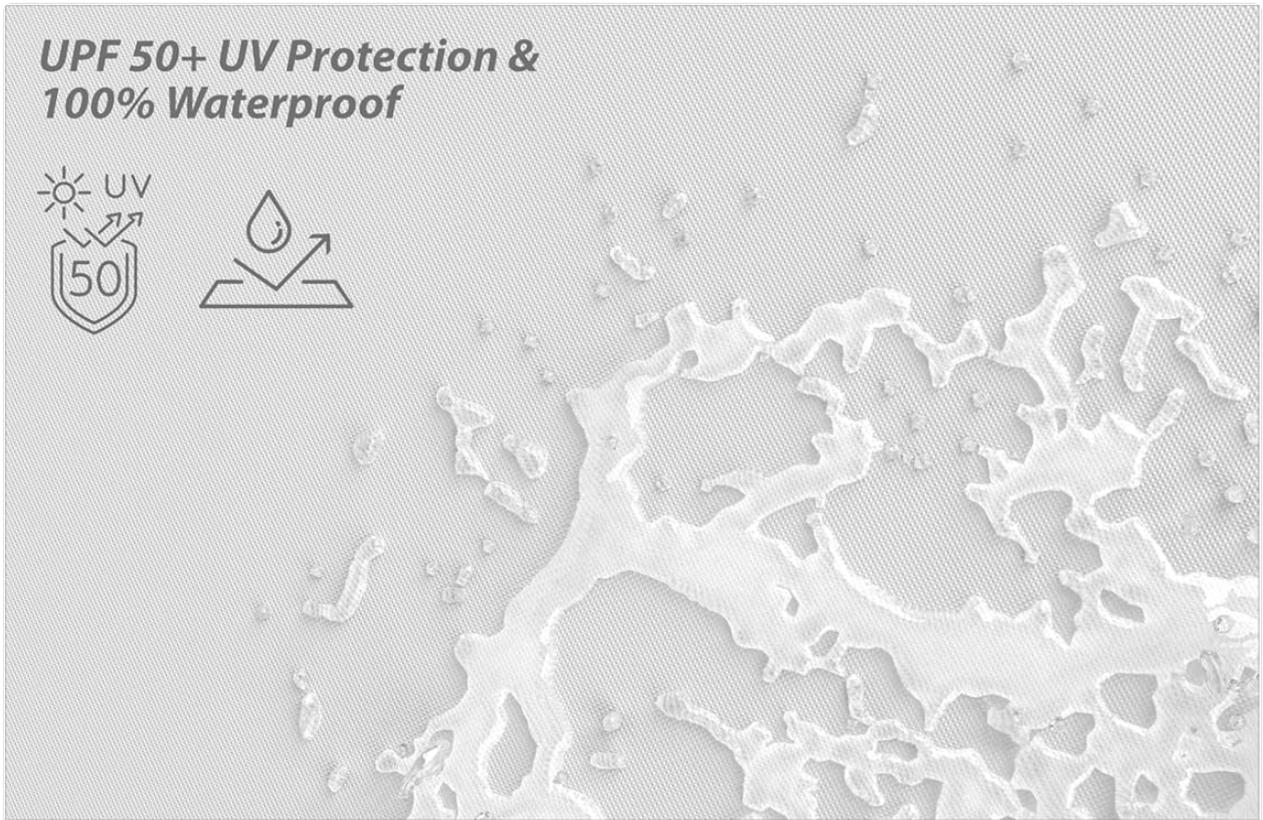

## **Thickened Steel Legs & Upgraded Reinforcement Support**



This image illustrates two key features: the waterproof and UV-protective 210D Oxford fabric, indicated by water droplets beading on the surface and a UPF 50+ UV protection icon. Below, it shows a robust connection point of the thickened steel legs, highlighting the upgraded reinforcement support for enhanced durability and stability of the canopy frame.

### **OPERATION**

---

Your Garvee canopy tent provides 200 square feet of shade and shelter for various outdoor activities.

- **Height Adjustment:** To adjust the height of the canopy, locate the adjustment pins on each leg. Press the pin and slide the leg to the desired height setting. Ensure all legs are adjusted evenly and securely locked

before use.

- **Weather Conditions:** This canopy is designed for outdoor use in fair weather conditions. It offers UPF 50+ UV protection and is waterproof. However, it is not intended for use in strong winds, heavy rain, or snow. Always take down the canopy during severe weather.
- **Versatile Use:** The canopy is suitable for a wide range of applications including picnics, camping, barbecues, sports events, fishing trips, outdoor gatherings, farmer's markets, craft fairs, and beach outings.

## CARE AND MAINTENANCE

---

Proper care and maintenance will extend the life of your Garvee canopy tent.

- **Cleaning the Fabric:** Clean the canopy fabric with mild soap and water. Do not use harsh chemicals, bleach, or abrasive cleaners, as these can damage the fabric's waterproof and UV-protective coating. Rinse thoroughly and allow the fabric to dry completely before storage to prevent mildew.
- **Frame Care:** Periodically inspect the metal frame for any signs of damage, rust, or loose connections. Clean any dirt or debris from the frame. If rust appears, clean it and apply a rust-inhibiting paint.
- **Storage:** Always disassemble the canopy and store it in its provided carrying bag. Store the product in a clean, dry location, protected from humidity, direct sunlight, frost, and dust. Ensure all components are dry before packing away.

## TROUBLESHOOTING

---

If you encounter issues with your Garvee canopy tent, refer to the following common problems and solutions:

Problem	Solution
Canopy difficult to open or close.	Ensure all frame joints are free of obstructions (e.g., fabric caught in joints). Apply a silicone-based lubricant to moving parts if necessary.
Canopy feels unstable or wobbly.	Verify that all legs are fully extended and securely locked at the same height. Use all provided stakes and ropes to anchor the canopy firmly to the ground. Do not use in high winds.
Water pooling on the canopy top.	Ensure the canopy top fabric is taut and properly secured to the frame at all attachment points. Adjust leg height if necessary to create proper tension and allow water runoff.
Fabric tearing or showing excessive wear.	Avoid sharp objects coming into contact with the fabric. Ensure the canopy is not over-tensioned during setup. Store properly to prevent damage.

## PRODUCT SPECIFICATIONS

---

Feature	Detail
Brand	Garvee
Model Number	SX-GV-ZDP

Feature	Detail
Product Dimensions (L x W x H)	240" x 120" x 79" (10ft x 20ft)
Top Cover Material	210D Oxford Fabric
Frame Material	Alloy Steel
Water Resistance Level	Waterproof
Ultraviolet Light Protection	Yes (UPF 50+)
Item Weight	58.2 Pounds
Color	Gray
Assembly Required	Yes

## WARRANTY AND SUPPORT

---

This Garvee product comes with a standard manufacturer's warranty. For specific warranty details, including coverage period and terms, please refer to the product packaging or contact Garvee customer support directly.

For technical assistance, inquiries about missing parts, or any other questions regarding your Garvee 10x20 Pop Up Canopy Tent, please contact Garvee customer service through the retailer's platform where you purchased the product, or visit the official Garvee website for support contact information.