

EPOMAKER Click Mouse

EPOMAKER Click Gaming Mouse Instruction Manual

Model: Click Mouse

1. INTRODUCTION

The EPOMAKER Click Gaming Mouse is a high-performance wireless mouse designed for gaming and productivity across various operating systems. Featuring a flagship PAW3950 optical sensor, adjustable DPI up to 42,000, and an 8K polling rate, it offers lightning-fast responsiveness and precision. Its lightweight design, multi-mode connectivity (2.4Ghz, Bluetooth, USB-C), and long-lasting 500mAh rechargeable battery make it a versatile tool for any user.



EPOMAKER Click



800-42,000



PAW3950



8,000 Hz



Tri-Mode



LightWeight



500mAh

Image 1.1: EPOMAKER Click Gaming Mouse showcasing its key features.

2. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- EPOMAKER Click Gaming Mouse
- USB-C to USB-A Charging/Data Cable
- 2.4GHz Wireless Receiver (USB Dongle)
- USB-A to USB-C Adapter
- User Manual
- Adhesive Grip Stickers

Video 2.1: EPOMAKER Click Unboxing Video. This video demonstrates the unboxing process and shows the items included in the package.

3. PRODUCT DIAGRAM



Image 3.1: Detailed diagram of the EPOMAKER Click Gaming Mouse.

1. Battery/DPI Indicator
2. Left/Right Button
3. Scroll Wheel
4. DPI + Button
5. DPI - Button
6. Side Buttons (Programmable)
7. USB-C Port
8. Bluetooth Indicator
9. 2.4GHz Indicator
10. BT/2.4G Switch
11. Polling Rate Switch
12. Polling Rate Indicator
13. Tri-Mode Switch

Dimensions: Length: 121mm, Width: 63.6mm, Height: 38.7mm. **Weight:** 58g.

4. CONNECTIVITY MODES

The EPOMAKER Click Gaming Mouse supports three connectivity modes:

- **2.4GHz Wireless:** For a stable, high-performance connection with low latency, ideal for gaming.
- **Bluetooth:** For convenient wireless connection to multiple devices without a dongle.
- **USB-C Wired:** For a direct, zero-latency connection and simultaneous charging.

5. SETUP

5.1. 2.4GHz Wireless Mode

1. Locate the 2.4GHz wireless receiver (USB dongle) in the package.
2. Plug the USB dongle into an available USB-A port on your computer. If your computer only has USB-C ports, use the provided USB-A to USB-C adapter.
3. On the bottom of the mouse, slide the Tri-Mode Switch to the **2.4G** position.
4. The 2.4GHz Indicator light on the mouse will illuminate, indicating a successful connection.

Video 5.1: How to use 2.4GHz wireless mode. This video demonstrates the steps to connect the mouse using the 2.4GHz wireless dongle.

5.2. Bluetooth Mode

1. On the bottom of the mouse, slide the Tri-Mode Switch to the **BT** position.
2. The Bluetooth Indicator light will start blinking, indicating it's in pairing mode.
3. On your computer or device, navigate to Bluetooth settings and search for new devices.
4. Select