

- Manuals.plus /
- › Dpofirs /
 - › Dpofirs Small DV Camera User Manual - Model Dpofirserg4vtq6i2-11

Dpofirs Dpofirserg4vtq6i2-11

Dpofirs Small DV Camera User Manual

Model: Dpofirserg4vtq6i2-11
Brand: Dpofirs

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Dpofirs Small DV Camera. Please read this manual thoroughly before operating the device and retain it for future reference. This compact and lightweight camera is designed for capturing high-definition photos and videos, featuring a 1.44-inch color screen for instant playback and a built-in flash for various lighting conditions.



Figure 1: Front view of the Dpofirs Small DV Camera in pink, with the flash extended.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- Dpofirs Small DV Camera
- Detachable Base
- USB Charging Cable
- Wrist Strap
- Keychain Attachment
- User Manual (this document)



Figure 2: Package contents of the Dpofirs Small DV Camera.

3. CAMERA COMPONENTS

Familiarize yourself with the various parts of your camera:

- **Lens:** Main optical component for capturing images.

- **Flash:** Provides illumination in low-light conditions.
- **1.44-inch Color Screen:** For live view, menu navigation, and playback.
- **Power Button:** Turns the camera on or off.
- **Shutter/Record Button:** Initiates photo capture or video recording.
- **Navigation Buttons (+/-):** Used for zooming, menu navigation, and volume control during playback.
- **Mode Button:** Switches between photo and video modes.
- **USB-C Port:** Located on the detachable base, used for charging and data transfer.
- **MicroSD Card Slot:** For inserting a memory card (not visible in images, but standard for such devices).



Figure 3: Side view showing camera controls.

4. GETTING STARTED

4.1. Charging the Battery

1. Attach the camera to its detachable base.
2. Connect the supplied USB charging cable to the USB-C port on the base.
3. Plug the other end of the USB cable into a standard USB power adapter (5V/1A recommended) or a computer's USB port.
4. The charging indicator light will illuminate. It will turn off or change color once charging is complete.



Figure 4: USB-C charging port on the detachable base.

4.2. Inserting a Memory Card

A MicroSD card (not included) is required to store photos and videos. The camera supports cards up to a certain capacity (refer to specifications for details).

1. Locate the MicroSD card slot (typically on the side or bottom of the camera).
2. Insert the MicroSD card with the gold contacts facing down (or as indicated by a diagram near the slot) until it clicks into place.

3. To remove, gently push the card in until it clicks, then release, and it will spring out.

4.3. Powering On/Off

- **To Power On:** Press and hold the Power button for a few seconds until the screen illuminates.
- **To Power Off:** Press and hold the Power button again until the screen turns off.

5. OPERATING INSTRUCTIONS

5.1. Taking Photos

1. Ensure the camera is in Photo Mode (press the Mode button if necessary).
2. Frame your shot using the 1.44-inch color screen.
3. Press the Shutter button to capture a photo.

5.2. Recording Videos

1. Ensure the camera is in Video Mode (press the Mode button if necessary).
2. Frame your scene using the 1.44-inch color screen.
3. Press the Record button once to start recording. A timer or indicator will appear on the screen.
4. Press the Record button again to stop recording.



Figure 5: Camera highlighting video and photo resolution.

5.3. Using the Flash

The built-in flash can be activated for improved visibility in low-light conditions.

- In Photo or Video mode, locate the flash control setting in the camera's menu or a dedicated flash button.
- Select the desired flash mode (e.g., Auto, On, Off).

5.4. Viewing Playback

1. Enter Playback Mode (usually via a dedicated button or menu option).
2. Use the Navigation buttons to scroll through your captured photos and videos.
3. Press the Shutter/Record button to play a video.



Figure 6: Camera screen showing instant preview.

5.5. Transferring Files

1. Connect the camera to a computer using the USB charging cable.
2. The camera should appear as a removable disk drive on your computer.
3. Open the drive to access and copy your photos and videos.

6. MAINTENANCE

6.1. Cleaning the Camera

- Use a soft, dry cloth to clean the camera body.
- For the lens and screen, use a specialized lens cleaning cloth and solution to avoid scratches.
- Do not use harsh chemicals or abrasive materials.

6.2. Battery Care

- Charge the battery fully before first use.
- Avoid completely draining the battery frequently.

- If storing the camera for an extended period, charge the battery to about 50% and recharge every few months.

6.3. Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Keep it away from dust and moisture.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on	Low battery; Faulty battery; Power button issue	Charge the battery; Try a different charging cable/adaptor; Contact support if issue persists.
Cannot take photos/videos	No MicroSD card; Full MicroSD card; Incorrect mode	Insert a MicroSD card; Delete files or use a new card; Switch to Photo/Video mode.
Poor image/video quality	Low light; Dirty lens; Incorrect settings	Use the flash; Clean the lens; Adjust camera settings.
Camera freezes	Software glitch; Memory card issue	Press and hold the Power button to force a restart; Reformat or replace the MicroSD card.

8. SPECIFICATIONS

Feature	Detail
Model Number	Dpofirserg4vtq6i2-11
Display Screen	1.44 inch HD Color Screen
Video Resolution	1080P Full HD
Photo Resolution	3760x2128 pixels
Built-in Flash	Yes
Storage Media	MicroSD Card (not included)
Connectivity	USB-C
Material	ABS Engineering Plastic
Item Weight	3.7 ounces
Dimensions (Package)	4.33 x 3.15 x 1.97 inches

9. SAFETY INFORMATION

- Do not expose the camera to water or excessive moisture.
- Avoid dropping the camera or subjecting it to strong impacts.
- Keep the camera away from extreme temperatures and direct sunlight.

- Do not attempt to disassemble or repair the camera yourself. Refer to qualified service personnel.
- Keep out of reach of small children due to small parts.

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided with your purchase or visit the official Dpofirs website. Please have your model number (Dpofirserg4vtq6i2-11) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DSC8H7XM>

More documents and user manuals: <https://manuals.plus/>