

Manuals.plus /

› KODAK /

› KODAK 7-Inch Wooden Digital Photo Frame RCF1012WDB User Manual

KODAK RCF1012WDB

KODAK 7-Inch Wooden Digital Photo Frame User Manual

Model: RCF1012WDB | Brand: KODAK

INTRODUCTION

Thank you for choosing the KODAK 7-Inch Wooden Digital Photo Frame. This manual provides essential information for setting up, operating, and maintaining your digital photo frame. Please read these instructions carefully before use to ensure proper functionality and to maximize your enjoyment of the product. This frame is designed to display your cherished photos, videos, and music with its high-quality 1024x600 IPS HD display.

PACKAGE CONTENTS

Please check the package for the following items:

- KODAK 7-Inch Wooden Digital Photo Frame
- Power Adapter
- Remote Control
- User Manual

PRODUCT OVERVIEW

The KODAK 7-Inch Wooden Digital Photo Frame features a 1024x600 IPS HD display, supporting various multimedia formats including photos, videos, and music. It includes an auto-rotate feature for flexible placement and is controlled via a remote.

Front View and Remote Control



This image shows the front of the KODAK 7-Inch Wooden Digital Photo Frame displaying a picture of a child. A hand is holding the included remote control, highlighting the frame's primary control method.

Rear View and Connectivity Ports



The rear view of the digital photo frame illustrates the USB port and SD card slot, where external storage devices can be inserted to load media files. A USB drive is shown being inserted into the USB 3.1 port, and an SD card is visible in its slot.

SETUP

1. **Power Connection:** Connect the provided power adapter to the DC IN port on the back of the frame and then plug it into a standard electrical outlet.
2. **Insert Storage Device:** Insert a USB flash drive or an SD/SDHC memory card (up to 32GB, not included) into the corresponding slot on the back of the frame. Ensure the card or drive is inserted correctly.
3. **Power On:** The frame will typically power on automatically once connected to power. If not, press the power button located on the back or side of the frame.
4. **Initial Setup:** Follow the on-screen prompts to select your preferred language and set the date and time.

OPERATING INSTRUCTIONS

Using the Remote Control

The included remote control allows for easy navigation and control of the frame's functions. Point the remote directly at the frame's IR receiver.

- **Power Button:** Turns the frame on or off.
- **Menu Button:** Accesses the main menu or returns to the previous menu.
- **Navigation Buttons (Up/Down/Left/Right):** Used to navigate through menus and select options.
- **Enter Button:** Confirms a selection.

- **Volume Buttons:** Adjusts the volume for videos and music.
- **Playback Controls (Play/Pause, Previous, Next):** Controls media playback.
- **Mode Buttons (Photo, Video, Music, Calendar):** Switches directly to the respective media mode.

Media Playback

1. **Selecting Media Source:** From the main menu, select the desired media type (Photo, Music, Video) or use the dedicated buttons on the remote.
2. **Browsing Files:** Navigate through your files and folders using the remote's navigation buttons.
3. **Starting Playback:** Select a file and press the Enter button to start playback. For photos, a slideshow will typically begin automatically.

Settings

Access the settings menu to customize your frame's behavior:

- **Slideshow Settings:** Adjust transition effects, display time, and playback order for photos.
- **System Settings:** Configure language, time, date, auto-rotate function, and brightness.
- **Calendar Mode:** Display a calendar with your photos in the background.

MAINTENANCE

- **Cleaning the Screen:** Use a soft, dry, lint-free cloth to gently wipe the screen. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics. Avoid harsh chemicals.
- **Cleaning the Frame:** Wipe the wooden frame with a soft, dry cloth.
- **Storage:** When not in use for extended periods, disconnect the power adapter and store the frame in a cool, dry place away from direct sunlight.
- **Avoid Liquids:** Do not expose the frame to water or other liquids.

TROUBLESHOOTING

- **Frame does not power on:**
 - Ensure the power adapter is securely connected to both the frame and a working electrical outlet.
 - Try a different outlet.
- **No image or video displayed:**
 - Verify that a USB drive or SD card with compatible media files is inserted correctly.
 - Check the file formats. The frame supports common photo (JPEG), video (MP4, AVI), and music (MP3) formats.
 - Ensure the correct media source is selected.
- **Remote control not working:**
 - Check the battery in the remote control and replace if necessary.
 - Ensure there are no obstructions between the remote and the frame's IR receiver.
 - Make sure you are pointing the remote directly at the frame.
- **Images are distorted or blurry:**
 - Ensure the resolution of your images is suitable for the frame's 1024x600 display.
 - Clean the screen if there are smudges.

SPECIFICATIONS

| Feature | Specification |
|-------------------------|--|
| Brand | KODAK |
| Model Number | RCF1012WDB |
| Screen Size | 7 Inches |
| Display Resolution | 1024x600 IPS HD |
| Aspect Ratio | 16:9 |
| Connectivity Technology | USB |
| Power Source | Corded Electric |
| Control Method | Remote |
| Compatible Devices | Personal Computer, Smartphone, Tablet (for media transfer) |
| Item Dimensions L x W | 7.09"L x 4.69"W |

WARRANTY AND SUPPORT

This KODAK Digital Photo Frame comes with a **1 Year Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance beyond this manual, or warranty inquiries, please contact KODAK customer service. Refer to the contact information provided on the product packaging or the official KODAK website.