

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [My Arcade](#) /

› [My Arcade Casino Player Instruction Manual \(Model DGUN-3945\)](#)

My Arcade DGUN-3945

My Arcade Casino Player Instruction Manual

Model: DGUN-3945

Brand: My Arcade

INTRODUCTION

The My Arcade Casino Player (Model DGUN-3945) is an all-in-one handheld gaming device designed for portable entertainment. It comes pre-loaded with over 30 exciting casino and puzzle games, offering a diverse range of entertainment options. This manual provides essential information for setting up, operating, and maintaining your device.

WHAT'S IN THE Box

- My Arcade Casino Player Device
- User Guide

SETUP

Powering the Device

The My Arcade Casino Player can be powered by either 4 AA batteries (not included) or a USB-C cable (not included).

Battery Installation

1. Locate the battery compartment on the back of the device.
2. Open the battery compartment cover.
3. Insert 4 AA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover securely.



Image: Back view of the My Arcade Casino Player, highlighting the battery compartment. The compartment is designed to hold 4 AA batteries.

USB-C Power (Optional)

To power the device using a USB-C cable, connect one end to the USB-C port on the device and the other end to a compatible USB power source (e.g., wall adapter, computer USB port). The device will operate without batteries when connected via USB-C.

OPERATING INSTRUCTIONS

Turning On/Off

Locate the power switch, typically on the side or back of the device. Slide it to the 'ON' position to power on the device. Slide it to 'OFF' to power down.

Controls

The Casino Player features a variety of controls for game interaction, including a working metal lever for slot games, buttons for casino and puzzle games, and a high-resolution 3.5" full-color display.



Image: A hand is shown interacting with the controls of the My Arcade Casino Player, demonstrating the tactile experience of gameplay.

Adjusting Screen Brightness

The 3.5" full-color display has adjustable screen brightness. Refer to the on-screen menu or dedicated buttons (if available) to adjust the brightness to your preference.

Audio Options

The device includes a built-in speaker with volume control. For private listening, a 3.5 mm headphone port is available to connect your headphones.

Game Selection

Upon powering on, you will typically be presented with a main menu to select from the over 30 included games. Use the directional controls and action buttons to navigate and select your desired game.

GAMES INCLUDED

The My Arcade Casino Player features a diverse collection of over 30 casino and puzzle games. Below is a list of some of the included titles:



Image: The My Arcade Casino Player screen showing a partial list of the included casino and puzzle games.

Casino Games

- Texas Hold 'em Poker
- Baccarat
- Caribbean Stud Poker
- Show Hand
- Fruit Slot Machine
- Blackjack
- Change Cup
- Roulette
- Mahjong Clean
- Odd Even Number
- Polar Slot Machine
- Retro Slot

Puzzle Games

- Backgammon
- Freecell
- Sokoban
- Big Shot Checkers
- Chess
- Gobang
- Sudoku
- Flight Chess
- Colored Squares
- Precipice
- Mix Match

- Mine Clearance
- Connecting Lines
- Digital Memory
- Shape Switcher
- Push Color
- Match Cartoon
- Brain Challenge
- Bumber Balls

MAINTENANCE

To ensure the longevity of your My Arcade Casino Player, keep the device clean and dry. Use a soft, dry cloth to wipe down the exterior. Avoid using harsh chemicals or abrasive cleaners. Store the device in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

TROUBLESHOOTING

No Power

- Ensure batteries are correctly installed with proper polarity.
- Replace old batteries with new AA alkaline batteries.
- If using USB-C, ensure the cable is securely connected and the power source is active.

Display Issues

- Check screen brightness settings and adjust if necessary.
- If the screen is frozen, try turning the device off and on again.

No Sound or Low Volume

- Adjust the volume control on the device.
- If using headphones, ensure they are properly plugged into the 3.5 mm port.

SPECIFICATIONS

- **Product Dimensions:** 4" L x 4" W x 7" H
- **Controller Type:** Button Control
- **Item Weight:** 1.08 Pounds
- **Screen Size:** 3.5 Inches
- **Power Source:** Battery Powered (4 AA batteries required, not included) or USB-C (cable not included)
- **Age Range (Description):** Adult (Recommended for ages 18 and up)
- **Display Type:** LCD
- **Material:** Plastic
- **Memory Storage Capacity:** 8 MB
- **Form Factor:** Tabletop
- **Model Number:** DGUN-3945

SAFETY INFORMATION

Recommended for ages 18 and up. This device is not a toy for children. Adult supervision is advised. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove batteries if the device is not to be used for an extended period.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official My Arcade website. Keep your purchase receipt as proof of purchase for any warranty claims.