

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Brookstone](#) /

› [Brookstone Hair & Beard Trimmer Kit Instruction Manual](#)

### Brookstone Hair & Beard Trimmer Kit

# Brookstone Hair & Beard Trimmer Kit Instruction Manual

## 1. INTRODUCTION

---

This manual provides essential instructions for the safe and effective use of your Brookstone Hair & Beard Trimmer Kit. Please read all instructions carefully before first use and retain this manual for future reference. This 14-piece grooming kit is designed for precision trimming of hair, beard, and body.

**Brookstone®**



LED DISPLAY



LONG  
RUN TIME



STAINLESS STEEL  
FOIL HEADS



INCLUDES  
CHARGING TRAY



*Image: Front view of the Brookstone Hair & Beard Trimmer Kit, showcasing its sleek design.*

## 2. PACKAGE CONTENTS

Your Brookstone Hair & Beard Trimmer Kit includes the following items:

- Hair & Beard Trimmer Unit
- Multiple Guide Combs (various lengths)
- Scissors
- Cleaning Brush
- Lubricating Oil
- Charging Base
- Power Adapter
- Instruction Manual

# Brookstone®



## **CHARGING &** CLEANING REMINDER

*Image: The Brookstone Hair & Beard Trimmer Kit displayed in its packaging, showing the trimmer unit and various included accessories.*

### **3. SETUP**

#### **3.1 Charging the Trimmer**

Before first use, fully charge the trimmer for approximately 8 hours. The trimmer can be used corded or cordless.

1. Connect the power adapter to the charging base.
2. Place the trimmer securely onto the charging base.
3. Plug the power adapter into a standard electrical outlet.
4. The LED display on the trimmer will indicate charging status.

# Brookstone



Image: The Brookstone Hair & Beard Trimmer Kit resting on its dedicated charging base, indicating readiness for charging.

## 3.2 Attaching and Detaching Guide Combs/Heads

Ensure the trimmer is turned off before attaching or detaching any accessories.

- **To Attach:** Align the desired guide comb or trimmer head with the top of the trimmer unit and press firmly until it clicks into place.
- **To Detach:** Gently pull the guide comb or trimmer head upwards and away from the trimmer unit.

## 4. OPERATING INSTRUCTIONS

### 4.1 General Operation

To turn the trimmer on or off, press the power button located on the front of the unit. The high-performance motor ensures consistent, smooth trimming.

### 4.2 Trimming Hair, Beard, and Body

Select the appropriate guide comb for your desired hair length. For a closer trim, use the trimmer without a guide comb. Always trim against the direction of hair growth for best results.

- **Haircuts:** Use larger guide combs for the top and sides, gradually reducing length for fades or shorter styles.
- **Beard Shaping:** Start with a longer comb and gradually reduce the length to achieve your desired beard style. Use the precision trimmer head for detailing edges.
- **Body Grooming:** Attach the body grooming head or use a suitable guide comb for sensitive areas.



*Image: A detailed view of the stainless steel blades, designed for an extra close trim, highlighting their precision.*

## 5. MAINTENANCE

### 5.1 Cleaning the Trimmer

The trimmer features an IPX5 waterproof design, allowing for easy cleaning.

1. Turn off the trimmer and detach the trimmer head.
2. Rinse the trimmer head and blades under running water to remove hair clippings.
3. Use the included cleaning brush to remove any stubborn hairs from the blades and inside the trimmer unit.
4. Allow all parts to air dry completely before reattaching the head or storing the trimmer.



*Image: The Brookstone Hair & Beard Trimmer Kit being rinsed under running water, demonstrating its IPX5 waterproof capability for easy cleaning.*

### 5.2 Lubricating Blades

For optimal performance and longevity, apply a small drop of lubricating oil to the blades after every few uses, or as needed. Turn the trimmer on for a few seconds to distribute the oil evenly.

## 6. TROUBLESHOOTING

If you encounter issues with your trimmer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer not turning on	Low battery; Not properly charged	Ensure the trimmer is fully charged. Check power adapter connection.
Poor trimming performance	Blades are dull or clogged with hair; Insufficient lubrication	Clean blades thoroughly. Apply lubricating oil. Consider blade replacement if dull.
Trimmer pulls hair	Blades are dull or not properly aligned; Trimmer speed too low	Clean and lubricate blades. Ensure trimmer head is securely attached. Use at full power.
Battery not charging	Charging base or adapter faulty; Poor connection	Verify the power adapter is correctly plugged into both the base and the outlet. Ensure the trimmer is seated correctly on the charging base.

## 7. SPECIFICATIONS

- **Product Dimensions:** 4.9 x 2.6 x 8.5 inches; 4.8 ounces
- **Power Source:** Rechargeable Battery (Corded & Cordless Use)
- **Blades:** Stainless Steel
- **Water Resistance:** IPX5 (Rinseable Head)
- **Manufacturer:** Sakar International
- **Model:** Hair & Beard Trimmer Kit
- **UPC:** 021331064523

## 8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Brookstone website. Keep your purchase receipt as proof of purchase for any warranty claims.

**Manufacturer:** Sakar International

**Website:** [www.brookstone.com](http://www.brookstone.com)