

My Arcade DGUNL-7157

My Arcade Sonic The Hedgehog Joystick Player Instruction Manual

Model: DGUNL-7157

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your My Arcade Sonic The Hedgehog Joystick Player. Please read this manual thoroughly before using the product to ensure a safe and enjoyable gaming experience.

PRODUCT OVERVIEW

The My Arcade Sonic The Hedgehog Joystick Player is a portable retro gaming console featuring classic SEGA titles. It offers an authentic arcade experience with a joystick and dedicated buttons.

Key Features:

- Officially licensed SEGA game console.
- High-resolution 3.5-inch full-color display.
- Includes *Sonic the Hedgehog* and *Sonic the Hedgehog 2*.
- 3.5mm headphone jack for private audio.
- Built-in speaker with volume control.
- Adjustable screen brightness.
- Powered by 4 AA batteries (not included) or USB-C cable (not included).

Components:

- Gaming Console Unit
- Joystick
- Action Buttons (A, B, C)
- Home Button
- Credit/Start Button
- Volume Control (+/-)

- Brightness Control
- 3.5mm Headphone Jack
- USB-C Power Input (5V IN)
- Battery Compartment (requires 4 AA batteries)



The My Arcade Sonic The Hedgehog Joystick Player, a portable retro gaming console.

SETUP

Powering the Console:

1. **Battery Installation:** Locate the battery compartment on the back of the console. Insert 4 AA batteries (not included), ensuring correct polarity.
2. **USB-C Power (Optional):** Alternatively, connect a USB-C cable (not included) to the 5V IN port on

the back of the console to power it.

Initial Use:

- Peel off the protective screen sticker before use.
- Turn on the console using the power switch located on the back.



Rear view of the console, highlighting the battery compartment, USB-C port, and headphone jack.

OPERATING INSTRUCTIONS

Game Selection and Start:

1. Once powered on, use the joystick to navigate and select your desired game (*Sonic the Hedgehog* or *Sonic the Hedgehog 2*) from the main menu.
2. Press the **START/CREDIT** button to add virtual coins and begin the game.
3. To skip the Sonic demo mode, press the **START/CREDIT** button.

Controls:

- **Joystick:** Controls character movement.
- **Action Buttons (A, B, C):** Perform in-game actions such as jumping or attacking.

- **Volume Control (+/-):** Adjust the sound level of the built-in speaker using the buttons on the back of the console.
- **Screen Brightness:** Adjust the screen brightness using the dedicated button on the back.
- **Headphone Jack:** For private listening, connect 3.5mm headphones to the headphone jack on the back.



Front view of the console, showing the joystick, action buttons, and screen during gameplay.

Official video demonstrating the My Arcade Sonic Arcade Game in action, showcasing gameplay and features.

MAINTENANCE

To ensure the longevity of your My Arcade Sonic The Hedgehog Joystick Player, follow these simple maintenance guidelines:

- Keep the console clean by wiping it with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Store the console in a cool, dry place away from direct sunlight and extreme temperatures.
- If not in use for an extended period, remove the AA batteries to prevent leakage.

TROUBLESHOOTING

If you encounter any issues with your My Arcade Sonic The Hedgehog Joystick Player, refer to the following common solutions:

- **Console does not power on:** Ensure that fresh AA batteries are correctly installed or that the USB-C cable is securely connected to a power source.
- **Game does not start from demo mode:** Press the **START/CREDIT** button to exit demo mode and begin gameplay.
- **No sound:** Check the volume control buttons on the back of the console. If headphones are connected, ensure they are fully plugged in and functioning correctly.
- **Screen is dim:** Adjust the screen brightness using the dedicated button on the back of the console.

If problems persist, please contact My Arcade customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	4"L x 6.8"W x 7.6"H
Controller Type	Joystick
Item Weight	0.63 Kilograms (1.39 pounds)
Screen Size	3.5 Inches
Power Source	4 AA batteries (not included) or USB Type C (not included)
Hardware Interface	USB Type C
Display Type	LCD
Material	Plastic
Memory Storage Capacity	4 MB
Model Number	DGUNL-7157
UPC	845620071579

SAFETY INFORMATION

- Not suitable for children under 3 years old due to small parts.
- Always supervise young children during use.
- Do not expose the console to water or excessive moisture.
- Avoid dropping or subjecting the console to strong impacts.
- Use only recommended battery types and ensure correct installation.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official My Arcade website or contact their customer service department. Keep your purchase receipt as proof of purchase.

