

[manuals.plus](#) /

› [memzuoix](#) /

› [memzuoix 7-inch 2025 Upgrade Disco Ball Party Light with Remote Control Instruction Manual](#)

memzuoix L-T03

memzuoix 7-inch 2025 Upgrade Disco Ball Party Light Instruction Manual

Model: L-T03

1. INTRODUCTION

Thank you for choosing the memzuoix 7-inch 2025 Upgrade Disco Ball Party Light. This manual provides essential information for the safe and effective operation of your new device. Please read these instructions carefully before use and retain them for future reference.



Image 1: The memzuoix 7-inch 2025 Upgrade Disco Ball Party Light, showcasing its multi-faceted dome, base, power cord, and included remote control.

2. PACKAGE CONTENTS

Upon opening your package, please verify that all items listed below are present and in good condition:

- 1 x memzuoix 7-inch Disco Ball Party Light
- 1 x Remote Control (with pre-installed button battery and 1 spare battery)
- 1 x User Manual (this document)
- 4 x Mounting Screws

Packing includes



Image 2: All components included in the memzuoix disco ball light package, laid out for inspection.

3. SETUP INSTRUCTIONS

The memzuoix Disco Ball Party Light is designed for simple plug-and-play functionality. Follow these steps for quick setup:

- 1. Placement:** Choose a suitable location for your disco ball. It can be placed directly on a table, desk, or floor. For enhanced lighting effects, you can fix it to a wall or ceiling using the provided mounting screws. Ensure the surface is stable and can support the device.
- 2. Power Connection:** Plug the power cord into a standard 110V electrical outlet. The device is now ready for operation.
- 3. Remote Control:** The remote control comes with a pre-installed button battery. Remove any plastic tab protecting the battery before first use. A spare battery is also included for your convenience.

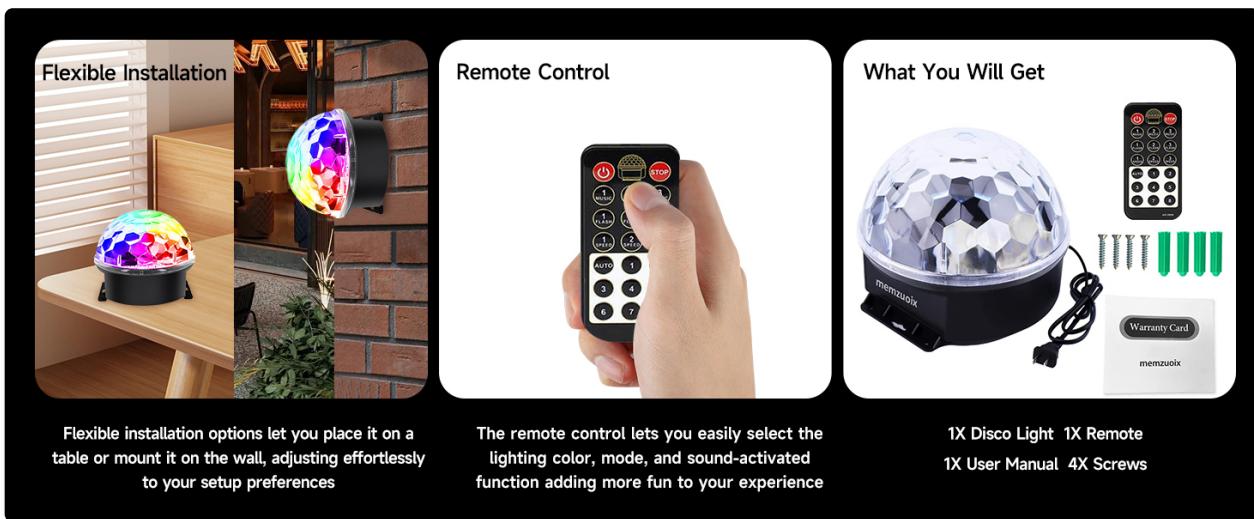


Image 3: Visual guide illustrating various installation methods for the disco ball light, including placement on a table and mounting on a wall.

4. OPERATING INSTRUCTIONS

The disco ball offers multiple lighting modes and control options via the included remote control.

4.1 Remote Control Functions

The remote control allows you to manage various functions from a distance:

- **Power On/Off:** Turn the light on or off.
- **Lighting Modes:** Switch between 6 distinct lighting modes.
- **Sound-Activated Modes:** Activate one of 3 voice control modes where lights react to music and sounds.
- **Strobe Flash Modes:** Select from 3 strobe flash settings.
- **Motor Rotation Speed:** Adjust the rotation speed of the disco ball with 3 available settings.

Sound Activated and Remote Controlled

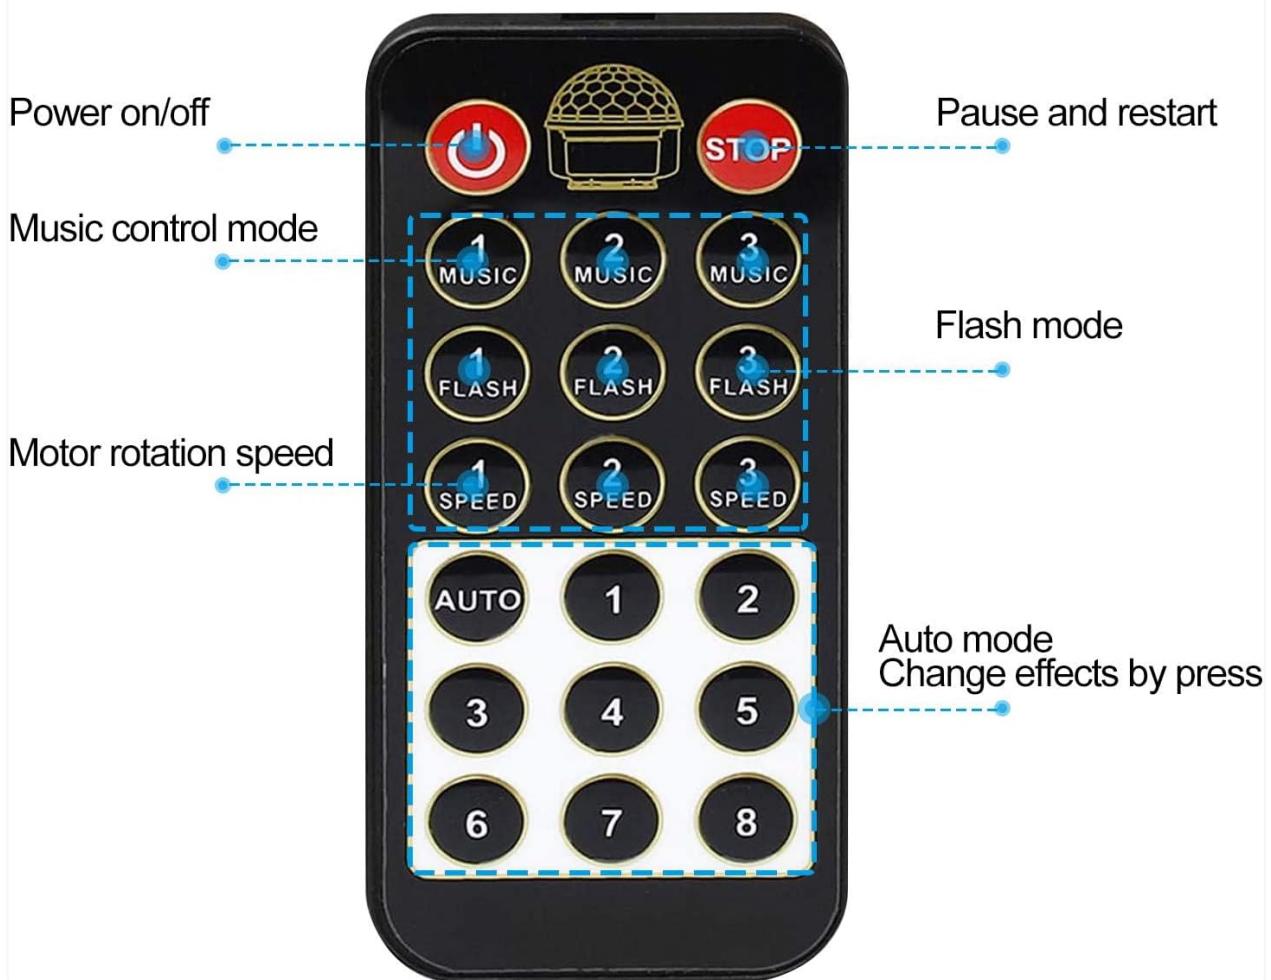


Image 4: The remote control with clearly labeled buttons for various light and motion settings.

4.2 Color Change Modes

The disco light features 6 primary colors (Red, Green, Blue, White, Orange, Pink) and various combinations:

- '1': Red & Yellow combination.
- '2': Green & Purple combination.
- '3': Blue & White combination.
- '4' - '7': Multicolor cycling and changing patterns.
- '8': Multicolor cycling with strobe lights.

4.3 Sound Activation

The built-in voice-activated sensor allows the disco ball light to react dynamically to music and other sounds. This feature is ideal for parties, karaoke, DJ sets, and other entertainment venues, creating an immersive light show synchronized with audio.



Image 5: The disco ball light demonstrating its sound-activated feature, with lights moving in response to music.

5. MAINTENANCE

To ensure the longevity and optimal performance of your disco ball light, follow these simple maintenance guidelines:

- **Cleaning:** Gently wipe the exterior of the disco ball with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the surface.
- **Storage:** When not in use, store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Power Disconnection:** Always unplug the device from the power outlet before cleaning or when not in use for extended periods.

6. TROUBLESHOOTING

If you encounter any issues with your memzuoix Disco Ball Party Light, please refer to the following common troubleshooting tips:

- **Light Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the remote control battery needs replacement.
- **Remote Not Responding:** Verify that the remote control battery is correctly inserted and has sufficient power. Ensure there are no obstructions between the remote and the disco ball's sensor.
- **Sound Activation Not Working:** Make sure the sound-activated mode is selected on the remote. Ensure there is sufficient audio input for the sensor to detect.

For any issues not covered here, or if problems persist, please contact customer support.

7. SPECIFICATIONS


Feature	Detail
Brand	memzuoix
Model Number	L-T03

Color	Black
Shape	Round
Material	Plastic
Light Source Type	Light Emitting Diode
Power Source	Corded Electric
Voltage	110 Volts
Mounting Type	Floor Mount and Ceiling Mount
Bulb Features	Sound Activated, RGB, Multiple Lighting Modes
Number of Light Sources	6
Product Dimensions	7" L x 7" W x 5.9" H
Item Weight	1.01 pounds
Included Components	Remote

8. WARRANTY AND SUPPORT

memzuoix is committed to providing high-quality products and customer satisfaction. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims. If you have any questions, require technical assistance, or need further support regarding your Disco Ball Party Light, please do not hesitate to contact our customer support team. We are ready to assist you.

Related Documents - L-T03

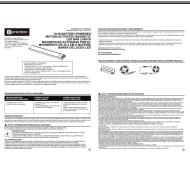	<p>Memzuoix WM-2017 Wireless Mouse User Manual and Warranty Information</p> <p>Official user manual and warranty card for the Memzuoix WM-2017 wireless mouse. Includes setup instructions, features, product specifications, and FCC compliance details.</p>
	<p>Utilitech L-1103-B-001 10-Inch Motion-Activated Magnetic LED Bar Lights Quick Start Guide</p> <p>Get started with your Utilitech 10-inch battery-powered motion-activated magnetic LED bar lights (Model L-1103-B-001). This guide provides installation, operation, troubleshooting, and safety information.</p>
	<p>Tough Duck Size Chart and Measurement Guide</p> <p>Find your perfect fit with the Tough Duck size chart. This guide provides detailed measurements for men's and women's apparel, including jackets, pants, shirts, overalls, headwear, and gloves, along with how-to-measure instructions.</p>



 
[Serendipity Latex Sizing Chart for Women](#)

A comprehensive sizing chart for Serendipity Latex products, detailing measurements for neck, bust, underbust, bicep, wrist, waist, hip, thigh, knee, calf, and ankle in both inches and centimeters across various sizes from XS to 2XL.



[L.O.L. Surprise! Mega Ball Magic: Instructions and Safety Guide](#)

Official instructions and safety information for L.O.L. Surprise! Mega Ball Magic toy. Learn how to play with sand, bubbles, gel, and smash features. Includes warnings and tips.



[PROLIGHTS Stark Bar1000 User Manual: 18x40W Moving LED Batten](#)

Comprehensive user manual for the PROLIGHTS Stark Bar1000, detailing its features, installation, operation, DMX control, maintenance, and troubleshooting for professional lighting applications.