

[Manuals.plus](#) /

› [TOMASHI](#) /

› TOMASHI CD Player Model CD-67 Instruction Manual

TOMASHI CD-67

TOMASHI CD Player Model CD-67 Instruction Manual

Brand: TOMASHI | Model: CD-67

1. INTRODUCTION

Thank you for choosing the TOMASHI CD Player Model CD-67. This portable CD player combines retro aesthetics with modern functionality, offering multiple playback options and high-fidelity sound. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and enjoyment of your device.

2. PACKAGE CONTENTS

Please check the box for the following items:

- TOMASHI CD Player (Model CD-67)
- User Manual
- Remote Control
- USB Type-C Charging Cable
- AUX Cable

3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your TOMASHI CD Player.

Independent enclosed cavity design with dual stereo speakers

Experience a hi-fi level of sound quality even with a CD player



Figure 3.1: Independent enclosed cavity design with dual stereo speakers for high-fidelity sound.

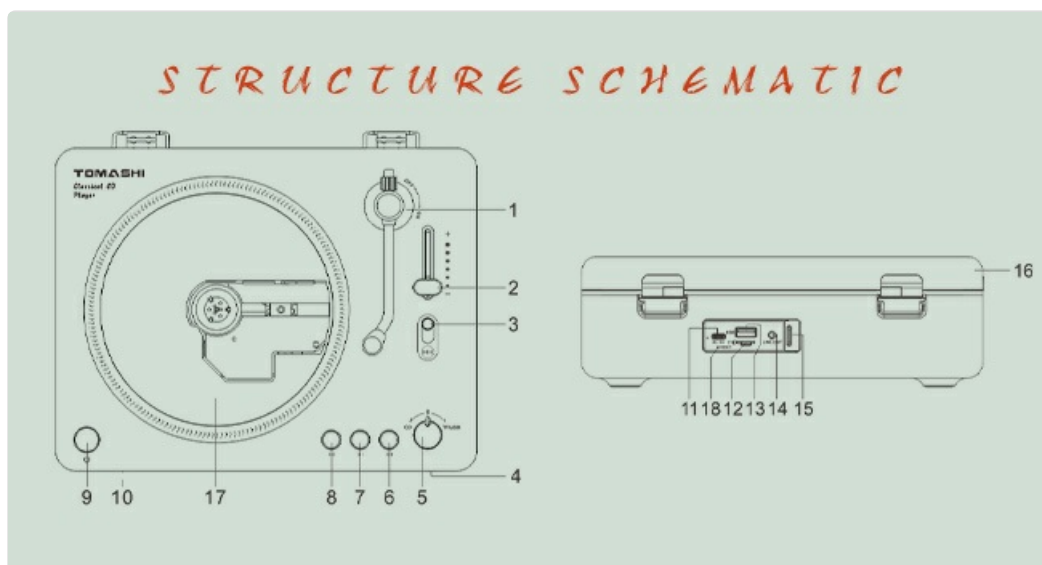


Figure 3.2: Top and side view of the CD player with numbered components.

1: CD Playback Switch	10:LCD Display
2: Music knob	11:DC 5V Power Socket
3: Bluetooth button	12:TF Card Slot
4: Remote control receiving location	13:USB Slot
5: Function CD/Bluetooth/TF/USB	14:AUX IN
6:Next Track (Short Press) / Fast Forward (Long Press)	15:Function cover
7:Pause/Play (Short Press) Stop (Long Press)	16:CD cover
8:Previous Track (Short Press) Rewind (Long Press)	17:CD Compartment
9:Power On/Off Button	18:RESET

Figure 3.3: Key to numbered components on the CD player.

- **1: CD Playback Switch:** Activates CD playback.
- **2: Music Knob:** Adjusts volume.
- **3: Bluetooth Button:** Initiates Bluetooth pairing.
- **4: Remote Control Receiving Location:** Infrared receiver for remote commands.
- **5: Function Button:** Toggles between CD, Bluetooth, TF, and USB modes.
- **6: Next Track / Fast Forward:** Short press for next track, long press for fast forward.
- **7: Pause/Play / Stop:** Short press to pause/play, long press to stop.
- **8: Previous Track / Rewind:** Short press for previous track, long press for rewind.
- **9: Power On/Off Button:** Turns the device on or off.
- **10: LCD Display:** Shows track information, time, and mode.
- **11: DC 5V Power Socket:** For charging the device.
- **12: TF Card Slot:** Insert TF card for music playback.
- **13: USB Slot:** Insert USB drive for music playback.
- **14: AUX IN:** Connect external audio sources via AUX cable.
- **15: Function Cover:** Protects ports.
- **16: CD Cover:** Protects the CD compartment.
- **17: CD Compartment:** Place CD here for playback.
- **18: RESET:** Resets the device if it malfunctions.

4. SETUP

Before first use, ensure the device is fully charged.

1. **Initial Charge:** Connect the USB Type-C charging cable to the DC 5V Power Socket (11) and a compatible USB power adapter (not included). Charge until the battery indicator on the LCD display (10) shows full. A full charge takes approximately 7 hours.
2. **Power On:** Slide the Power On/Off Button (9) to the 'On' position. The LCD display (10) will light up.
3. **Inserting a CD:** Gently open the CD Cover (16) and place a CD into the CD Compartment (17) with the label facing up. Close the CD Cover.

5. OPERATING INSTRUCTIONS

5.1 CD Playback

1. Ensure a CD is inserted (see Setup).
2. Press the Function Button (5) until 'CD' mode is displayed on the LCD.
3. The CD will begin playing automatically. If not, press the Pause/Play Button (7).
4. Adjust volume using the Music Knob (2) or the remote control.
5. To skip tracks, short press the Next Track (6) or Previous Track (8) buttons.
6. To fast forward/rewind, long press the Next Track (6) or Previous Track (8) buttons.
7. To pause/resume playback, short press the Pause/Play Button (7).
8. To stop playback, long press the Pause/Play Button (7).

5.2 Bluetooth Playback (Transmitter & Receiver)



Figure 5.1: Bluetooth connectivity allows pairing with mobile phones, speakers, and headphones.

Bluetooth Receiver Mode (Play music from phone/iPad on CD Player)

1. Press the Function Button (5) until 'BT' mode is displayed on the LCD. The device will enter pairing mode.
2. On your mobile device, search for 'TOMASHI CD-67' in the Bluetooth settings and pair.
3. Once connected, music played on your mobile device will output through the CD player's speakers.

Bluetooth Transmitter Mode (Play CD music on Bluetooth headphones/speakers)

1. Ensure the CD player is in CD playback mode.
2. Activate pairing mode on your Bluetooth headphones or speaker.
3. Long press the Bluetooth Button (3) on the CD player. The device will search for nearby Bluetooth devices.
4. Once connected, CD audio will transmit to your paired Bluetooth headphones/speaker.

5.3 USB & TF Card Playback

1. Insert a USB drive into the USB Slot (13) or a TF card into the TF Card Slot (12).
2. Press the Function Button (5) until 'USB' or 'TF' mode is displayed.
3. The device will automatically detect and play compatible audio files (MP3, WMA).
4. Use the Next Track (6) and Previous Track (8) buttons to navigate.

5.4 AUX Input

1. Connect an external audio device (e.g., smartphone, MP3 player) to the AUX IN port (14) using the provided AUX cable.
2. Press the Function Button (5) until 'AUX' mode is displayed.
3. Audio from your external device will now play through the CD player's speakers. Control playback from your external device.

5.5 Headphone Output

Connect wired headphones to the headphone jack (located near AUX IN port 14) for private listening. Note: The product description indicates that when headphones are connected, the internal speakers may continue to operate. This is a 'line out' jack, not an 'aux in' jack that mutes speakers.

5.6 Remote Control

The included remote control allows for convenient operation of all playback functions, volume adjustment, and mode selection from a distance. Point the remote towards the Remote Control Receiving Location (4).

6. CHARGING AND BATTERY

The CD player is equipped with a built-in 1200 mAh rechargeable battery.

- **Battery Life:** Provides up to 8 hours of continuous playback on a full charge.
- **Charging Time:** Approximately 7 hours for a full charge via the Type-C port.
- **Charging Indicator:** The LCD display will show charging status.
- **Use While Charging:** The device supports operation while being charged.

Equipped with a built-in lithium battery, it can support continuous

playback at medium volume for 6-8 hours when fully charged
The TYPE-C charging interface makes charging more convenient



Figure 6.1: The CD player is equipped with a built-in lithium battery for extended playback.

7. SPECIFICATIONS

Product Specification

power supply:
Rated Power:5W
Built-in Lithium Battery: 3.6V
CD Playback Frequency Response: 50Hz-20kHz
Speaker Specifications:
Output Power: 1W+1W
Supported Formats: CD/CD-R/CD-RW/WMA/MP3
Machine size: 10.12 inches * 8.11 inches * 3.27 inches
Weight: 1.04KG/2.29 pounds

Caution

Built-in lithium battery, do not disassemble by yourself
If the device fails to power on, please use a fine-pointed object to press and hold the RESET button (18) to reset

Figure 7.1: Detailed product specifications and caution information.

Feature	Detail
Model Name	CD-67
Brand	TOMASHI
Product Dimensions	10.12 x 8.11 x 3.27 inches
Item Weight	2.29 pounds (1.04 Kilograms)
Power Supply	Rated Power: 5W, Built-in Lithium Battery: 3.6V
CD Playback Frequency Response	50Hz-20kHz
Speaker Specifications	Output Power: 1W+1W
Supported Formats	CD/CD-R/CD-RW/WMA/MP3
Special Feature	Portable
Material	Plastic
Style	Retro
Color	White
Compatible Devices	Laptop, MP3 Player, Personal Computer, Smartphone, Speaker, Tablet

8. TROUBLESHOOTING

If you encounter any issues with your CD player, please refer to the following common solutions:

- **Device fails to power on:** Ensure the device is charged. If the issue persists, use a fine-pointed object to press and hold the RESET button (18) to reset the device.
- **No sound:** Check the volume level. Ensure the correct playback mode (CD, Bluetooth, USB, TF, AUX) is selected. If using headphones, note that internal speakers may not mute.
- **CD skipping or not playing:** Ensure the CD is clean and free of scratches. Make sure the CD is inserted correctly.
- **Bluetooth pairing issues:** Ensure the CD player is in Bluetooth pairing mode and your external device is discoverable. Try restarting both devices.
- **USB/TF card not recognized:** Ensure the card/drive is inserted correctly and contains compatible audio formats (MP3, WMA).

9. MAINTENANCE

To ensure the longevity and optimal performance of your CD player, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners or abrasive materials.
- **CD Care:** Handle CDs by the edges to avoid fingerprints and scratches. Store CDs in their cases when not in use.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** The built-in lithium battery should not be disassembled by yourself.

10. WARRANTY AND SUPPORT

The TOMASHI Portable CD Player comes with a 12-month worry-free after-sales service. If you encounter any issues with your device, please contact our customer support team for quick and efficient resolution.

11. PRODUCT VIDEOS

Watch these official product videos for a visual guide to the TOMASHI CD Player's features and operation.

Your browser does not support the video tag.

Video 11.1: Multi-Function CD Players for Home. This video demonstrates the various functions of the CD player in a home setting.

Your browser does not support the video tag.

Video 11.2: YRQ146 CD Player for multiple use. This video highlights the versatility of the CD player for different usage scenarios.