

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Luoran](#) /
- › [User Manual for Luoran MP3 Player for Kids with Spotify, Model M4S](#)

## Luoran M4S

# Luoran MP3 Player for Kids

## MODEL M4S USER MANUAL

Brand: Luoran

## Introduction

---

Welcome to the user manual for your new Luoran M4S MP3 Player. This device is designed specifically for kids and teenagers, offering a safe and engaging music experience with advanced parental controls. It features a 4.0-inch IPS display, runs on Android 9.0, and supports a wide range of audio and video formats. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your device.



Image: The Luoran M4S MP3 Player, highlighting its sleek design and user interface.

## What's in the Box

---

Upon unboxing your Luoran M4S MP3 Player, please ensure all the following components are present:

- Luoran M4S MP3 Player
- USB-C cable (for charging and data transfer)
- Wired earphones
- Silicone Case
- Instruction Manual (this document)



Image: The retail packaging for the Luoran M4S MP3 Player.

---

## Product Features

### Parental Controls

The M4S features a robust parental control system. Parents can block and unblock applications, approve new app installations, and set automatic ON/OFF times to manage screen time. It is crucial to remember any PIN codes set for parental controls.

# Parental Controls

Block & unblock apps, installation control, set auto ON/OFF timer



Image: The Parental Controls interface on the Luoran M4S, demonstrating app management.

## Music Player with Pre-installed Apps

The M4S comes with popular apps like Spotify Kids, Spotify, Amazon Music, Audible, Pandora, Libby, and HiBy Music pre-installed. It supports a wide array of music formats including MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA, and MP2. Music can be organized and played by title, folder, artist, or album.

# Supports music formats including

MP3,WAV,FLAC,APE,OGG,M4A,AAC,WMA,MP2,ETC.



**Sequential Play**



**Loop Single**



**List Loop**



**Shuffle All**

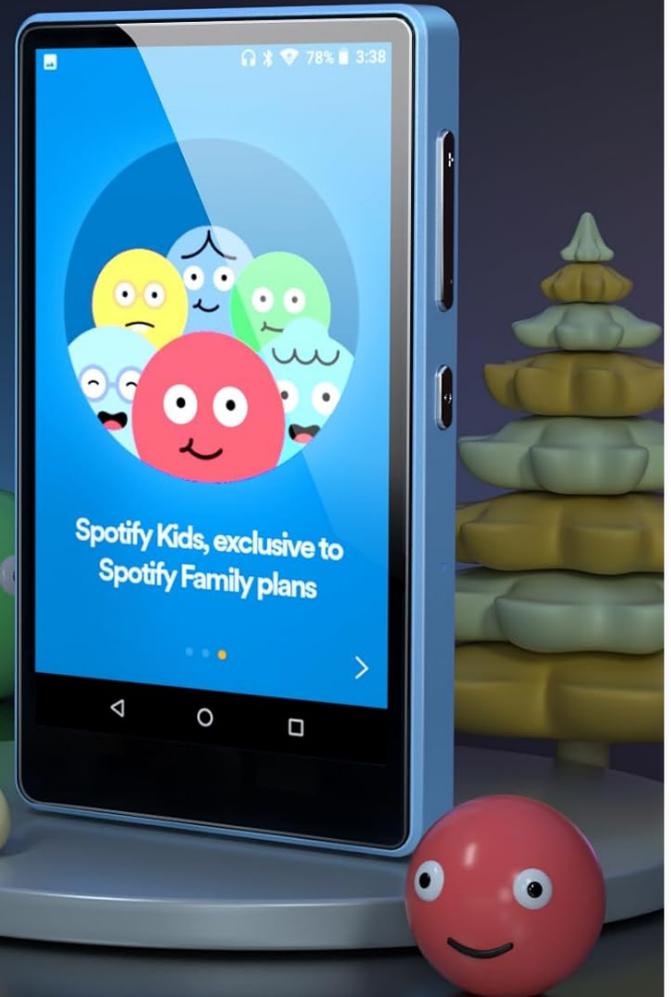


Image: The Luoran M4S displaying the Spotify Kids app, illustrating its compatibility with various audio formats.

## **Bluetooth and WiFi Connectivity**

Equipped with both Bluetooth and WiFi, the device ensures seamless connectivity with headphones, speakers, and car stereos. It offers fast pairing and stable connections for both online and offline music enjoyment.

# Upgraded Bluetooth 5.0

Compatible with bluetooth headphone earbud, speakers, home theater and car systems.



Image: The Luoran M4S demonstrating its Bluetooth connectivity with various audio devices.

## Powered by Android 9.0

The M4S operates on an upgraded Android 9.0 system, providing faster performance, enhanced app compatibility, and a smoother user experience. This ensures support for the latest applications.

## Expandable Memory

With 16GB of internal storage, the player also includes a memory card slot that supports external memory expansion up to 512GB. This allows for extensive storage of music, audiobooks, and videos.

# Expandable Memory

Inbuilt 16GB, supports maximum 512GB micro SD card



Image: The Luoran M4S showing its expandable memory slot, capable of supporting up to 512GB via a micro SD card.

## Long Battery Life and Portability

The built-in 2000mAh battery provides up to 50 hours of continuous music playback on a 2-hour charge via its USB-C port. Its lightweight and portable design make it ideal for travel, exercise, and on-the-go use.

## Durable Design

The M4S features a metal frame and a tempered glass back, ensuring durability. It boasts a 4.0-inch IPS display with full touchscreen functionality for easy navigation.

# Metal Frame & Tempered Glass Back

4.0

IPS display with full touchscreen

inch

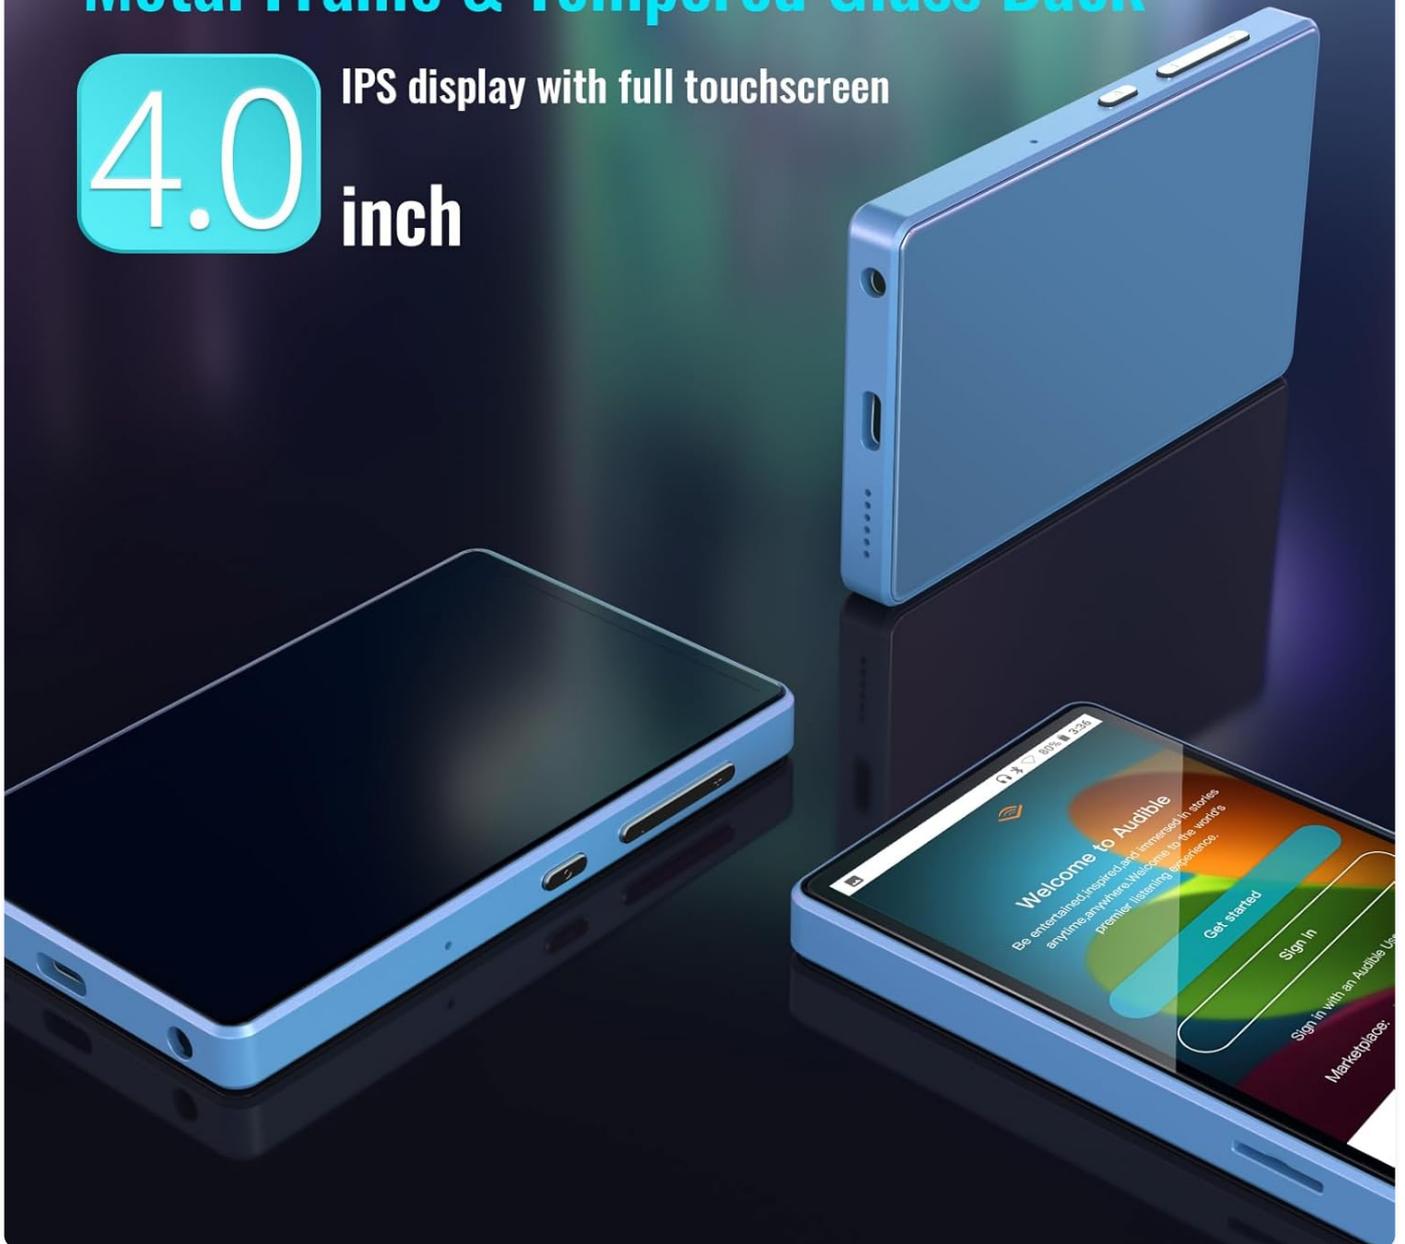


Image: A detailed view of the Luoran M4S, showcasing its metal frame, tempered glass back, and 4.0-inch IPS touchscreen.

## Setup Guide

### 1. Initial Charging

Before first use, fully charge the device using the provided USB-C cable and a compatible power adapter (not included). The charging indicator will show progress and turn off when fully charged.

### 2. Powering On/Off

To power on, press and hold the power button on the side until the screen lights up. To power off, press and hold the power button, then select "Power off" from the options.

### 3. Connecting to Wi-Fi

Navigate to **Settings** > **Network & Internet** > **Wi-Fi**. Turn on Wi-Fi, select your network, and enter the password if prompted.

## 4. Setting Up Parental Controls

Access the "Parental Man." app from the home screen. Here you can set a PIN, manage application access, and configure auto ON/OFF times. **Important: Please write down and remember your PIN code. Forgetting it will prevent access to certain features and may require contacting customer support for assistance.**

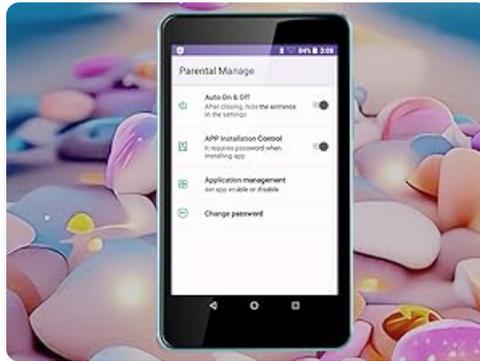


Image: The Parental Management settings screen, showing options for auto on/off, app installation control, and application management.

## Operating Instructions

---

### 1. Navigating the Interface

The device features a touchscreen display. Swipe left or right to navigate between home screens. Tap on app icons to open them. Use the back arrow at the bottom of the screen to go back, and the home button to return to the main screen.

### 2. Playing Music

Open the "Music" app or any pre-installed music streaming app (e.g., Spotify, Amazon Music). You can browse music by title, artist, album, or folder. Connect wired earphones to the 3.5mm jack or pair Bluetooth headphones/speakers.

### 3. Using Pre-installed Apps

Tap on the icons for Spotify, Spotify Kids, Audible, Amazon Music, Pandora, Libby, or HiBy Music to launch them. Follow the on-screen prompts to log in or set up accounts as required by each application.

### 4. Bluetooth Pairing

Go to **Settings > Connected devices > Pair new device**. Ensure your Bluetooth headphones or speaker are in pairing mode. Select your device from the list to connect.

### 5. Transferring Files

Connect the MP3 player to a computer using the USB-C cable. On the device, pull down the notification shade and tap on the USB connection notification. Select "File transfer" or "MTP" mode. You can then drag and drop music, video, or e-book files to the device's internal storage or inserted microSD card.

## Maintenance

---

### • Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the player. For stubborn smudges, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.

### • Battery Care

To prolong battery life, avoid exposing the device to extreme temperatures. It is recommended to fully charge the device before long periods of inactivity. Do not attempt to replace the battery yourself.

## • Software Updates

Periodically check for system updates in **Settings > System > System update** to ensure optimal performance and access to the latest features and security patches.

## Troubleshooting

If you encounter issues with your Luoran M4S MP3 Player, please refer to the common solutions below. If the problem persists, contact customer support.

Problem	Possible Cause / Solution
Device won't turn on	Battery might be depleted. Connect to charger for at least 10 minutes. If still unresponsive, perform a forced restart (refer to device-specific instructions or contact support).
Cannot connect to Wi-Fi	Ensure Wi-Fi is enabled on the device and the password is correct. Restart the device and your Wi-Fi router.
Spotify/other app not working or crashing	Clear the app's cache: Go to <b>Settings &gt; Apps &amp; notifications &gt; [App Name] &gt; Storage &amp; cache &gt; Clear cache</b> . Ensure the device has sufficient free storage. Check for app updates.
Forgotten Parental Control PIN	If you have forgotten your PIN, you will need to contact Luoran customer support for assistance. They will guide you through the recovery process.
Device is slow or lagging	Close unused background applications. Clear app caches. Restart the device. Ensure there is enough free storage space.
Cannot transfer files to computer	Ensure the USB-C cable is properly connected and you have selected "File transfer" (MTP) mode on the device after connecting. Try a different USB port or cable.

## Specifications

Feature	Detail
Model Name	M4S
Product Dimensions	4.23 x 2.36 x 0.39 inches
Item Weight	4.9 ounces
Screen Size	4.0 Inches
Operating System	Android 9.0
Internal Storage	16 GB
Expandable Memory	Up to 512GB (via microSD card)
Connectivity Technology	Bluetooth, Wi-Fi
Battery Capacity	2000mAh
Charging Port	USB-C

Feature	Detail
Supported Audio Formats	MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA, MP2, etc.
Color	Blue

## Warranty and Support

---

Luoran stands behind its products. If you experience any issues or have questions regarding your M4S MP3 Player, our support team is available to assist you.

- For support, please refer to the contact information provided with your purchase or visit the official Luoran store on Amazon.
- Remember to keep your PIN codes for parental controls safe. In case of forgotten PINs or other issues, the Luoran support team is available 24-hour standby to help.
- For more information about Luoran products, visit the [Luoran Brand Store](#).