



Manuals.plus /

› foxotin /

› foxotin T16 Wireless Earbuds Instruction Manual

foxotin T16

foxotin T16 Wireless Earbuds Instruction Manual

Model: T16

1. INTRODUCTION

Thank you for purchasing the foxotin T16 Wireless Earbuds. This manual provides essential information for setting up, operating, and maintaining your new earbuds. Please read it carefully before use and retain it for future reference.



Image 1: foxotin T16 Wireless Earbuds in their charging case. The earbuds are black with metallic accents, and the charging case features an LED display showing battery levels for both earbuds and the case.

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- Wireless Earbuds x 2 (Left and Right)
- Wireless Charging Case x 1
- Type-C Charging Cable x 1
- Eartips (S / M / L) x 3 sets
- Instruction Manual x 1



Image 2: The package contents laid out, including the earbuds, charging case, Type-C cable, three sizes of eartips, and the instruction manual.

3. PRODUCT OVERVIEW

The foxotin T16 Wireless Earbuds are designed for comfort and high-quality audio. Key features include:

- **Bluetooth 5.3:** Ensures stable and efficient wireless connection.
- **Extended Playback:** Up to 48 hours with the charging case.
- **LED Display:** Shows battery status of both earbuds and the charging case.
- **Touch Controls:** Intuitive control for music playback, calls, and volume.
- **Integrated Microphone:** For clear hands-free communication.
- **Ergonomic Design:** Comfortable and secure fit for various activities.
- **IPX7 Waterproof:** Resistant to sweat and rain.

HIFI
AUDIO
WIRELESS

Bluetooth
5.3

高く原音に忠実で粒度の高い音質を再現!



Bluetooth
5.3



48時間
再生可能



自動ペアリング



LED
ディスプレイ



タッチボタン



マイク付き

Image 3: A person wearing the foxotin T16 earbuds, illustrating their use. Icons around the image highlight features such as Bluetooth 5.3, 48-hour playback, automatic pairing, LED display, touch controls, and an integrated microphone.

4. SETUP

4.1. Initial Charging

Before first use, fully charge the earbuds and the charging case.

1. Place both earbuds into the charging case.
2. Connect the Type-C charging cable to the charging port on the case and a power source.
3. The LED display on the case will show the charging status. A full charge typically takes approximately 1.5 hours.



Image 4: A close-up view of the charging case's LED display, showing digital battery percentages for the case and individual battery bars for the left and right earbuds.

4.2. Pairing with a Device

The earbuds support one-step automatic pairing after the initial setup.

1. Open the charging case. The earbuds will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for available Bluetooth devices and select "T16" from the list.
4. Once connected, you will hear an audio prompt, and the device will show "Connected."

For subsequent use, simply open the charging case and take out the earbuds; they will automatically connect to the last paired device.

ワンステップ接続、簡単操作

イヤホンを充電ケースから取り出すと、自動的に接続可能



Image 5: A visual guide demonstrating the one-step connection process. It shows a smartphone's Bluetooth settings screen with "T16" selected and the earbuds connecting automatically when removed from the case.

5. OPERATING INSTRUCTIONS

The foxotin T16 earbuds feature intuitive touch controls on each earbud.

5.1. Music Playback

- **Play/Pause:** Single tap on either earbud.

- **Next Track:** Double tap the right earbud.
- **Previous Track:** Double tap the left earbud.
- **Volume Up:** Triple tap the right earbud.
- **Volume Down:** Triple tap the left earbud.

5.2. Call Management

- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.

5.3. Voice Assistant

- **Activate Voice Assistant:** Press and hold either earbud for 3 seconds.

プロ仕様の高性能タッチボタン

音楽の再生・一時停止や通話の応答
が簡単に行え、手軽に操作できる



一時停止/
音楽再生



音量上げる



音量下げる



着信応答/
終了



曲送り



曲戻り

Image 6: A visual representation of the touch control functions on the earbuds, showing icons for play/pause, volume up/down, next/previous track, and call answer/end/reject.

6. MAINTENANCE

6.1. Cleaning

Regular cleaning helps maintain optimal performance and hygiene.

- Use a soft, dry, lint-free cloth to wipe the earbuds and charging case.

- For eartips, remove them from the earbuds and clean with a mild soap solution if necessary, then rinse thoroughly and dry completely before reattaching.
- Avoid using abrasive materials, alcohol, or chemical cleaners.

6.2. Storage

When not in use, store the earbuds in their charging case to protect them and ensure they remain charged.

6.3. Battery Care

To prolong battery life, avoid fully discharging the earbuds and charging case frequently. Charge them regularly, even if not used for extended periods.

7. TROUBLESHOOTING

If you encounter issues, try the following solutions:

Problem	Solution
Earbuds not pairing	<ul style="list-style-type: none"> • Ensure earbuds are charged. • Turn off and on your device's Bluetooth. • Forget "T16" from your device's Bluetooth list and re-pair. • Place earbuds back in case, close, then open again to reset.
Only one earbud working	<ul style="list-style-type: none"> • Ensure both earbuds are charged. • Place both earbuds in the charging case, close the lid for 5 seconds, then open and take them out. • If the issue persists, try resetting the earbuds (refer to the full manual for specific reset procedures if available).
Low volume or poor sound quality	<ul style="list-style-type: none"> • Adjust volume on both your device and the earbuds. • Ensure eartips are clean and properly seated in your ears. Try different eartip sizes for a better seal. • Clean any debris from the earbud speakers.
Charging case not charging	<ul style="list-style-type: none"> • Check the Type-C cable and power adapter. Try a different cable or adapter. • Ensure the charging port is clean and free of debris.

8. SPECIFICATIONS

Feature	Detail
Model Name	T16
Connectivity Technology	Wireless (Bluetooth 5.3)
Headphone Form Factor	True Wireless In-Ear
Water Resistance Level	IPX7
Compatible Devices	Tablets, Laptops, Mobile Phones
Earbud Playtime	6-8 hours (single charge)
Total Playtime (with case)	Up to 48 hours
Charging Port	Type-C
Earbud Weight	Approx. 4.3g (per earbud)
Package Dimensions	9 x 9 x 3.1 cm
Package Weight	80 g

9. WARRANTY AND SUPPORT

foxotin products come with a warranty. If you encounter any issues or have questions regarding the use of your T16 Wireless Earbuds, please do not hesitate to contact our customer support team. We are committed to providing the best possible service and will assist you with any warranty-related inquiries.

To contact support, please refer to your purchase platform or the contact information provided with your product packaging. When contacting support, please have your order details readily available.